



Hewlett Packard  
Enterprise

# **HPE ProLiant WS460c Gen9 Graphics Server Blade**

## Maintenance and Service Guide

### **Abstract**

This guide describes identification and maintenance procedures, diagnostic tools, specifications and requirements for hardware components and software. This guide is for an experienced service technician. Hewlett Packard Enterprise assumes you are qualified in the servicing of computer equipment, trained in recognizing hazards in products, and are familiar with weight and stability precautions.

© Copyright 2015 Hewlett Packard Enterprise Development LP

The information contained herein is subject to change without notice. The only warranties for Hewlett Packard Enterprise products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. Hewlett Packard Enterprise shall not be liable for technical or editorial errors or omissions contained herein.

Links to third-party websites take you outside the Hewlett Packard Enterprise website. Hewlett Packard Enterprise has no control over and is not responsible for information outside the Hewlett Packard Enterprise website.

Microsoft® and Windows® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries.

NVIDIA® and NVIDIA® Quadro are trademarks and/or registered trademarks of NVIDIA Corporation in the U.S. and other countries.

microSD® is a trademark or registered trademark of SD-3C in the United States, other countries or both.

# Contents

Customer self repair .....	5
Parts only warranty service .....	5
Illustrated parts catalog.....	15
Graphics server blade components.....	15
Graphics expansion blade components .....	20
Removal and replacement procedures .....	24
Required tools .....	24
Safety considerations .....	24
Preventing electrostatic discharge .....	24
Server blade warnings and cautions .....	24
Symbols on equipment.....	25
Preparation procedures .....	25
Power down the graphics server blade .....	25
Remove the graphics blade.....	26
Remove the foam gasket.....	27
Remove the expansion blade PCIe card cage .....	28
Remove the expansion module front bezel .....	29
Remove the retaining block .....	29
Remove the expansion blade from the host side .....	30
Access panel (graphics server blade) .....	31
Expansion blade access panel.....	31
Expansion blade PCIe card cage .....	31
Drive blank .....	32
Drive .....	33
Enclosure connector cover.....	33
Mezzanine assembly.....	34
Mezzanine board options .....	35
Mezzanine options.....	35
PCIe mezzanine pass-through .....	37
PCIe mezzanine pass-through brackets.....	37
MXM graphics mezzanine module .....	39
MXM graphics mezzanine heatsink.....	40
PCIe graphics card options .....	42
Removing the PCIe graphics card options .....	42
Removing the NVIDIA Grid K1 and K2 I/O Plate.....	43
Graphics expansion control cable .....	48
FlexibleLOM .....	49
Storage controller .....	50
Heatsink blank.....	51
DIMM baffles .....	51
DIMMs .....	53
HPE Smart Storage Battery .....	53
Front panel/drive cage assembly .....	54
Drive backplane.....	55
System battery .....	56
Heatsink .....	57
Processor .....	59
System board .....	63
Server blade release lever assembly .....	68
HP Trusted Platform Module .....	72
Diagnostic tools .....	73
Product QuickSpecs.....	73

HPE iLO .....	73
Active Health System .....	74
HPE ProLiant Pre-boot Health Summary .....	74
Integrated Management Log .....	75
HPE UEFI System Utilities .....	75
Using UEFI System Utilities.....	75
Embedded Diagnostics option.....	76
Re-entering the server serial number and product ID .....	76
HPE Insight Diagnostics .....	76
HPE Insight Diagnostics survey functionality .....	77
HPE Insight Remote Support .....	77
USB support .....	77
External USB functionality .....	78
Internal USB functionality .....	78
HPE Smart Storage Administrator.....	78
Automatic Server Recovery.....	79
<b>Cabling .....</b>	<b>80</b>
Cabling resources .....	80
HPE Smart Storage Battery cabling .....	80
Direct connect SATA cabling.....	80
Using the HPE c-Class Blade SUV Cable.....	81
Connecting locally to a server blade with video and USB devices .....	81
Accessing a server blade with local KVM.....	81
Accessing local media devices.....	82
<b>Troubleshooting .....</b>	<b>84</b>
Troubleshooting resources .....	84
<b>Component identification .....</b>	<b>85</b>
Front panel components (graphics server blade).....	85
Front panel components (graphics server blade with expansion blade) .....	86
Front panel LEDs and buttons (graphics server blade).....	87
Front panel LEDs and buttons (graphics server blade with expansion blade) .....	88
Front panel LED power fault codes .....	88
Serial label pull tab information .....	89
Drive numbering .....	89
Hot-plug drive LED definitions .....	90
System board components.....	91
System maintenance switch.....	91
Mezzanine connector definitions .....	92
DIMM slot locations .....	92
DIMM identification .....	93
SUV cable connectors .....	94
<b>Specifications .....</b>	<b>95</b>
Environmental specifications.....	95
Server blade specifications .....	95
<b>Acronyms and abbreviations.....</b>	<b>96</b>
<b>Documentation feedback .....</b>	<b>99</b>
<b>Index.....</b>	<b>100</b>

# Customer self repair

Hewlett Packard Enterprise products are designed with many Customer Self Repair (CSR) parts to minimize repair time and allow for greater flexibility in performing defective parts replacement. If during the diagnosis period Hewlett Packard Enterprise (or Hewlett Packard Enterprise service providers or service partners) identifies that the repair can be accomplished by the use of a CSR part, Hewlett Packard Enterprise will ship that part directly to you for replacement. There are two categories of CSR parts:

- **Mandatory**—Parts for which customer self repair is mandatory. If you request Hewlett Packard Enterprise to replace these parts, you will be charged for the travel and labor costs of this service.
- **Optional**—Parts for which customer self repair is optional. These parts are also designed for customer self repair. If, however, you require that Hewlett Packard Enterprise replace them for you, there may or may not be additional charges, depending on the type of warranty service designated for your product.

**NOTE:** Some Hewlett Packard Enterprise parts are not designed for customer self repair. In order to satisfy the customer warranty, Hewlett Packard Enterprise requires that an authorized service provider replace the part. These parts are identified as "No" in the Illustrated Parts Catalog.

Based on availability and where geography permits, CSR parts will be shipped for next business day delivery. Same day or four-hour delivery may be offered at an additional charge where geography permits. If assistance is required, you can call the Hewlett Packard Enterprise Support Center and a technician will help you over the telephone. Hewlett Packard Enterprise specifies in the materials shipped with a replacement CSR part whether a defective part must be returned to Hewlett Packard Enterprise. In cases where it is required to return the defective part to Hewlett Packard Enterprise, you must ship the defective part back to Hewlett Packard Enterprise within a defined period of time, normally five (5) business days. The defective part must be returned with the associated documentation in the provided shipping material. Failure to return the defective part may result in Hewlett Packard Enterprise billing you for the replacement. With a customer self repair, Hewlett Packard Enterprise will pay all shipping and part return costs and determine the courier/carrier to be used.

For more information about the Hewlett Packard Enterprise CSR program, contact your local service provider. For the North American program, go to the Hewlett Packard Enterprise CSR website (<http://www.hpe.com/support/selfrepair>).

## Parts only warranty service

Your Hewlett Packard Enterprise Limited Warranty may include a parts only warranty service. Under the terms of parts only warranty service, Hewlett Packard Enterprise will provide replacement parts free of charge.

For parts only warranty service, CSR part replacement is mandatory. If you request Hewlett Packard Enterprise to replace these parts, you will be charged for the travel and labor costs of this service.

## Réparation par le client (CSR)

Les produits Hewlett Packard Enterprise comportent de nombreuses pièces CSR (Customer Self Repair = réparation par le client) afin de minimiser les délais de réparation et faciliter le remplacement des pièces défectueuses. Si pendant la période de diagnostic, Hewlett Packard Enterprise (ou ses

partenaires ou mainteneurs agréés) détermine que la réparation peut être effectuée à l'aide d'une pièce CSR, Hewlett Packard Enterprise vous l'envoie directement. Il existe deux catégories de pièces CSR :

- **Obligatoire**—Pièces pour lesquelles la réparation par le client est obligatoire. Si vous demandez à Hewlett Packard Enterprise de remplacer ces pièces, les coûts de déplacement et main d'œuvre du service vous seront facturés.
- **Facultatif**—Pièces pour lesquelles la réparation par le client est facultative. Ces pièces sont également conçues pour permettre au client d'effectuer lui-même la réparation. Toutefois, si vous demandez à Hewlett Packard Enterprise de remplacer ces pièces, l'intervention peut ou non vous être facturée, selon le type de garantie applicable à votre produit.

**REMARQUE:** Certaines pièces Hewlett Packard Enterprise ne sont pas conçues pour permettre au client d'effectuer lui-même la réparation. Pour que la garantie puisse s'appliquer, Hewlett Packard Enterprise exige que le remplacement de la pièce soit effectué par un Mainteneur Agréé. Ces pièces sont identifiées par la mention "Non" dans le Catalogue illustré.

Les pièces CSR sont livrées le jour ouvré suivant, dans la limite des stocks disponibles et selon votre situation géographique. Si votre situation géographique le permet et que vous demandez une livraison le jour même ou dans les 4 heures, celle-ci vous sera facturée. Pour toute assistance,appelez le Centre d'assistance Hewlett Packard Enterprise pour qu'un technicien vous aide au téléphone Dans les documents envoyés avec la pièce de rechange CSR, Hewlett Packard Enterprise précise s'il est nécessaire de lui retourner la pièce défectueuse. Si c'est le cas, vous devez le faire dans le délai indiqué, généralement cinq (5) jours ouvrés. La pièce et sa documentation doivent être retournées dans l'emballage fourni. Si vous ne retournez pas la pièce défectueuse, Hewlett Packard Enterprise se réserve le droit de vous facturer les coûts de remplacement. Dans le cas d'une pièce CSR, Hewlett Packard Enterprise supporte l'ensemble des frais d'expédition et de retour, et détermine la société de courses ou le transporteur à utiliser.

Pour plus d'informations sur le programme CSR de Hewlett Packard Enterprise, contactez votre Mainteneur Agréée local. Pour plus d'informations sur ce programme en Amérique du Nord, consultez le site Web Hewlett Packard Enterprise (<http://www.hpe.com/support/selfrepair>).

## Service de garantie "pièces seules"

Votre garantie limitée Hewlett Packard Enterprise peut inclure un service de garantie "pièces seules". Dans ce cas, les pièces de rechange fournies par Hewlett Packard Enterprise ne sont pas facturées.

Dans le cadre de ce service, la réparation des pièces CSR par le client est obligatoire. Si vous demandez à Hewlett Packard Enterprise de remplacer ces pièces, les coûts de déplacement et main d'œuvre du service vous seront facturés.

## Riparazione da parte del cliente

Per abbreviare i tempi di riparazione e garantire una maggiore flessibilità nella sostituzione di parti difettose, i prodotti Hewlett Packard Enterprise sono realizzati con numerosi componenti che possono essere riparati direttamente dal cliente (CSR, Customer Self Repair). Se in fase di diagnostica Hewlett Packard Enterprise (o un centro di servizi o di assistenza Hewlett Packard Enterprise) identifica il guasto come riparabile mediante un ricambio CSR, Hewlett Packard Enterprise lo spedirà direttamente al cliente per la sostituzione. Vi sono due categorie di parti CSR:

- **Obbligatorie**—Parti che devono essere necessariamente riparate dal cliente. Se il cliente ne affida la riparazione ad Hewlett Packard Enterprise, deve sostenere le spese di spedizione e di manodopera per il servizio.
- **Opzionali**—Parti la cui riparazione da parte del cliente è facoltativa. Si tratta comunque di componenti progettati per questo scopo. Se tuttavia il cliente ne richiede la sostituzione ad Hewlett

Packard Enterprise, potrebbe dover sostenere spese addizionali a seconda del tipo di garanzia previsto per il prodotto.

**NOTA:** alcuni componenti Hewlett Packard Enterprise non sono progettati per la riparazione da parte del cliente. Per rispettare la garanzia, Hewlett Packard Enterprise richiede che queste parti siano sostituite da un centro di assistenza autorizzato. Tali parti sono identificate da un "No" nel Catalogo illustrato dei componenti.

In base alla disponibilità e alla località geografica, le parti CSR vengono spedite con consegna entro il giorno lavorativo seguente. La consegna nel giorno stesso o entro quattro ore è offerta con un supplemento di costo solo in alcune zone. In caso di necessità si può richiedere l'assistenza telefonica di un addetto del centro di supporto tecnico Hewlett Packard Enterprise. Nel materiale fornito con una parte di ricambio CSR, Hewlett Packard Enterprise specifica se il cliente deve restituire dei componenti. Qualora sia richiesta la resa ad Hewlett Packard Enterprise del componente difettoso, lo si deve spedire ad Hewlett Packard Enterprise entro un determinato periodo di tempo, generalmente cinque (5) giorni lavorativi. Il componente difettoso deve essere restituito con la documentazione associata nell'imballo di spedizione fornito. La mancata restituzione del componente può comportare la fatturazione del ricambio da parte di Hewlett Packard Enterprise. Nel caso di riparazione da parte del cliente, Hewlett Packard Enterprise sostiene tutte le spese di spedizione e resa e sceglie il corriere/vettore da utilizzare.

Per ulteriori informazioni sul programma CSR di Hewlett Packard Enterprise, contattare il centro di assistenza di zona. Per il programma in Nord America fare riferimento al sito Web (<http://www.hpe.com/support/selfrepair>).

## Servizio di garanzia per i soli componenti

La garanzia limitata Hewlett Packard Enterprise può includere un servizio di garanzia per i soli componenti. Nei termini di garanzia del servizio per i soli componenti, Hewlett Packard Enterprise fornirà gratuitamente le parti di ricambio.

Per il servizio di garanzia per i soli componenti è obbligatoria la formula CSR che prevede la riparazione da parte del cliente. Se il cliente invece richiede la sostituzione ad Hewlett Packard Enterprise dovrà sostenere le spese di spedizione e di manodopera per il servizio.

## Customer Self Repair

Hewlett Packard Enterprise Produkte enthalten viele CSR-Teile (Customer Self Repair), um Reparaturzeiten zu minimieren und höhere Flexibilität beim Austausch defekter Bauteile zu ermöglichen. Wenn Hewlett Packard Enterprise (oder ein Hewlett Packard Enterprise Servicepartner) bei der Diagnose feststellt, dass das Produkt mithilfe eines CSR-Teils repariert werden kann, sendet Ihnen Hewlett Packard Enterprise dieses Bauteil zum Austausch direkt zu. CSR-Teile werden in zwei Kategorien unterteilt:

- **Zwingend**—Teile, für die das Customer Self Repair-Verfahren zwingend vorgegeben ist. Wenn Sie den Austausch dieser Teile von Hewlett Packard Enterprise vornehmen lassen, werden Ihnen die Anfahrt- und Arbeitskosten für diesen Service berechnet.
- **Optional**—Teile, für die das Customer Self Repair-Verfahren optional ist. Diese Teile sind auch für Customer Self Repair ausgelegt. Wenn Sie jedoch den Austausch dieser Teile von Hewlett Packard Enterprise vornehmen lassen möchten, können bei diesem Service je nach den für Ihr Produkt vorgesehenen Garantiebedingungen zusätzliche Kosten anfallen.

**HINWEIS:** Einige Hewlett Packard Enterprise Teile sind nicht für Customer Self Repair ausgelegt. Um den Garantieanspruch des Kunden zu erfüllen, muss das Teil von einem Hewlett Packard Enterprise Servicepartner ersetzt werden. Im illustrierten Teilekatalog sind diese Teile mit „No“ bzw. „Nein“ gekennzeichnet.

CSR-Teile werden abhängig von der Verfügbarkeit und vom Lieferziel am folgenden Geschäftstag geliefert. Für bestimmte Standorte ist eine Lieferung am selben Tag oder innerhalb von vier Stunden gegen einen Aufpreis verfügbar. Wenn Sie Hilfe benötigen, können Sie das Hewlett Packard Enterprise Support Center anrufen und sich von einem Mitarbeiter per Telefon helfen lassen. Den Materialien von Hewlett Packard Enterprise, die mit einem CSR-Ersatzteil geliefert werden, können Sie entnehmen, ob das defekte Teil an Hewlett Packard Enterprise zurückgeschickt werden muss. Wenn es erforderlich ist, das defekte Teil an Hewlett Packard Enterprise zurückzuschicken, müssen Sie dies innerhalb eines vorgegebenen Zeitraums tun, in der Regel innerhalb von fünf (5) Geschäftstagen. Das defekte Teil muss mit der zugehörigen Dokumentation in der Verpackung zurückgeschickt werden, die im Lieferumfang enthalten ist. Wenn Sie das defekte Teil nicht zurückschicken, kann Hewlett Packard Enterprise Ihnen das Ersatzteil in Rechnung stellen. Im Falle von Customer Self Repair kommt Hewlett Packard Enterprise für alle Kosten für die Lieferung und Rücksendung auf und bestimmt den Kurier-/Frachtdienst.

Weitere Informationen über das Hewlett Packard Enterprise Customer Self Repair Programm erhalten Sie von Ihrem Servicepartner vor Ort. Informationen über das CSR-Programm in Nordamerika finden Sie auf der Hewlett Packard Enterprise Website unter (<http://www.hpe.com/support/selfrepair>).

## Parts-only Warranty Service (Garantieservice ausschließlich für Teile)

Ihre Hewlett Packard Enterprise Garantie umfasst möglicherweise einen Parts-only Warranty Service (Garantieservice ausschließlich für Teile). Gemäß den Bestimmungen des Parts-only Warranty Service stellt Hewlett Packard Enterprise Ersatzteile kostenlos zur Verfügung.

Für den Parts-only Warranty Service ist das CSR-Verfahren zwingend vorgegeben. Wenn Sie den Austausch dieser Teile von Hewlett Packard Enterprise vornehmen lassen, werden Ihnen die Anfahrt- und Arbeitskosten für diesen Service berechnet.

## Reparaciones del propio cliente

Los productos de Hewlett Packard Enterprise incluyen muchos componentes que el propio usuario puede reemplazar (Customer Self Repair, CSR) para minimizar el tiempo de reparación y ofrecer una mayor flexibilidad a la hora de realizar sustituciones de componentes defectuosos. Si, durante la fase de diagnóstico, Hewlett Packard Enterprise (o los proveedores o socios de servicio de Hewlett Packard Enterprise) identifica que una reparación puede llevarse a cabo mediante el uso de un componente CSR, Hewlett Packard Enterprise le enviará dicho componente directamente para que realice su sustitución. Los componentes CSR se clasifican en dos categorías:

- **Obligatorio**—Componentes cuya reparación por parte del usuario es obligatoria. Si solicita a Hewlett Packard Enterprise que realice la sustitución de estos componentes, tendrá que hacerse cargo de los gastos de desplazamiento y de mano de obra de dicho servicio.
- **Opcional**—Componentes cuya reparación por parte del usuario es opcional. Estos componentes también están diseñados para que puedan ser reparados por el usuario. Sin embargo, si precisa que Hewlett Packard Enterprise realice su sustitución, puede o no conllevar costes adicionales, dependiendo del tipo de servicio de garantía correspondiente al producto.

**NOTA:** Algunos componentes de Hewlett Packard Enterprise no están diseñados para que puedan ser reparados por el usuario. Para que el usuario haga valer su garantía, Hewlett Packard Enterprise pone como condición que un proveedor de servicios autorizado realice la sustitución de estos componentes. Dichos componentes se identifican con la palabra "No" en el catálogo ilustrado de componentes.

Según la disponibilidad y la situación geográfica, los componentes CSR se enviarán para que lleguen a su destino al siguiente día laborable. Si la situación geográfica lo permite, se puede solicitar la entrega

en el mismo día o en cuatro horas con un coste adicional. Si precisa asistencia técnica, puede llamar al Centro de asistencia técnica de Hewlett Packard Enterprise y recibirá ayuda telefónica por parte de un técnico. Con el envío de materiales para la sustitución de componentes CSR, Hewlett Packard Enterprise especificará si los componentes defectuosos deberán devolverse a Hewlett Packard Enterprise. En aquellos casos en los que sea necesario devolver algún componente a Hewlett Packard Enterprise, deberá hacerlo en el periodo de tiempo especificado, normalmente cinco días laborables. Los componentes defectuosos deberán devolverse con toda la documentación relacionada y con el embalaje de envío. Si no enviara el componente defectuoso requerido, Hewlett Packard Enterprise podrá cobrarle por el de sustitución. En el caso de todas sustituciones que lleve a cabo el cliente, Hewlett Packard Enterprise se hará cargo de todos los gastos de envío y devolución de componentes y escogerá la empresa de transporte que se utilice para dicho servicio.

Para obtener más información acerca del programa de Reparaciones del propio cliente de Hewlett Packard Enterprise, póngase en contacto con su proveedor de servicios local. Si está interesado en el programa para Norteamérica, visite la página web de Hewlett Packard Enterprise CSR (<http://www.hpe.com/support/selfrepair>).

## Servicio de garantía exclusivo de componentes

La garantía limitada de Hewlett Packard Enterprise puede que incluya un servicio de garantía exclusivo de componentes. Según las condiciones de este servicio exclusivo de componentes, Hewlett Packard Enterprise le facilitará los componentes de repuesto sin cargo adicional alguno.

Para este servicio de garantía exclusivo de componentes, es obligatoria la sustitución de componentes por parte del usuario (CSR). Si solicita a Hewlett Packard Enterprise que realice la sustitución de estos componentes, tendrá que hacerse cargo de los gastos de desplazamiento y de mano de obra de dicho servicio.

## Customer Self Repair

Veel onderdelen in Hewlett Packard Enterprise producten zijn door de klant zelf te repareren, waardoor de reparatietaart tot een minimum beperkt kan blijven en de flexibiliteit in het vervangen van defecte onderdelen groter is. Deze onderdelen worden CSR-onderdelen (Customer Self Repair) genoemd. Als Hewlett Packard Enterprise (of een Hewlett Packard Enterprise Service Partner) bij de diagnose vaststelt dat de reparatie kan worden uitgevoerd met een CSR-onderdeel, verzendt Hewlett Packard Enterprise dat onderdeel rechtstreeks naar u, zodat u het defecte onderdeel daarmee kunt vervangen. Er zijn twee categorieën CSR-onderdelen:

- **Verplicht**—Onderdelen waarvoor reparatie door de klant verplicht is. Als u Hewlett Packard Enterprise verzoekt deze onderdelen voor u te vervangen, worden u voor deze service reiskosten en arbeidsloon in rekening gebracht.
- **Optioneel**—Onderdelen waarvoor reparatie door de klant optioneel is. Ook deze onderdelen zijn ontworpen voor reparatie door de klant. Als u echter Hewlett Packard Enterprise verzoekt deze onderdelen voor u te vervangen, kunnen daarvoor extra kosten in rekening worden gebracht, afhankelijk van het type garantieservice voor het product.

**OPMERKING:** Sommige Hewlett Packard Enterprise onderdelen zijn niet ontwikkeld voor reparatie door de klant. In verband met de garantievoorraarden moet het onderdeel door een geautoriseerde Service Partner worden vervangen. Deze onderdelen worden in de geïllustreerde onderdelencatalogus aangemerkt met "Nee".

Afhankelijk van de leverbaarheid en de locatie worden CSR-onderdelen verzonden voor levering op de eerstvolgende werkdag. Levering op dezelfde dag of binnen vier uur kan tegen meerkosten worden aangeboden, indien dit mogelijk is gezien de locatie. Indien assistentie is gewenst, belt u het Hewlett Packard Enterprise Support Center om via de telefoon ondersteuning van een technicus te ontvangen. Hewlett Packard Enterprise vermeldt in de documentatie bij het vervangende CSR-onderdeel of het

defecte onderdeel aan Hewlett Packard Enterprise moet worden geretourneerd. Als het defecte onderdeel aan Hewlett Packard Enterprise moet worden teruggezonden, moet u het defecte onderdeel binnen een bepaalde periode, gewoonlijk vijf (5) werkdagen, retourneren aan Hewlett Packard Enterprise. Het defecte onderdeel moet met de bijbehorende documentatie worden geretourneerd in het meegeleverde verpakkingsmateriaal. Als u het defecte onderdeel niet terugzendt, kan Hewlett Packard Enterprise u voor het vervangende onderdeel kosten in rekening brengen. Bij reparatie door de klant betaalt Hewlett Packard Enterprise alle verzendkosten voor het vervangende en geretourneerde onderdeel en kiest Hewlett Packard Enterprise zelf welke koerier/transportonderneming hiervoor wordt gebruikt.

Neem contact op met een Service Partner voor meer informatie over het Customer Self Repair programma van Hewlett Packard Enterprise. Informatie over Service Partners vindt u op de Hewlett Packard Enterprise website (<http://www.hpe.com/support/selfrepair>).

## Garantieservice "Parts Only"

Het is mogelijk dat de Hewlett Packard Enterprise garantie alleen de garantieservice "Parts Only" omvat. Volgens de bepalingen van de Parts Only garantieservice zal Hewlett Packard Enterprise kosteloos vervangende onderdelen ter beschikking stellen.

Voor de Parts Only garantieservice is vervanging door CSR-onderdelen verplicht. Als u Hewlett Packard Enterprise verzoekt deze onderdelen voor u te vervangen, worden u voor deze service reiskosten en arbeidsloon in rekening gebracht

## Reparo feito pelo cliente

Os produtos da Hewlett Packard Enterprise são projetados com muitas peças para reparo feito pelo cliente (CSR) de modo a minimizar o tempo de reparo e permitir maior flexibilidade na substituição de peças com defeito. Se, durante o período de diagnóstico, a Hewlett Packard Enterprise (ou fornecedores/parceiros da Hewlett Packard Enterprise) concluir que o reparo pode ser efetuado pelo uso de uma peça CSR, a Hewlett Packard Enterprise enviará a peça diretamente ao cliente. Há duas categorias de peças CSR:

- **Obrigatória**—Peças cujo reparo feito pelo cliente é obrigatório. Se desejar que a Hewlett Packard Enterprise substitua essas peças, serão cobradas as despesas de transporte e mão-de-obra do serviço.
- **Opcional**—Peças cujo reparo feito pelo cliente é opcional. Essas peças também são projetadas para o reparo feito pelo cliente. No entanto, se desejar que a Hewlett Packard Enterprise as substitua, pode haver ou não a cobrança de taxa adicional, dependendo do tipo de serviço de garantia destinado ao produto.

**OBSERVAÇÃO:** Algumas peças da Hewlett Packard Enterprise não são projetadas para o reparo feito pelo cliente. A fim de cumprir a garantia do cliente, a Hewlett Packard Enterprise exige que um técnico autorizado substitua a peça. Essas peças estão identificadas com a marca "No" (Não), no catálogo de peças ilustrado.

Conforme a disponibilidade e o local geográfico, as peças CSR serão enviadas no primeiro dia útil após o pedido. Onde as condições geográficas permitirem, a entrega no mesmo dia ou em quatro horas pode ser feita mediante uma taxa adicional. Se precisar de auxílio, entre em contato com o Centro de suporte técnico da Hewlett Packard Enterprise para que um técnico o ajude por telefone. A Hewlett Packard Enterprise especifica nos materiais fornecidos com a peça CSR de reposição se a peça com defeito deve ser devolvida à Hewlett Packard Enterprise. Nos casos em que isso for necessário, é preciso enviar a peça com defeito à Hewlett Packard Enterprise, você deverá enviar a peça com defeito de volta para a Hewlett Packard Enterprise dentro do período de tempo definido, normalmente em 5 (cinco) dias úteis. A peça com defeito deve ser enviada com a documentação correspondente no material de transporte fornecido. Caso não o faça, a Hewlett Packard Enterprise poderá cobrar a

restituição. Para as peças de reparo feito pelo cliente, a Hewlett Packard Enterprise paga todas as despesas de transporte e de devolução da peça e determina a transportadora/serviço postal a ser utilizado.

Para obter mais informações sobre o programa de reparo feito pelo cliente da Hewlett Packard Enterprise, entre em contato com o fornecedor de serviços local. Para o programa norte-americano, visite o site da Hewlett Packard Enterprise (<http://www.hpe.com/support/selfrepair>).

## Serviço de garantia apenas para peças

A garantia limitada da Hewlett Packard Enterprise pode incluir um serviço de garantia apenas para peças. Segundo os termos do serviço de garantia apenas para peças, a Hewlett Packard Enterprise fornece as peças de reposição sem cobrar nenhuma taxa.

No caso desse serviço, a substituição de peças CSR é obrigatória. Se desejar que a Hewlett Packard Enterprise substitua essas peças, serão cobradas as despesas de transporte e mão-de-obra do serviço.

## カスタマーセルフリペア

修理時間を短縮し、故障部品の交換における高い柔軟性を確保するために、Hewlett Packard Enterprise製品には多数のカスタマーセルフリペア（CSR）部品があります。診断の際に、CSR部品を使用すれば修理ができるとHewlett Packard Enterprise（Hewlett Packard EnterpriseまたはHewlett Packard Enterprise正規保守代理店）が判断した場合、Hewlett Packard Enterpriseはその部品を直接、お客様に発送し、お客様に交換していただけます。CSR部品には以下の2種類があります。

- 必須 - カスタマーセルフリペアが必須の部品。当該部品について、もしもお客様がHewlett Packard Enterpriseに交換作業を依頼される場合には、その修理サービスに関する交通費および人件費がお客様に請求されます。
- 任意 - カスタマーセルフリペアが任意である部品。この部品もカスタマーセルフリペア用です。当該部品について、もしもお客様がHewlett Packard Enterpriseに交換作業を依頼される場合には、お買い上げの製品に適用される保証サービス内容の範囲内においては、別途費用を負担していただくことなく保証サービスを受けることができます。

注：Hewlett Packard Enterprise製品の一部の部品は、カスタマーセルフリペアの対象外です。製品の保証を継続するためには、Hewlett Packard EnterpriseまたはHewlett Packard Enterprise正規保守代理店による交換作業が必須となります。部品カタログには、当該部品がカスタマーセルフリペア除外品である旨が記載されています。

部品供給が可能な場合、地域によっては、CSR部品を翌営業日に届くように発送します。また、地域によっては、追加費用を負担いただくことにより同日または4時間以内に届くように発送することも可能な場合があります。サポートが必要なときは、Hewlett Packard Enterpriseサポートセンターに電話していただければ、技術者が電話でアドバイスします。交換用のCSR部品または同梱物には、故障部品をHewlett Packard Enterpriseに返送する必要があるかどうかが表示されています。故障部品をHewlett Packard Enterpriseに返送する必要がある場合は、指定期限内（通常は5営業日以内）に故障部品をHewlett Packard Enterpriseに返送してください。故障部品を返送する場合は、届いた時の梱包箱に関連書類とともに入れてください。故障部品を返送しない場合、Hewlett Packard Enterpriseから部品費用が請求されます。カスタマーセルフリペアの際には、Hewlett Packard Enterpriseは送料および部品返送費を全額負担し、使用する宅配便会社や運送会社を指定します。

## 部品のみ保証サービス

Hewlett Packard Enterprise保証サービスには、部品のみ保証サービスが適用される場合があります。このサービスでは、交換部品は無償で提供されます。

部品のみ保証サービスにおいては、CSR部品をお客様により交換作業していただくことが必須になります。当該部品について、もしもお客様がHewlett Packard Enterpriseに交換作業を依頼される場合には、その修理サービスに関する交通費および人件費がお客様のご負担となります。

# 客户自行维修

Hewlett Packard Enterprise 产品提供许多客户自行维修 (CSR) 部件，以尽可能缩短维修时间和在更换缺陷部件方面提供更大的灵活性。如果在诊断期间 Hewlett Packard Enterprise（或Hewlett Packard Enterprise 服务提供商或服务合作伙伴）确定可以通过使用 CSR 部件完成维修，Hewlett Packard Enterprise 将直接把该部件发送给您进行更换。有两类 CSR 部件：

- **强制性的** — 要求客户必须自行维修的部件。如果您请求 Hewlett Packard Enterprise 更换这些部件，则必须为该服务支付差旅费和人工费用。
- **可选的** — 客户可以选择是否自行维修的部件。这些部件也是为客户自行维修设计的。不过，如果您要求 Hewlett Packard Enterprise 为您更换这些部件，则根据为您的产品指定的保修服务类型，Hewlett Packard Enterprise 可能收取或不再收取任何附加费用。

**注：**某些 Hewlett Packard Enterprise 部件的设计并未考虑客户自行维修。为了满足客户保修的需要，Hewlett Packard Enterprise 要求授权服务提供商更换相关部件。这些部件在部件图解目录中标记为“否”。

CSR 部件将在下一个工作日发运（取决于备货情况和允许的地理范围）。在允许的地理范围内，可在当天或四小时内发运，但要收取额外费用。如果需要帮助，您可以致电 Hewlett Packard Enterprise 技术支持中心，将会有技术人员通过电话为您提供帮助。Hewlett Packard Enterprise 会在随更换的 CSR 部件发运的材料中指明是否必须将有缺陷的部件返还给 Hewlett Packard Enterprise。如果要求您将有缺陷的部件返还给 Hewlett Packard Enterprise，那么您必须在规定的期限内（通常是五 (5) 个工作日）将缺陷部件发给 Hewlett Packard Enterprise。有缺陷的部件必须随所提供的发运材料中的相关文件一起返还。如果未能送还有缺陷的部件，Hewlett Packard Enterprise 可能会要求您支付更换费用。客户自行维修时，Hewlett Packard Enterprise 将承担所有相关运输和部件返回费用，并指定快递商/承运商。

有关 Hewlett Packard Enterprise 客户自行维修计划的详细信息，请与您当地的服务提供商联系。有关北美地区的计划，请访问 Hewlett Packard Enterprise 网站 (<http://www.hpe.com/support/selfrepair>)。

## 仅部件保修服务

您的 Hewlett Packard Enterprise 有限保修服务可能涉及仅部件保修服务。根据仅部件保修服务条款的规定，Hewlett Packard Enterprise 将免费提供更换的部件。

仅部件保修服务要求进行 CSR 部件更换。如果您请求 Hewlett Packard Enterprise 更换这些部件，则必须为该服务支付差旅费和人工费用。

# 客戶自行維修

Hewlett Packard Enterprise 產品設計了許多「客戶自行維修」(CSR) 的零件以減少維修時間，並且使得更換瑕疵零件時能有更大的彈性。如果在診斷期間，Hewlett Packard Enterprise (或 Hewlett Packard Enterprise 服務供應商或維修夥伴) 辨認出此項維修工作可以藉由使用 CSR 零件來完成，則 Hewlett Packard Enterprise 將直接寄送該零件給您作更換。CSR 零件分為兩種類別：

- **強制的** — 客戶自行維修所使用的零件是強制性的。如果您要求 Hewlett Packard Enterprise 更換這些零件，Hewlett Packard Enterprise 將會向您收取此服務所需的外出費用與勞動成本。
- **選購的** — 客戶自行維修所使用的零件是選購的。這些零件也設計用於客戶自行維修之用。不過，如果您要求 Hewlett Packard Enterprise 為您更換，則可能需要也可能不需要負擔額外的費用，端視針對此產品指定的保固服務類型而定。

**備註：**某些 Hewlett Packard Enterprise 零件沒有消費者可自行維修的設計。為符合客戶保固，Hewlett Packard Enterprise 需要授權的服務供應商更換零件。這些零件在圖示的零件目錄中，被標示為「否」。

基於材料取得及環境允許的情況下，CSR 零件將於下一個工作日以快遞寄送。在環境的允許下當天或四小時內送達，則可能需要額外的費用。若您需要協助，可致電 Hewlett Packard Enterprise 支援中心，會有一位技術人員透過電話來協助您。不論損壞的零件是否必須退回，Hewlett Packard Enterprise 皆會在與 CSR 替換零件一起運送的材料中註明。若要將損壞的零件退回 Hewlett Packard Enterprise，您必須在指定的一段時間內 (通常為五 (5) 個工作天)，將損壞的零件寄回 Hewlett Packard Enterprise。損壞的零件必須與寄送資料中隨附的相關技術文件一併退還。如果無法退還損壞的零件，Hewlett Packard Enterprise 可能要向您收取替換費用。針對客戶自行維修情形，Hewlett Packard Enterprise 將負責所有運費及零件退還費用，並指定使用何家快遞/貨運公司。

如需 Hewlett Packard Enterprise 的 CSR 方案詳細資訊，請連絡您當地的服務供應商。至於北美方案，請參閱 Hewlett Packard Enterprise 的 CSR 網站 [selfrepair](http://www.hpe.com/support/selfrepair) (<http://www.hpe.com/support/selfrepair>)。

## 僅限零件的保固服務

您的「Hewlett Packard Enterprise 有限保固」可能包含僅限零件的保固服務。在僅限零件的保固服務情況下，Hewlett Packard Enterprise 將免費提供替換零件。

針對僅限零件的保固服務，CSR 零件替換是強制性的。如果您要求 Hewlett Packard Enterprise 更換這些零件，Hewlett Packard Enterprise 將會向您收取此服務所需的外出費用與勞動成本。

## 고객 셀프 수리

Hewlett Packard Enterprise 제품은 수리 시간을 최소화하고 결함이 있는 부품 교체 시 더욱 융통성을 발휘할 수 있도록 하기 위해 고객 셀프 수리(CSR) 부품을 다량 사용하여 설계되었습니다. 진단 기간 동안 Hewlett Packard Enterprise(또는 Hewlett Packard Enterprise 서비스 공급업체 또는 서비스 협력업체)에서 CSR 부품을 사용하여 수리가 가능하다고 판단되면 Hewlett Packard Enterprise는 해당 부품을 바로 사용자에게 보내어 사용자가 교체할 수 있도록 합니다. CSR 부품에는 두 가지 종류가 있습니다.

- **필수** - 고객 셀프 수리가 의무 사항인 필수 부품. 사용자가 Hewlett Packard Enterprise에 이 부품의 교체를 요청할 경우 이 서비스에 대한 출장비 및 작업비가 청구됩니다.
- **선택 사항** - 고객 셀프 수리가 선택 사항인 부품. 이 부품들도 고객 셀프 수리가 가능하도록 설계되었습니다. 하지만 사용자가 Hewlett Packard Enterprise에 이 부품의 교체를 요청할 경우 사용자가 구입한 제품에 해당하는 보증 서비스 유형에 따라 추가 비용 없이 교체가 가능할 수 있습니다.

**참고:** 일부 Hewlett Packard Enterprise 부품은 고객 셀프 수리가 불가능하도록 설계되었습니다. Hewlett Packard Enterprise는 만족스러운 고객 보증을 위해 공인 서비스 제공업체를 통해 부품을 교체하도록 하고 있습니다. 이러한 부품들은 Illustrated Parts Catalog에 "No"라고 표시되어 있습니다.

CSR 부품은 재고 상태와 지리적 조건이 허용하는 경우 다음 영업일 납품이 가능하도록 배송이 이루어집니다. 지리적 조건이 허용하는 경우 추가 비용이 청구되는 조건으로 당일 또는 4시간 배송이 가능할 수도 있습니다. 도움이 필요하시면 Hewlett Packard Enterprise Support Center로 전화하십시오. 전문 기술자가 전화로 도움을 줄 것입니다. Hewlett Packard Enterprise는 결함이 발생한 부품을 Hewlett Packard Enterprise로 반환해야 하는지 여부를 CSR 교체 부품과 함께 배송된 자료에 지정합니다. 결함이 발생한 부품을 Hewlett Packard Enterprise로 반환해야 하는 경우에는 지정된 기간 내(통상 영업일 기준 5일)에 Hewlett Packard Enterprise로 반환해야 합니다. 이때 결함이 발생한 부품은 제공된 포장 재료에 넣어 관련 설명서와 함께 반환해야 합니다. 결함이 발생한 부품을 반환하지 않는 경우 Hewlett Packard Enterprise가 교체 부품에 대해 비용을 청구할 수 있습니다. 고객 셀프 수리의 경우, Hewlett Packard Enterprise는 모든 운송 및 부품 반환 비용을 부담하며 이용할 운송업체 및 택배 서비스를 결정합니다.

Hewlett Packard Enterprise CSR 프로그램에 대한 자세한 내용은 가까운 서비스 제공업체에 문의하십시오. 북미 지역의 프로그램에 대해서는 Hewlett Packard Enterprise CSR 웹 사이트(<http://www.hpe.com/support/selfrepair>)를 참조하십시오.

## 부품 제공 보증 서비스


Hewlett Packard Enterprise 제한 보증에는 부품 제공 보증 서비스가 포함될 수 있습니다. 이러한 경우 Hewlett Packard Enterprise는 부품 제공 보증 서비스의 조건에 따라 교체 부품만을 무료로 제공합니다.

부품 제공 보증 서비스 제공 시 CSR 부품 교체는 의무 사항입니다. 사용자가 Hewlett Packard Enterprise에 이 부품의 교체를 요청할 경우 이 서비스에 대한 출장비 및 작업비가 청구됩니다.

# Illustrated parts catalog

## Graphics server blade components

Hewlett Packard Enterprise continually improves and changes product parts. For complete and current supported parts information, see the Hewlett Packard Enterprise PartSurfer website (<http://www.hpe.com/info/partssurfer>).

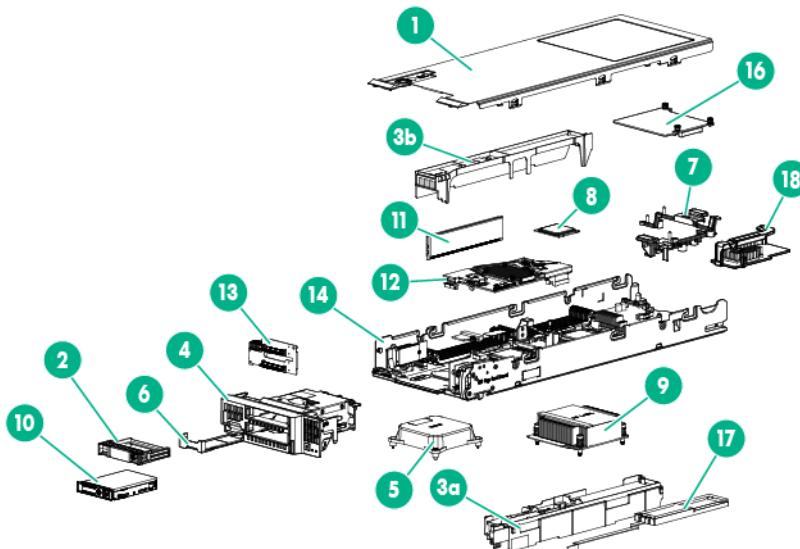

Item	Description	Spare part number	Customer self repair (on page 5)
1	Access panel, single-width blade	777681-001	Mandatory <sup>1</sup>
2	Drive blank	777683-001	Mandatory <sup>1</sup>
3	DIMM baffles	—	—
a)	DIMM baffle, right	777685-001	Mandatory <sup>1</sup>
b)	DIMM baffle, left	777684-001	Mandatory <sup>1</sup>
4	Front panel/drive cage assembly	777682-001	Mandatory <sup>1</sup>
5	Heatsink blank	670027-001	Mandatory <sup>1</sup>
6	Serial label pull tab	777690-001	Mandatory <sup>1</sup>
7	Mezzanine assembly	784960-001	Mandatory <sup>1</sup>
8	Processors	—	—
a)	1.60-GHz Intel Xeon E5-2603 v3**	762441-001	Optional <sup>2</sup>
b)	1.90-GHz Intel Xeon E5-2609 v3* **	762443-001	Optional <sup>2</sup>
c)	2.40-GHz Intel Xeon E5-2620 v3* **	762445-001	Optional <sup>2</sup>
d)	3.00-GHz Intel Xeon E5-2623 v3* **	780762-001	Optional <sup>2</sup>
e)	2.40-GHz Intel Xeon E5-2630 v3* **	762446-001	Optional <sup>2</sup>
f)	1.80-GHz Intel Xeon E5-2630L v3* **	762459-001	Optional <sup>2</sup>

Item	Description	Spare part number	Customer self repair (on page 5)
	g) 3.50-GHz Intel Xeon E5-2637 v3* **	762455-001	Optional <sup>2</sup>
	h) 2.60-GHz Intel Xeon E5-2640 v3* **	762447-001	Optional <sup>2</sup>
	i) 3.40-GHz Intel Xeon E5-2643 v3* **	762456-001	Optional <sup>2</sup>
	j) 2.30-GHz Intel Xeon E5-2650 v3* **	762448-001	Optional <sup>2</sup>
	k) 1.80-GHz Intel Xeon E5-2650L v3* **	762461-001	Optional <sup>2</sup>
	l) 2.60-GHz Intel Xeon E5-2660 v3* **	762449-001	Optional <sup>2</sup>
	m) 3.30-GHz Intel Xeon E5-2667 v3* **	762457-001	Optional <sup>2</sup>
	n) 2.30-GHz Intel Xeon E5-2670 v3* **	762450-001	Optional <sup>2</sup>
	o) 2.50-GHz Intel Xeon E5-2680 v3* **	762451-001	Optional <sup>2</sup>
	p) 2.00-GHz Intel Xeon E5-2683 v3* **	762453-001	Optional <sup>2</sup>
	q) 2.60-GHz Intel Xeon E5-2685v3* **	780759-001	Optional <sup>2</sup>
	r) 2.60-GHz Intel Xeon E5-2690 v3* **	762452-001	Optional <sup>2</sup>
	s) 2.30-GHz Intel Xeon E5-2695 v3* **	762454-001	Optional <sup>2</sup>
	t) 2.60-GHz Intel Xeon E5-2697 v3* **	765154-001	Optional <sup>2</sup>
	u) 2.30-GHz Intel Xeon E5-2698 v3* **	780760-002	Optional <sup>2</sup>
	v) 2.30-GHz Intel Xeon E5-2699 v3* **	780761-001	Optional <sup>2</sup>
9	Heatsink	—	—
	a) Processor 1 heatsink, standard	777687-001	Optional <sup>2</sup>
	b) Processor 2 heatsink, standard*	777686-001	Optional <sup>2</sup>
	c) Processor 1 heatsink, wide*	777689-001	Optional <sup>2</sup>
	d) Processor 2 heatsink, wide*	777688-001	Optional <sup>2</sup>
10	Drives	—	—
	a) 146-GB, hard drive, SAS, SFF, 15,000-rpm, 6G	653950-001	Mandatory <sup>1</sup>
	b) 300-GB, hard drive, SAS, SFF, 10,000-rpm, 6G*	653955-001	Mandatory <sup>1</sup>
	c) 450-GB, hard drive, SAS, SFF, 10,000-rpm, 6G*	653956-001	Mandatory <sup>1</sup>
	d) 500-GB, hard drive, SAS, SFF, 7,200-rpm, 6G*	653953-001	Mandatory <sup>1</sup>
	e) 600-GB, hard drive, SAS, SFF, 10,000-rpm, 6G*	653957-001	Mandatory <sup>1</sup>
	f) 900-GB, hard drive, SAS, SFF, 10,000-rpm, 6G*	653971-001	Mandatory <sup>1</sup>
	g) 1-TB, hard drive, SAS, SFF, 7,200-rpm, 6G*	653954-001	Mandatory <sup>1</sup>
	h) 1.2-TB, hard drive, SAS, SFF, 10,000-rpm, 6G*	718292-001	Mandatory <sup>1</sup>
	i) 200-GB, SSD, SAS, ME, SFF, 12G*	741224-001	Mandatory <sup>1</sup>
	j) 200-GB, SSD, SAS, HE, SFF, 12G*	741230-001	Mandatory <sup>1</sup>
	k) 400-GB, SSD, SAS, ME, SFF, 12G*	741226-001	Mandatory <sup>1</sup>
	l) 400-GB, SSD, SAS, HE, SFF, 12G*	741232-001	Mandatory <sup>1</sup>
	m) 800-GB, SSD, SAS, VE, SFF, 12G*	762749-001	Mandatory <sup>1</sup>

Item	Description	Spare part number	Customer self repair (on page 5)
	n) 800-GB, SSD, SAS, ME, SFF, 12G*	741228-001	Mandatory <sup>1</sup>
	o) 800-GB, SSD, SAS, HE, SFF, 12G*	741234-001	Mandatory <sup>1</sup>
	p) 1.6-TB, SSD, SAS, VE, SFF, 12G*	762751-001	Mandatory <sup>1</sup>
	q) 80-GB, SSD, SATA, VE, SFF, 6G*	734562-001	Mandatory <sup>1</sup>
	r) 240-GB, SSD, SATA, VE, SFF, 6G*	757366-001	Mandatory <sup>1</sup>
	s) 480-GB, SSD, SATA, VE, SFF, 6G*	757371-001	Mandatory <sup>1</sup>
	t) 800-GB, SSD, SATA, VE, SFF, 6G*	718139-001	Mandatory <sup>1</sup>
	u) 100-GB, SSD, SATA ME, SFF, 6G*	692164-001	Mandatory <sup>1</sup>
	v) 120-GB, SSD, SATA, VE, SFF, 6G*	757361-001	Mandatory <sup>1</sup>
	w) 200-GB, SSD, SATA, ME, SFF, 6G*	692165-001	Mandatory <sup>1</sup>
	x) 300-GB, SSD, SATA, VE, SFF, 6G*	739954-001	Mandatory <sup>1</sup>
	y) 400-GB, SSD, SATA, ME, SFF, 6G*	692166-001	Mandatory <sup>1</sup>
	z) 600-GB, SSD, SATA, VE, SFF, 6G*	739959-001	Mandatory <sup>1</sup>
	aa) 800-GB, SSD, SATA, ME, SFF, 6G*	692167-001	Mandatory <sup>1</sup>
11	DIMMs	—	—
	a) 8-GB, 1Rx4, PC4-2133R	774170-001	Mandatory <sup>1</sup>
	b) 16-GB, 2Rx4, PC4-2133R*	774172-001	Mandatory <sup>1</sup>
	c) 32-GB, 4Rx4, PC4-2133L*	774174-001	Mandatory <sup>1</sup>
12	Storage controller	—	—
	a) HPE Smart Array H244br Host Bus Adapter	749999-001	Mandatory <sup>1</sup>
	b) HPE Smart Array P244br Controller*	749800-001	Mandatory <sup>1</sup>
13	Drive backplane	744412-001	Optional <sup>2</sup>
14	System board with base pan	744409-001	Optional <sup>2</sup>
15	Trusted Platform Module*	505836-001	No <sup>3</sup>
16	Mezzanine options	—	—
	a) HPE FlexFabric 20Gb 2-port 630M Adapter	701528-001	Mandatory <sup>1</sup>
	b) HPE FlexFabric 20Gb 2-port 650M Adapter*	701535-001	Mandatory <sup>1</sup>
	c) HPE FlexFabric 10Gb 2-port 534M Adapter*	701530-001	Mandatory <sup>1</sup>
	d) HPE Ethernet 10Gb 2-port 560M Adapter*	669282-001	Mandatory <sup>1</sup>
	e) HPE Ethernet 10Gb 2-port 570M Adapter*	730700-001	Mandatory <sup>1</sup>
	f) HPE Ethernet 1Gb 4-port 366M Adapter*	616010-001	Mandatory <sup>1</sup>
	g) HPE InfiniBand QDR/Ethernet 10Gb 2-port 544+M Adapter*	764734-001	Mandatory <sup>1</sup>
	h) HPE InfiniBand FDR/Ethernet 10Gb/40Gb 2-port 544+M Adapter*	764735-001	Mandatory <sup>1</sup>
	i) HPE InfiniBand FDR 2-port 545M Adapter*	705086-001	Mandatory <sup>1</sup>
	j) HPE LPe1605 16Gb Fibre Channel HBA for BladeSystem c-Class*	718577-001	Mandatory <sup>1</sup>
	k) HPE QMH2672 16Gb Fibre Channel Host Bus Adapter*	711305-001	Mandatory <sup>1</sup>

Item	Description	Spare part number	Customer self repair (on page 5)
	I) MXM3 Adapter Type-A PCIe3*	792946-001	Mandatory <sup>1</sup>
	m) MXM3 Adapter Type-B PCIe3*	792947-001	Mandatory <sup>1</sup>
	n) AMD FirePro S4000X Server GPU Module, 2GB*	797888-001	Mandatory <sup>1</sup>
	o) NVIDIA Quadro K3100M 4GB Graphics Card*	797886-001	Mandatory <sup>1</sup>
	p) PCIe mezzanine pass through board*	792948-001	Mandatory <sup>1</sup>
17	HPE Smart Storage Battery with cable	750452-001	Mandatory <sup>1</sup>
18	FlexibleLOM adapters	—	—
	a) HPE FlexFabric 20Gb 2-port 630FLB Adapter	701527-001	Mandatory <sup>1</sup>
	b) HPE FlexFabric 20Gb 2-port 650FLB Adapter*	701536-001	Mandatory <sup>1</sup>
	c) HPE FlexFabric 10Gb 2-port 536FLB Adapter*	777692-001	Mandatory <sup>1</sup>
	d) HPE Ethernet 10Gb 2-port 560FLB Adapter*	730701-001	Mandatory <sup>1</sup>
	e) HPE Ethernet 10Gb 2-port 570FLB Adapter*	701528-001	Mandatory <sup>1</sup>
19	MXM graphics mezzanine heatsink*	—	—
	a) MXM3 Type-A PCIe3 heatsink	797889-001	<need CSR>
	b) MXM3 Type-B PCIe3 heatsink	797887-001	<need CSR>
20	System battery*	234556-001	Optional <sup>2</sup>
21	Server blade release lever kit*	688895-001	Optional <sup>2</sup>
	a) Server blade release lever assembly	—	—
	b) T-10 screws (2)	—	—
	c) Server blade release lever bracket	—	—
22	Mezzanine pass through brackets*	—	—
	a) Single mezzanine pass through bracket, clear	801520-001	Mandatory <sup>1</sup>
	b) Dual mezzanine pass through bracket, black	801810-001	Mandatory <sup>1</sup>
23	Cables*	—	—
	a) HPE c-Class Blade SUV Cable	416003-001	Mandatory <sup>1</sup>
	b) SATA cable*	784961-001	Mandatory <sup>1</sup>

\*Not shown

\*\*Do not mix processors with different speeds or cache sizes.

<sup>1</sup>Mandatory—Parts for which customer self repair is mandatory. If you request Hewlett Packard Enterprise to replace these parts, you will be charged for the travel and labor costs of this service.

<sup>2</sup>Optional—Parts for which customer self repair is optional. These parts are also designed for customer self repair. If, however, you require that Hewlett Packard Enterprise replace them for you, there may or may not be additional charges, depending on the type of warranty service designated for your product.

<sup>3</sup>No—Some Hewlett Packard Enterprise parts are not designed for customer self repair. In order to satisfy the customer warranty, Hewlett Packard Enterprise requires that an authorized service provider replace the part. These parts are identified as "No" in the Illustrated Parts Catalog.

<sup>1</sup>Obligatoire—Pièces pour lesquelles le client doit procéder lui-même aux réparations. Si vous demandez à Hewlett Packard Enterprise de procéder au remplacement de ces pièces, les frais de transport et de main d'œuvre pour ce service vous seront facturés.

<sup>2</sup>Facultatif—Pièces pour lesquelles une réparation par le client est facultative. Ces pièces sont également conçues pour que le client puisse procéder lui-même aux réparations. Cependant, les frais supplémentaires engendrés par

le remplacement de ces pièces par Hewlett Packard Enterprise dépendent du type de service de garantie désigné pour votre produit.

<sup>3</sup>Non—Certaines pièces Hewlett Packard Enterprise ne sont pas conçues pour être remplacées par le client. Afin de se conformer aux exigences de la garantie la garantie du client, Hewlett Packard Enterprise demande à un fournisseur de services agréé de procéder au remplacement de la pièce. Ces pièces sont signalées par le mot « Non » dans le Catalogue de pièces illustré.

<sup>1</sup>Obligatorio—Parti per le quali il cliente è tenuto a effettuare autonomamente la riparazione. Se si richiede l'intervento di Hewlett Packard Enterprise per la sostituzione di queste parti, al cliente verranno addebitate le spese di viaggio e manodopera dell'operazione.

<sup>2</sup>Facoltativo—Parti per le quali la riparazione in autonomia da parte del cliente è facoltativa. Queste parti sono progettate per consentire anche la riparazione da parte del cliente. Tuttavia, se il cliente richiede l'intervento di Hewlett Packard Enterprise per la sostituzione, potrebbero essere addebitate spese aggiuntive a seconda del tipo di garanzia in assistenza previsto per il prodotto.

<sup>3</sup>No—Alcune parti Hewlett Packard Enterprise non sono progettate la riparazione in autonomia da parte del cliente. In base a quanto previsto dalla garanzia per il cliente, Hewlett Packard Enterprise richiede l'intervento di un tecnico autorizzato per la sostituzione della parte. Queste parti sono contrassegnate con "No" nel catalogo parti illustrato.

<sup>1</sup>Zwingend—Teile, für die das Customer Self Repair-Verfahren zwingend vorgegeben ist. Wenn Sie den Austausch dieser Teile von Hewlett Packard Enterprise vornehmen lassen, werden Ihnen die Anfahrt- und Arbeitskosten für diesen Service berechnet.

<sup>2</sup>Optional—Teile, für die das Customer Self Repair-Verfahren optional ist. Diese Teile sind auch für Customer Self Repair ausgelegt. Wenn Sie jedoch den Austausch dieser Teile von Hewlett Packard Enterprise vornehmen lassen möchten, können bei diesem Service je nach den für Ihr Produkt vorgesehenen Garantiebedingungen zusätzliche Kosten anfallen.

<sup>3</sup>Nein—Einige Hewlett Packard Enterprise Teile sind nicht für Customer Self Repair ausgelegt. Um den Garantieanspruch des Kunden zu erfüllen, muss das Teil von einem Hewlett Packard Enterprise Servicepartner ersetzt werden. Im illustrierten Teilekatalog sind diese Teile mit „Nein“ bzw. „Nein“ gekennzeichnet.

<sup>1</sup>Obligatorio—Componentes cuya reparación por parte del usuario es obligatoria. Si solicita a Hewlett Packard Enterprise que realice la sustitución de estos componentes, tendrá que hacerse cargo de los gastos de desplazamiento y de mano de obra de dicho servicio.

<sup>2</sup>Opcional—Componentes cuya reparación por parte del usuario es opcional. Estos componentes también están diseñados para que puedan ser reparados por el usuario. Sin embargo, si precisa que Hewlett Packard Enterprise realice su sustitución, puede o no conllevar costes adicionales, dependiendo del tipo de servicio de garantía correspondiente al producto.

<sup>3</sup>No—Algunos componentes de Hewlett Packard Enterprise no están diseñados para que puedan ser reparados por el usuario. Para que el usuario haga valer su garantía, Hewlett Packard Enterprise pone como condición que un proveedor de servicios autorizado realice la sustitución de estos componentes. Dichos componentes se identifican con la palabra "No" en el catálogo ilustrado de componentes.

<sup>1</sup>Verplicht—Onderdelen die de klant zelf moet vervangen. Als u Hewlett Packard Enterprise vraagt deze onderdelen te vervangen, worden er reis- en arbeidskosten voor deze service in rekening gebracht.

<sup>2</sup>Optioneel—Onderdelen die de klant zelf kan vervangen. Deze onderdelen zijn ook ontworpen om door de klant zelf te worden vervangen. Als u Hewlett Packard Enterprise verzoekt om deze te vervangen, kan het zijn dat hiervoor extra kosten in rekening worden gebracht, afhankelijk van het soort garantie dat op uw product van toepassing is.

<sup>3</sup>Geen—Sommige onderdelen van Hewlett Packard Enterprise zijn niet ontworpen om door de klant zelf te worden vervangen. Om te voldoen aan de garantievooraarden eist Hewlett Packard Enterprise dat een geautoriseerde serviceverlener het onderdeel vervangt. Deze onderdelen worden aangeduid met 'Geen' in de geïllustreerde onderdelencatalogus.

<sup>1</sup>Obrigatório—Peças cujo reparo feito pelo cliente é obrigatório. Se desejar que a Hewlett Packard Enterprise substitua essas peças, serão cobradas as despesas de transporte e mão-de-obra do serviço.

<sup>2</sup>Opcional—Peças cujo reparo feito pelo cliente é opcional. Essas peças também são projetadas para o reparo feito pelo cliente. No entanto, se desejar que a Hewlett Packard Enterprise as substitua, pode haver ou não a cobrança de taxa adicional, dependendo do tipo de serviço de garantia destinado ao produto.

<sup>3</sup>Não—Algumas peças da Hewlett Packard Enterprise não são projetadas para o reparo feito pelo cliente. A fim de cumprir a garantia do cliente, a Hewlett Packard Enterprise exige que um técnico autorizado substitua a peça. Essas peças estão identificadas com a marca "Não" (Não), no catálogo de peças ilustrado.

<sup>1</sup>Mandatory : 必須 — カスタマーセルフリペアが必須の部品。当該部品について、もしもお客様がHewlett Packard Enterpriseに交換作業を依頼される場合には、その修理サービスに関する交通費および人件費がお客様に請求されます。

<sup>2</sup>Optional : 任意 — カスタマーセルフリペアが任意である部品。この部品もカスタマーセルフリペア用です。当該部品について、もしもお客様がHewlett Packard Enterpriseに交換作業を依頼される場合には、お買い上げの製品に適用される保証サービス内容の範囲内においては、別途費用を負担していただくことなく保証サービスを受けることができます。

<sup>3</sup>No : 除外 — Hewlett Packard Enterprise製品の一部の部品は、カスタマーセルフリペアの対象外です。製品の保証を継続するためには、Hewlett Packard EnterpriseまたはHewlett Packard Enterprise正規保守代理店による交換作業が必須となります。部品カタログには、当該部品がカスタマーセルフリペア除外品である旨が記載されています。

<sup>1</sup>Mandatory — 客户必须自行维修的部件。如果您请求 Hewlett Packard Enterprise 更换这些部件，则必须为该服务支付差旅费和人工费用。

<sup>2</sup>Optional — 客户可以选择是否自行维修的部件。这些部件也是为客户自行维修设计的。不过，如果您要求 Hewlett Packard Enterprise 为您更换这些部件，则根据为您的产品指定的保修服务类型，Hewlett Packard Enterprise 可能收取或不再收取任何附加费用。

<sup>3</sup>No — 某些 Hewlett Packard Enterprise 部件的设计并未考虑客户自行维修。为了满足客户保修的需要，Hewlett Packard Enterprise 要求授权服务提供商更换相关部件。这些部件在部件图解目录中标记为“否”。

<sup>1</sup>Mandatory — 客戶自行維修所使用的零件是強制性的。如果您要求 Hewlett Packard Enterprise 更換這些零件，Hewlett Packard Enterprise 將會向您收取此服務所需的外出費用與勞動成本。

<sup>2</sup>Optional — 客戶自行維修所使用的零件是選購的。這些零件也設計用於客戶自行維修之用。不過，如果您要求 Hewlett Packard Enterprise 為您更換，則可能需要也可能不需要負擔額外的費用，端視針對此產品指定的保固服務類型而定。

<sup>3</sup>No — 某些 Hewlett Packard Enterprise 零件沒有消費者可自行維修的設計。為符合客戶保固，Hewlett Packard Enterprise 需要授權的服務供應商更換零件。這些零件在圖示的零件目錄中，被標示為「否」。

<sup>1</sup>Mandatory — 고객 셀프 수리가 의무 사항인 필수 부품. 사용자가 Hewlett Packard Enterprise에 이 부품의 교체를 요청할 경우 해당 서비스에 대한 출장비 및 작업비가 청구됩니다.


<sup>2</sup>Optional — 고객 셀프 수리가 선택 사항인 부품. 이러한 부품들도 고객 셀프 수리가 가능하도록 설계되었습니다. 하지만 사용자가 Hewlett Packard Enterprise에 이러한 부품의 교체를 요청할 경우 사용자가 구입한 제품에 해당하는 보증 서비스 유형에 따라 추가 비용 없이 교체가 가능할 수 있습니다.

<sup>3</sup>No — 일부 Hewlett Packard Enterprise 부품은 고객 셀프 수리가 불가능하도록 설계되었습니다. Hewlett Packard Enterprise는 만족스러운 고객 보증을 위해 공인 서비스 제공업체를 통해 부품을 교체하도록 요구하고 있습니다. 이러한 부품들은 Illustrated Parts Catalog에 "No"라고 표시되어 있습니다.

## Graphics expansion blade components

Hewlett Packard Enterprise continually improves and changes product parts. For complete and current supported parts information, see the Hewlett Packard Enterprise PartSurfer website (<http://www.hpe.com/info/partssurfer>).

Parts listed here are in addition to parts listed for the graphics server blade.

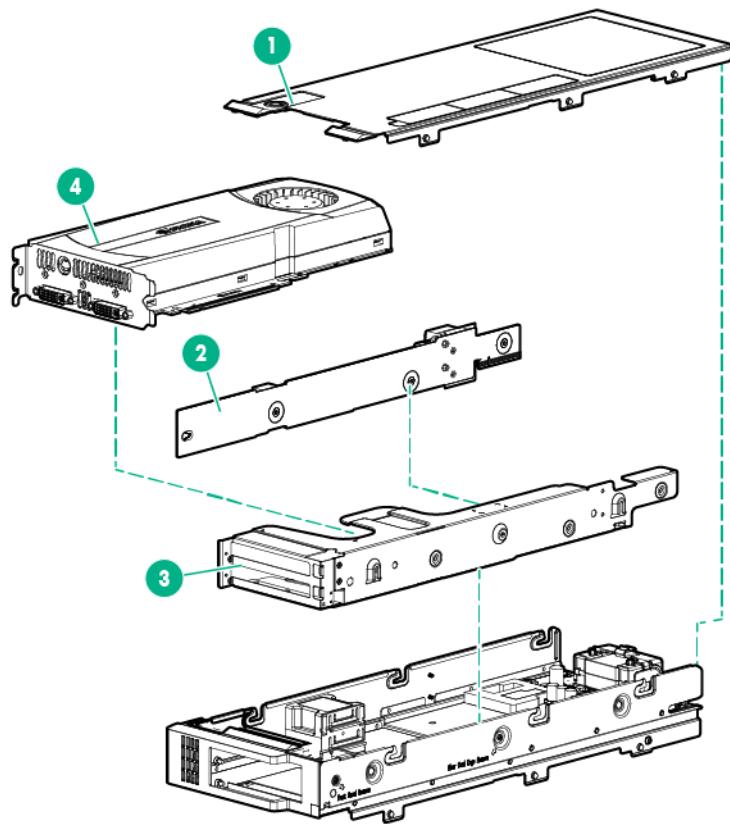

Item	Description	Spare part number	Customer self repair (on page 5)
1	Expansion blade access panel	777681-001	Mandatory <sup>1</sup>
2	Expansion blade riser board	792949-001	Optional <sup>2</sup>
3	Expansion blade PCIe card cage	—	Optional <sup>2</sup>
4	Graphics card options	—	—
	a) NVIDIA Quadro 4000 graphics card	736757-001	Mandatory <sup>1</sup>
	b) NVIDIA Quadro 5000 graphics card*	736758-001	Mandatory <sup>1</sup>
	c) NVIDIA Quadro 6000 graphics card*	736859-001	Mandatory <sup>1</sup>
	d) NVIDIA GRID K1 PCIe GPU*	736759-001	Mandatory <sup>1</sup>
	e) NVIDIA GRID K2 PCIe GPU*	732635-001	Mandatory <sup>1</sup>
	f) NVIDIA Quadro M5000 GPU*	826220-001	Mandatory <sup>1</sup>
	g) NVIDIA Quadro M6000 GPU*	813432-001	Mandatory <sup>1</sup>
5	Expansion blade power board*	792950-001	Optional <sup>2</sup>
6	Graphics expansion control cables	—	—
	a) Graphics expansion control cable, PCIe, short*	715289-001	Mandatory <sup>1</sup>
	b) Graphics expansion control cable, PCIe, long*	715290-001	Mandatory <sup>1</sup>
7	HPE Gen9 MultiGPU Carrier PCA*	811100-001	No <sup>3</sup>
8	HPE Gen9 MultiGPU 3 NV K3100M*	753112-001	No <sup>3</sup>

\*Not shown

<sup>1</sup>Mandatory—Parts for which customer self repair is mandatory. If you request Hewlett Packard Enterprise to replace these parts, you will be charged for the travel and labor costs of this service.

<sup>2</sup>Optional—Parts for which customer self repair is optional. These parts are also designed for customer self repair. If, however, you require that Hewlett Packard Enterprise replace them for you, there may or may not be additional charges, depending on the type of warranty service designated for your product.

<sup>3</sup>No—Some Hewlett Packard Enterprise parts are not designed for customer self repair. In order to satisfy the customer warranty, Hewlett Packard Enterprise requires that an authorized service provider replace the part. These parts are identified as "No" in the Illustrated Parts Catalog.

<sup>1</sup>Obligatoire—Pièces pour lesquelles le client doit procéder lui-même aux réparations. Si vous demandez à Hewlett Packard Enterprise de procéder au remplacement de ces pièces, les frais de transport et de main d'œuvre pour ce service vous seront facturés.

<sup>2</sup>Facultatif—Pièces pour lesquelles une réparation par le client est facultative. Ces pièces sont également conçues pour que le client puisse procéder lui-même aux réparations. Cependant, les frais supplémentaires engendrés par le remplacement de ces pièces par Hewlett Packard Enterprise dépendent du type de service de garantie désigné pour votre produit.

<sup>3</sup>Non—Certaines pièces Hewlett Packard Enterprise ne sont pas conçues pour être remplacées par le client. Afin de se conformer aux exigences de la garantie la garantie du client, Hewlett Packard Enterprise demande à un fournisseur de services agréé de procéder au remplacement de la pièce. Ces pièces sont signalées par le mot « Non » dans le Catalogue de pièces illustré.

<sup>1</sup>Obbligatorio—Parti per le quali il cliente è tenuto a effettuare autonomamente la riparazione. Se si richiede l'intervento di Hewlett Packard Enterprise per la sostituzione di queste parti, al cliente verranno addebitate le spese di viaggio e manodopera dell'operazione.

<sup>2</sup>Facoltativo—Parti per le quali la riparazione in autonomia da parte del cliente è facoltativa. Queste parti sono progettate per consentire anche la riparazione da parte del cliente. Tuttavia, se il cliente richiede l'intervento di Hewlett Packard Enterprise per la sostituzione, potrebbero essere addebitate spese aggiuntive a seconda del tipo di garanzia in assistenza previsto per il prodotto.

<sup>3</sup>No—Alcune parti Hewlett Packard Enterprise non sono progettate la riparazione in autonomia da parte del cliente. In base a quanto previsto dalla garanzia per il cliente, Hewlett Packard Enterprise richiede l'intervento di un tecnico autorizzato per la sostituzione della parte. Queste parti sono contrassegnate con "No" nel catalogo parti illustrato.

<sup>1</sup>Zwingend—Teile, für die das Customer Self Repair-Verfahren zwingend vorgegeben ist. Wenn Sie den Austausch dieser Teile von Hewlett Packard Enterprise vornehmen lassen, werden Ihnen die Anfahrt- und Arbeitskosten für diesen Service berechnet.

<sup>2</sup>Optional—Teile, für die das Customer Self Repair-Verfahren optional ist. Diese Teile sind auch für Customer Self Repair ausgelegt. Wenn Sie jedoch den Austausch dieser Teile von Hewlett Packard Enterprise vornehmen lassen möchten, können bei diesem Service je nach den für Ihr Produkt vorgesehenen Garantiebedingungen zusätzliche Kosten anfallen.

<sup>3</sup>Nein—Einige Hewlett Packard Enterprise Teile sind nicht für Customer Self Repair ausgelegt. Um den Garantieanspruch des Kunden zu erfüllen, muss das Teil von einem Hewlett Packard Enterprise Servicepartner ersetzt werden. Im illustrierten Teilekatalog sind diese Teile mit „No“ bzw. „Nein“ gekennzeichnet.

<sup>1</sup>Obligatorio—Componentes cuya reparación por parte del usuario es obligatoria. Si solicita a Hewlett Packard Enterprise que realice la sustitución de estos componentes, tendrá que hacerse cargo de los gastos de desplazamiento y de mano de obra de dicho servicio.

<sup>2</sup>Opcional—Componentes cuya reparación por parte del usuario es opcional. Estos componentes también están diseñados para que puedan ser reparados por el usuario. Sin embargo, si precisa que Hewlett Packard Enterprise realice su sustitución, puede o no conllevar costes adicionales, dependiendo del tipo de servicio de garantía correspondiente al producto.

<sup>3</sup>No—Algunos componentes de Hewlett Packard Enterprise no están diseñados para que puedan ser reparados por el usuario. Para que el usuario haga valer su garantía, Hewlett Packard Enterprise pone como condición que un proveedor de servicios autorizado realice la sustitución de estos componentes. Dichos componentes se identifican con la palabra "No" en el catálogo ilustrado de componentes.

<sup>1</sup>Verplicht—Onderdelen die de klant zelf moet vervangen. Als u Hewlett Packard Enterprise vraagt deze onderdelen te vervangen, worden er reis- en arbeidskosten voor deze service in rekening gebracht.

<sup>2</sup>Optioneel—Onderdelen die de klant zelf kan vervangen. Deze onderdelen zijn ook ontworpen om door de klant zelf te worden vervangen. Als u Hewlett Packard Enterprise verzoekt om deze te vervangen, kan het zijn dat hiervoor extra kosten in rekening worden gebracht, afhankelijk van het soort garantie dat op uw product van toepassing is.

<sup>3</sup>Geen—Sommige onderdelen van Hewlett Packard Enterprise zijn niet ontworpen om door de klant zelf te worden vervangen. Om te voldoen aan de garantieverwaarden eist Hewlett Packard Enterprise dat een geautoriseerde

serviceverlener het onderdeel vervangt. Deze onderdelen worden aangeduid met 'Geen' in de geïllustreerde onderdelencatalogus.

<sup>1</sup>Obrigatório—Peças cujo reparo feito pelo cliente é obrigatório. Se desejar que a Hewlett Packard Enterprise substitua essas peças, serão cobradas as despesas de transporte e mão-de-obra do serviço.

<sup>2</sup>Opcional—Peças cujo reparo feito pelo cliente é opcional. Essas peças também são projetadas para o reparo feito pelo cliente. No entanto, se desejar que a Hewlett Packard Enterprise as substitua, pode haver ou não a cobrança de taxa adicional, dependendo do tipo de serviço de garantia destinado ao produto.

<sup>3</sup>Não—Algumas peças da Hewlett Packard Enterprise não são projetadas para o reparo feito pelo cliente. A fim de cumprir a garantia do cliente, a Hewlett Packard Enterprise exige que um técnico autorizado substitua a peça. Essas peças estão identificadas com a marca "No" (Não), no catálogo de peças ilustrado.

<sup>1</sup>Mandatory : 必須 — カスタマーセルフリペアが必須の部品。当該部品について、もしもお客様がHewlett Packard Enterpriseに交換作業を依頼される場合には、その修理サービスに関する交通費および人件費がお客様に請求されます。

<sup>2</sup>Optional : 任意 — カスタマーセルフリペアが任意である部品。この部品もカスタマーセルフリペア用です。当該部品について、もしもお客様がHewlett Packard Enterpriseに交換作業を依頼される場合には、お買い上げの製品に適用される保証サービス内容の範囲内においては、別途費用を負担していただくことなく保証サービスを受けることができます。

<sup>3</sup>No : 除外 — Hewlett Packard Enterprise製品の一部の部品は、カスタマーセルフリペアの対象外です。製品の保証を継続するためには、Hewlett Packard EnterpriseまたはHewlett Packard Enterprise正規保守代理店による交換作業が必須となります。部品カタログには、当該部品がカスタマーセルフリペア除外品である旨が記載されています。

<sup>1</sup>Mandatory — 客户必须自行维修的部件。如果您请求 Hewlett Packard Enterprise 更换这些部件，则必须为该服务支付差旅费和人工费用。

<sup>2</sup>Optional — 客户可以选择是否自行维修的部件。这些部件也是为客户自行维修设计的。不过，如果您要求 Hewlett Packard Enterprise 为您更换这些部件，则根据为您的产品指定的保修服务类型，Hewlett Packard Enterprise 可能收取或不再收取任何附加费用。

<sup>3</sup>No — 某些 Hewlett Packard Enterprise 部件的设计并未考虑客户自行维修。为了满足客户保修的需要，Hewlett Packard Enterprise 要求授权服务提供商更换相关部件。这些部件在部件图解目录中标记为“否”。

<sup>1</sup>Mandatory — 客戶自行維修所使用的零件是強制性的。如果您要求 Hewlett Packard Enterprise 更換這些零件，Hewlett Packard Enterprise 將會向您收取此服務所需的外出費用與勞動成本。

<sup>2</sup>Optional — 客戶自行維修所使用的零件是選購的。這些零件也設計用於客戶自行維修之用。不過，如果您要求 Hewlett Packard Enterprise 為您更換，則可能需要也可能不需要負擔額外的費用，端視針對此產品指定的保固服務類型而定。

<sup>3</sup>No — 某些 Hewlett Packard Enterprise 零件沒有消費者可自行維修的設計。為符合客戶保固，Hewlett Packard Enterprise 需要授權的服務供應商更換零件。這些零件在圖示的零件目錄中，被標示為「否」。

<sup>1</sup>Mandatory — 고객 셀프 수리가 의무 사항인 필수 부품. 사용자가 Hewlett Packard Enterprise에 이 부품의 교체를 요청할 경우 해당 서비스에 대한 출장비 및 작업비가 청구됩니다.

<sup>2</sup>Optional — 고객 셀프 수리가 선택 사항인 부품. 이러한 부품들도 고객 셀프 수리가 가능하도록 설계되었습니다. 하지만 사용자가 Hewlett Packard Enterprise에 이러한 부품의 교체를 요청할 경우 사용자가 구입한 제품에 해당하는 보증 서비스 유형에 따라 추가 비용 없이 교체가 가능할 수 있습니다.

<sup>3</sup>No — 일부 Hewlett Packard Enterprise 부품은 고객 셀프 수리가 불가능하도록 설계되었습니다. Hewlett Packard Enterprise는 만족스러운 고객 보증을 위해 공인 서비스 제공업체를 통해 부품을 교체하도록 요구하고 있습니다. 이러한 부품들은 Illustrated Parts Catalog에 "No"라고 표시되어 있습니다.

# Removal and replacement procedures

## Required tools

You need the following items for some procedures:

- T-10 Torx screwdriver
- T-15 Torx screwdriver
- HPE Insight Diagnostics software ("HPE Insight Diagnostics" on page 76)

## Safety considerations

Before performing service procedures, review all the safety information.

### Preventing electrostatic discharge

To prevent damaging the system, be aware of the precautions you need to follow when setting up the system or handling parts. A discharge of static electricity from a finger or other conductor may damage system boards or other static-sensitive devices. This type of damage may reduce the life expectancy of the device.

To prevent electrostatic damage:

- Avoid hand contact by transporting and storing products in static-safe containers.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free workstations.
- Place parts on a grounded surface before removing them from their containers.
- Avoid touching pins, leads, or circuitry.
- Always be properly grounded when touching a static-sensitive component or assembly.

### Server blade warnings and cautions



**WARNING:** To reduce the risk of shock or injury from high-current electrical energy, do not remove the graphics server blade access panel and then install the graphics server blade into the enclosure.



**WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.



**CAUTION:** Do not operate the graphics server blade with the access panel removed. Operating the graphics server blade in this manner results in improper airflow and improper cooling that can lead to thermal damage.



**CAUTION:** When performing non-hot-plug operations, you must power down the server blade and/or the system. However, it may be necessary to leave the server blade powered up when performing other operations, such as hot-plug installations or troubleshooting.

# Symbols on equipment

The following symbols may be placed on equipment to indicate the presence of potentially hazardous conditions.



This symbol indicates the presence of hazardous energy circuits or electric shock hazards. Refer all servicing to qualified personnel.

**WARNING:** To reduce the risk of injury from electric shock hazards, do not open this enclosure. Refer all maintenance, upgrades, and servicing to qualified personnel.



This symbol indicates the presence of electric shock hazards. The area contains no user or field serviceable parts. Do not open for any reason.

**WARNING:** To reduce the risk of injury from electric shock hazards, do not open this enclosure.



This symbol on an RJ-45 receptacle indicates a network interface connection.

**WARNING:** To reduce the risk of electric shock, fire, or damage to the equipment, do not plug telephone or telecommunications connectors into this receptacle.



This symbol indicates the presence of a hot surface or hot component. If this surface is contacted, the potential for injury exists.

**WARNING:** To reduce the risk of injury from a hot component, allow the surface to cool before touching.



217.7 kg  
480.0 lb

This symbol indicates that the component exceeds the recommended weight for one individual to handle safely.

**WARNING:** To reduce the risk of personal injury or damage to the equipment, observe local occupational health and safety requirements and guidelines for manual material handling.



These symbols, on power supplies or systems, indicate that the equipment is supplied by multiple sources of power.

**WARNING:** To reduce the risk of injury from electric shock, remove all power cords to completely disconnect power from the system.

# Preparation procedures

To access some components and perform certain service procedures, you must perform one or more of the following procedures:

- Power down the graphics server blade (on page [25](#)).
- Remove the graphics blade (on page [26](#)).
- Remove the expansion blade front bezel ("Remove the expansion module front bezel" on page [29](#)).
- Remove the retaining block (on page [29](#)).
- Remove the expansion module from the host side ("Remove the expansion blade from the host side" on page [30](#)).

## Power down the graphics server blade

Before powering down the graphics server blade for any upgrade or maintenance procedures, perform a backup of critical server data and programs.



**IMPORTANT:** When the graphics server blade is in standby mode, auxiliary power is still being provided to the system.

Depending on the Onboard Administrator configuration, use one of the following methods to power down the graphics server blade:

- Press and release the Power On/Standby button.  
This method initiates a controlled shutdown of applications and the OS before the graphics server blade enters standby mode.
- Press and hold the Power On/Standby button for more than 4 seconds to force the graphics server blade to enter standby mode.  
This method forces the graphics server blade to enter standby mode without properly exiting applications and the OS. If an application stops responding, you can use this method to force a shutdown.
- Use a virtual power button selection through HPE iLO.  
This method initiates a controlled remote shutdown of applications and the OS before the graphics server blade enters standby mode.
- Use the Onboard Administrator CLI to execute one of the following commands:
  - `poweroff server [bay number]`  
This command initiates a controlled shutdown of applications and the OS before the graphics server blade enters standby mode.
  - `poweroff server [bay number] force`  
This form of the command forces the graphics server blade to enter standby mode without properly exiting applications and the OS. If an application stops responding, this method forces a shutdown.
- Use the Onboard Administrator GUI to initiate a shutdown:
  - a. Select the **Enclosure Information** tab.
  - b. In the Device Bays item, select the **Overall** checkbox.
  - c. From the Virtual Power menu, initiate a shutdown of applications and the OS:
    - For a controlled shutdown, select **Momentary Press**.
    - For an emergency shutdown, select **Press and Hold**.

Before proceeding, verify the graphics server blade is in standby mode by observing that the system power LED is amber.


## Remove the graphics blade

The steps in this procedure apply to removing a single-wide blade or a double-wide graphics blade.

To remove the blade:

1. Identify the proper graphics server blade.
2. Power down the graphics server blade (on page [25](#)).

3. Remove the graphics server blade.

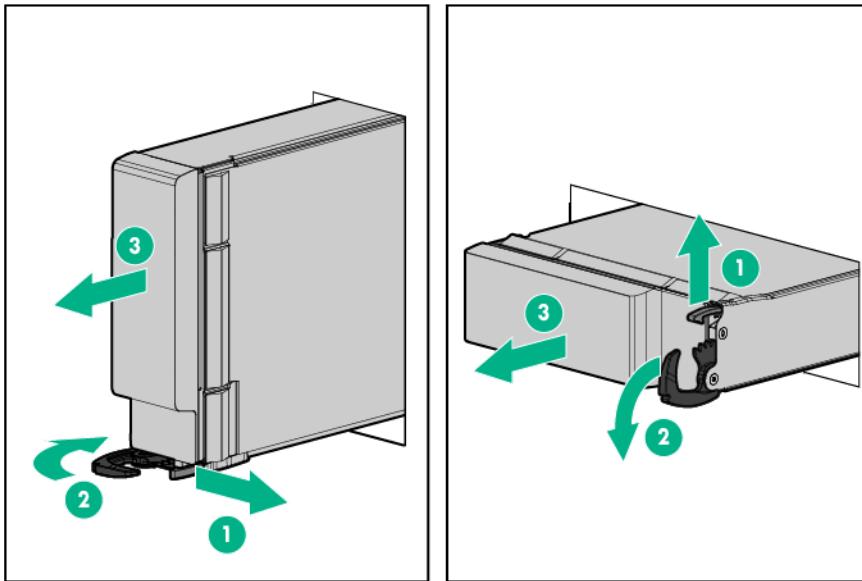

4. Place the graphics server blade on a flat, level work surface.



**WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.




**CAUTION:** To prevent damage to electrical components, properly ground the graphics server blade before beginning any installation procedure. Improper grounding can cause ESD.

## Remove the foam gasket


1. Power down the graphics server blade (on page 25).
2. Remove the graphics server blade ("Remove the graphics blade" on page 26).
3. Place the graphics server blade on a flat, level work surface.
4. Remove the expansion blade access panel ("Expansion blade access panel" on page 31).
5. Remove the expansion module front bezel (on page 29).

6. Remove the foam gasket.

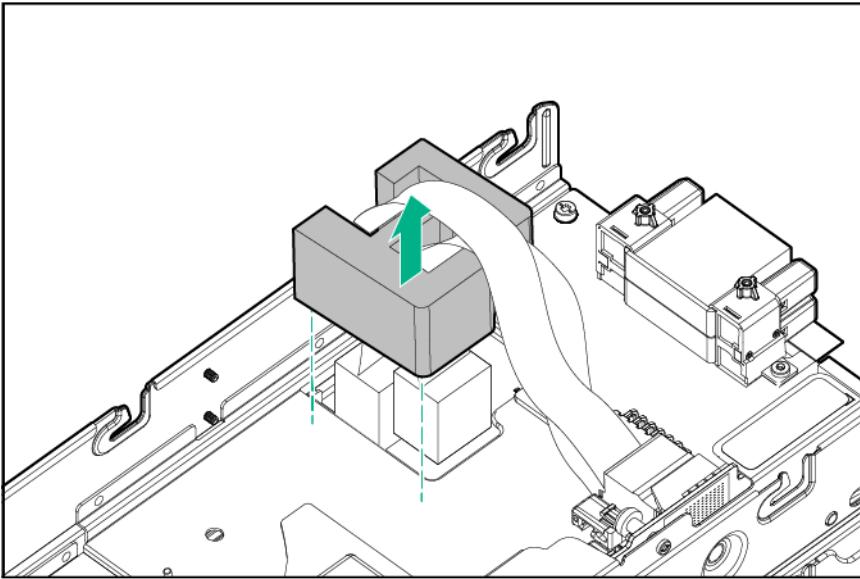


## Remove the expansion blade PCIe card cage

1. Power down the graphics server blade (on page [25](#)).
2. Remove the graphics server blade ("Remove the graphics blade" on page [26](#)).
3. Place the graphics server blade on a flat, level work surface.
4. Remove the expansion blade access panel ("Expansion blade access panel" on page [31](#)).
5. Remove the expansion module front bezel (on page [29](#)).
6. Remove the foam gasket (on page [27](#)).
7. Disconnect the power cable from the expander power board and the PCI graphics option.
8. Remove the graphics expansion control cable.
9. Remove the retaining block (on page [29](#)).
10. Remove the expansion blade PCIe card cage.

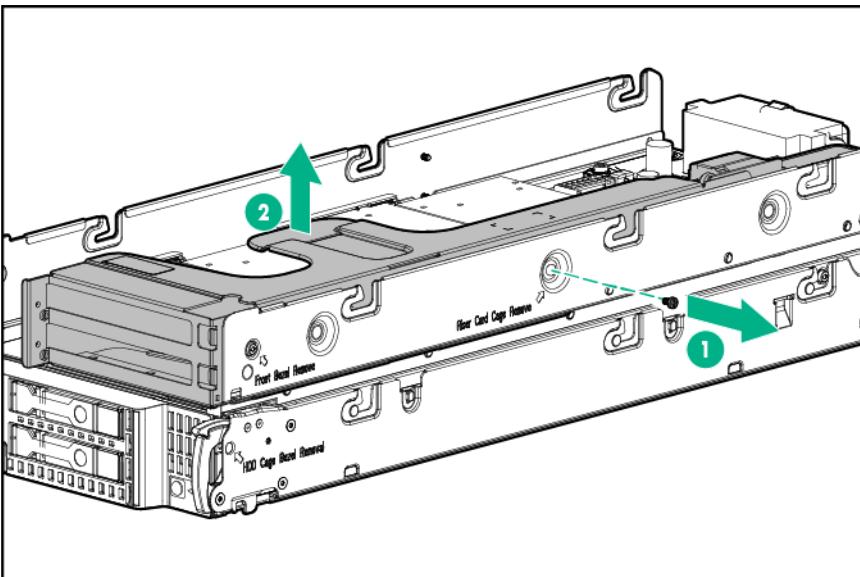

## Remove the expansion module front bezel


1. Power down the graphics server blade (on page 25).
2. Remove the graphics server blade ("Remove the graphics blade" on page 26).
3. Place the graphics server blade on a flat, level work surface.
4. Remove the expansion blade access panel ("Expansion blade access panel" on page 31).
5. Remove the expansion blade front bezel.

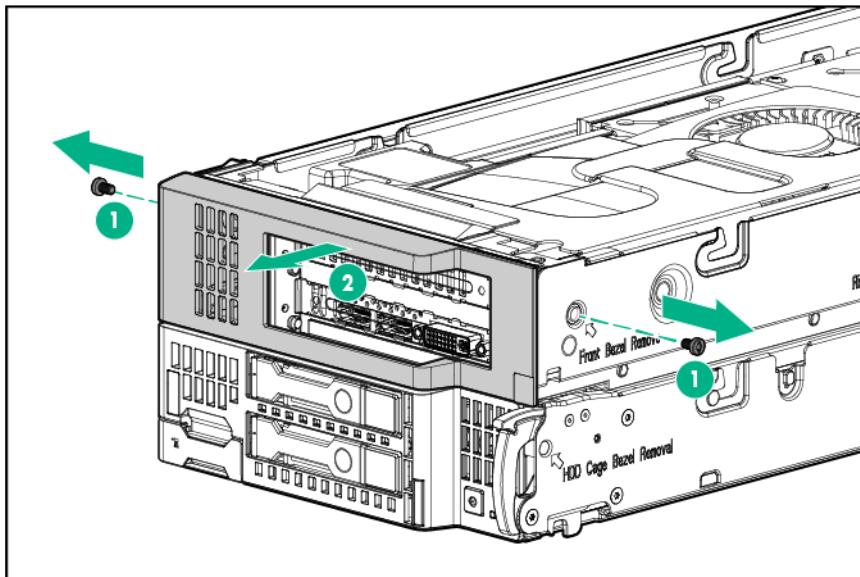

## Remove the retaining block


1. Power down the graphics server blade (on page 25).
2. Remove the graphics server blade ("Remove the graphics blade" on page 26).
3. Place the graphics server blade on a flat, level work surface.
4. Remove the expansion blade access panel ("Expansion blade access panel" on page 31).
5. Remove the expansion module front bezel (on page 29).

6. Remove the retaining block.

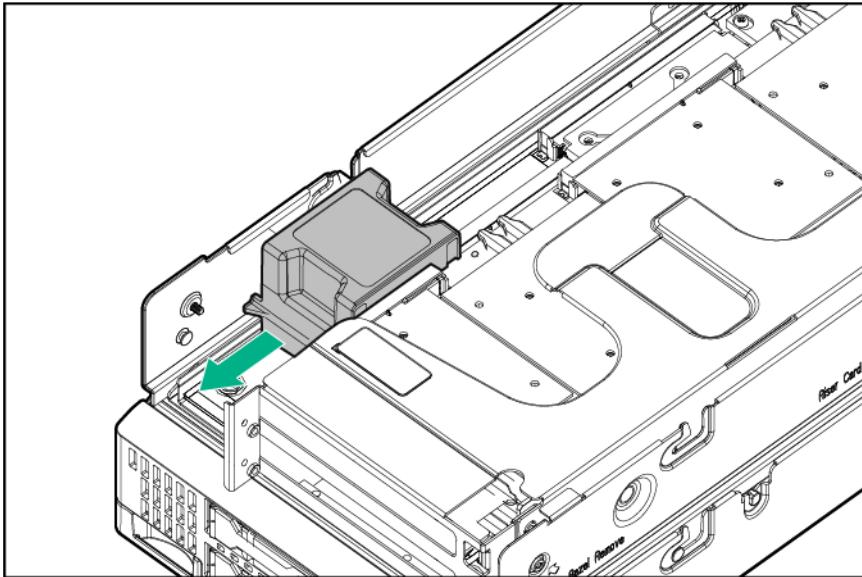

## Remove the expansion blade from the host side

1. Power down the graphics server blade (on page 25).
2. Remove the graphics server blade ("Remove the graphics blade" on page 26).
3. Place the graphics server blade on a flat, level work surface.
4. Remove the expansion blade access panel ("Expansion blade access panel" on page 31).
5. Remove the foam gasket (on page 27).
6. Disconnect the power cable from the expander power board and the PCI graphics option.
7. Remove the graphics expansion control cable.
8. Remove the expansion module from the host server.

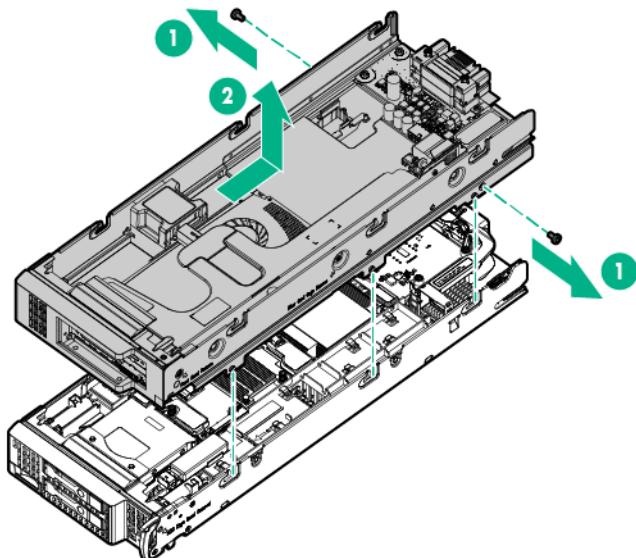

# Access panel (graphics server blade)

To remove the component:

1. Power down the graphics server blade (on page 25).
2. Remove the graphics server blade ("Remove the graphics blade" on page 26).
3. Press the access panel release button.
4. Slide the access panel towards the rear of the graphics server blade, and then lift to remove the panel.


To replace the component:

1. Place the access panel on top of the graphics server blade.
2. Slide the access panel forward until it clicks into place.

# Expansion blade access panel

To remove the component:

1. Power down the graphics server blade (on page 25).
2. Remove the graphics server blade ("Remove the graphics blade" on page 26).
3. Place the graphics server blade on a flat, level work surface.
4. Remove the access panel.

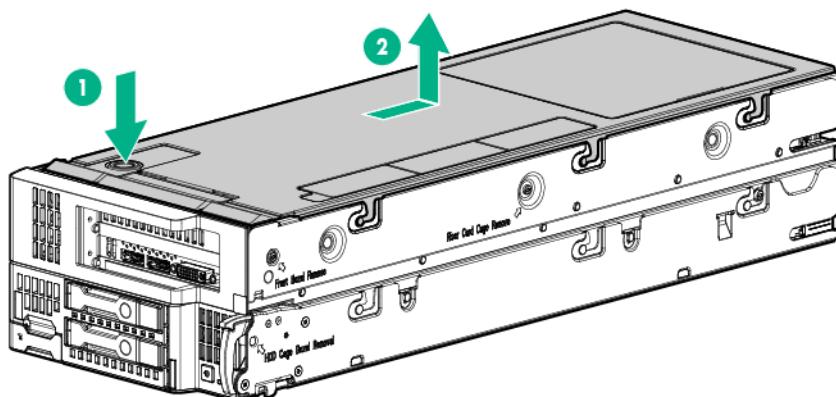


To replace the component, reverse the removal procedure.

# Expansion blade PCIe card cage

To remove the component:

1. Power down the graphics server blade (on page 25).
2. Remove the graphics server blade ("Remove the graphics blade" on page 26).
3. Place the graphics server blade on a flat, level work surface.
4. Remove the expansion blade access panel ("Expansion blade access panel" on page 31).
5. Remove the expansion module front bezel (on page 29).


6. Remove the foam gasket (on page 27).
7. Disconnect the power cable from the expander power board and the PCI graphics option.
8. Remove the graphics expansion control cable.
9. Remove the retaining block (on page 29).
10. Remove the expansion blade PCIe card cage.

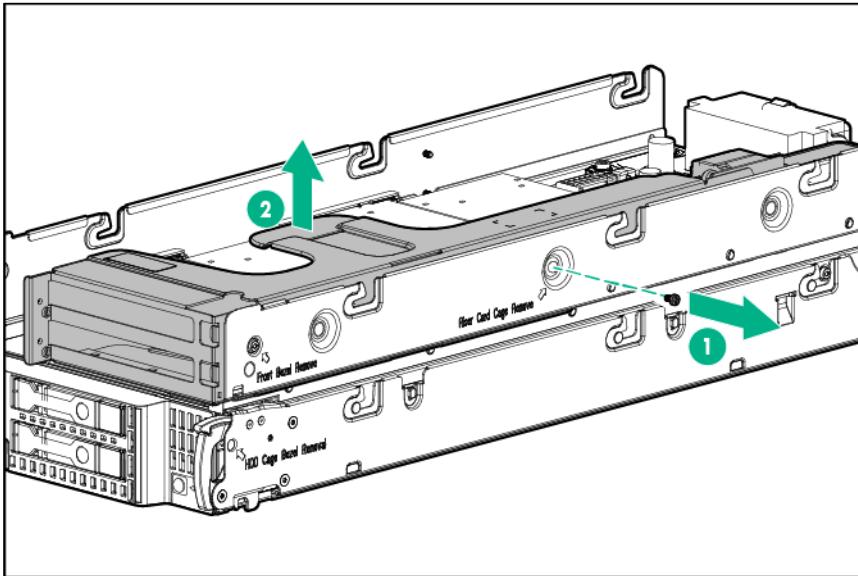

To replace the component, reverse the removal procedure.

## Drive blank

Remove the component as indicated.

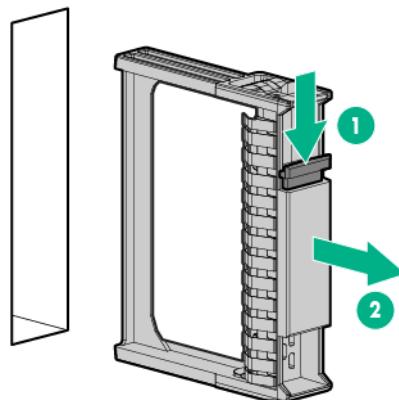


**CAUTION:** To prevent improper cooling and thermal damage, do not operate the server unless all bays are populated with either a component or a blank.

To replace the blank, slide the blank into the bay until it locks into place.

# Drive

To remove the component:

1. Determine the status of the drive from the drive LED definitions ("Hot-plug drive LED definitions" on page 90).
2. Back up all data on the drive.
3. Remove the drive.

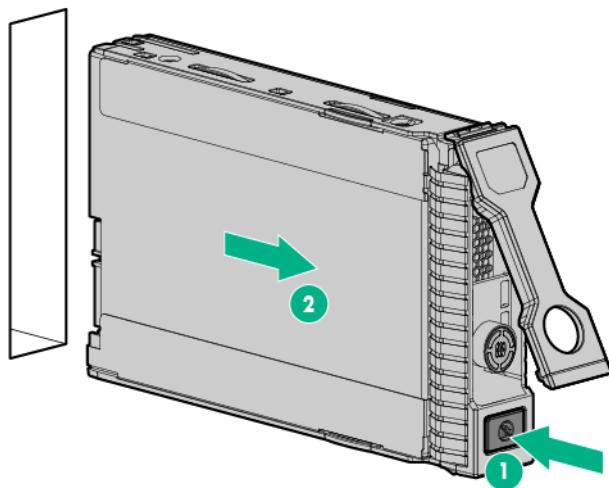


To replace the drive, slide the drive into the bay until it is fully seated, and then close the latch handle to lock the drive in the bay.

# Enclosure connector cover

To remove the component:

1. Place the graphics server blade on a flat, level work surface.
2. Remove the enclosure connector cover.

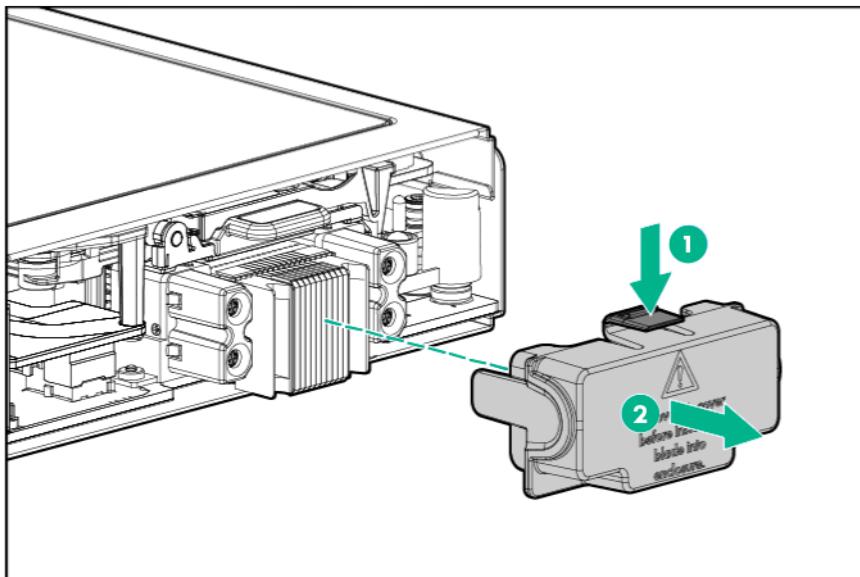


To replace the component, reverse the removal procedure.

# Mezzanine assembly


To remove the component:

1. Back up all graphics server blade data.
2. Power down the graphics server blade (on page 25).
3. Remove the graphics server blade ("Remove the graphics blade" on page 26).
4. Place the graphics server blade on a flat, level work surface.
5. Remove the access panel ("Access panel (graphics server blade)" on page 31).
6. Remove the mezzanine assembly.

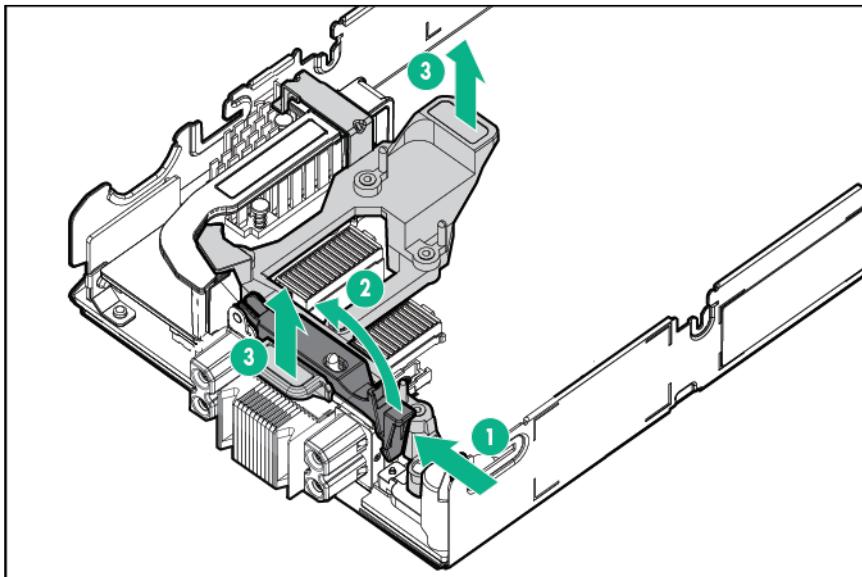

To replace the component:

1. Align the mezzanine assembly with the guide pins on the system board, and then install the mezzanine assembly on the system board.
2. Press down firmly on the mezzanine assembly handles, and then close the mezzanine assembly latch.

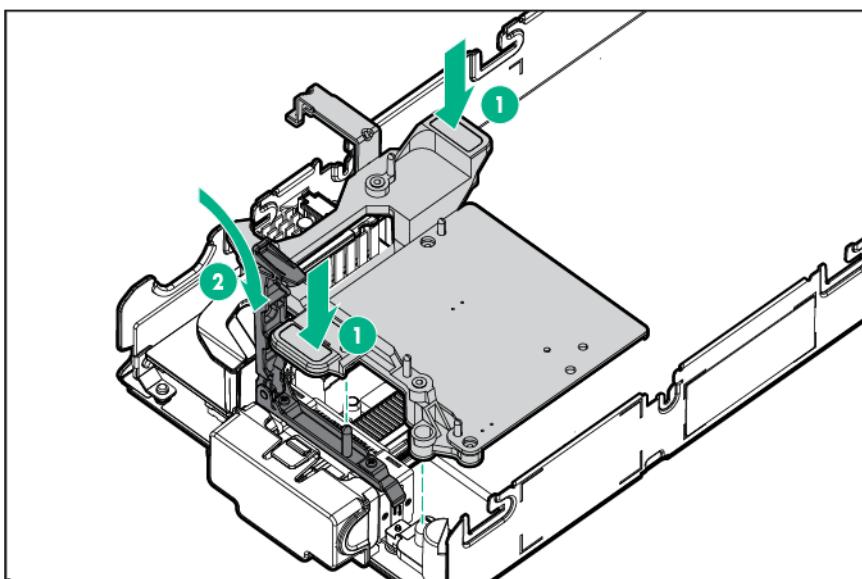

3. Install the access panel.
4. Install the graphics server blade.

## Mezzanine board options

Mezzanine options are installed only on the Mezzanine 1 and Mezzanine 2 connectors found on the system board of the single-width blade or host-side of the double-width blade. The procedure for these options is not the same procedure for installing options on the expansion-side on the double width-blade.


Be sure that the type of mezzanine card being installed is supported on the mezzanine connector being used. To locate the mezzanine connectors, see "System board components (on page 91)." For information about the mezzanine connectors, see "Mezzanine connector definitions (on page 92)."

This graphics server blade supports multiple mezzanine options. For more information, see the product QuickSpecs on the Hewlett Packard Enterprise website (<http://www.hpe.com/info/qz>).

## Mezzanine options


To remove the component:

1. Power down the graphics server blade (on page 25).
2. Remove the graphics server blade ("Remove the graphics blade" on page 26).
3. Place the graphics server blade on a flat, level work surface.
4. Remove the access panel ("Access panel (graphics server blade)" on page 31).
5. Remove the mezzanine assembly ("Mezzanine assembly" on page 34).
6. Remove the mezzanine card from the mezzanine assembly.

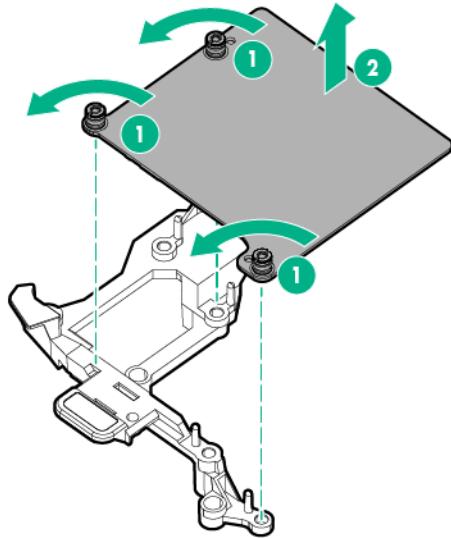


To replace the component:

1. Align the mezzanine card with the guide pins on the mezzanine assembly.

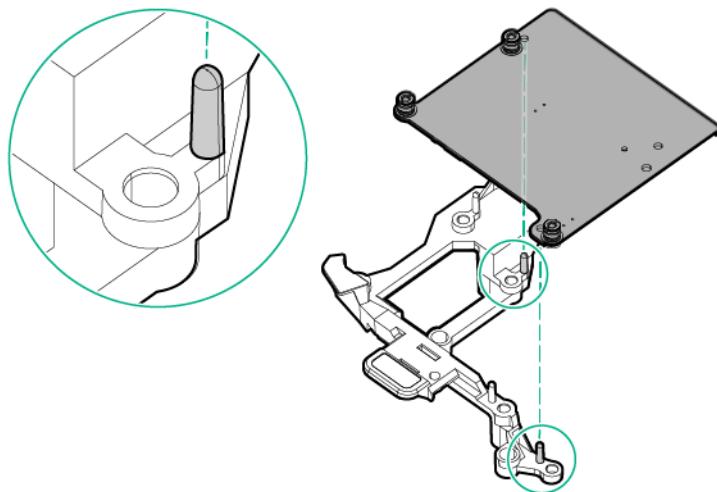


2. Install the mezzanine card in the mezzanine assembly, and then tighten the mezzanine card screws to secure the card to the mezzanine assembly.

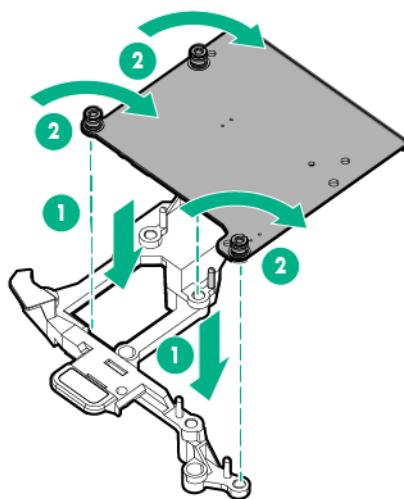

3. Align the mezzanine assembly with the guide pins on the system board, and then install the mezzanine assembly on the system board.

4. Press down firmly on the mezzanine assembly handles, and then close the mezzanine assembly latch.

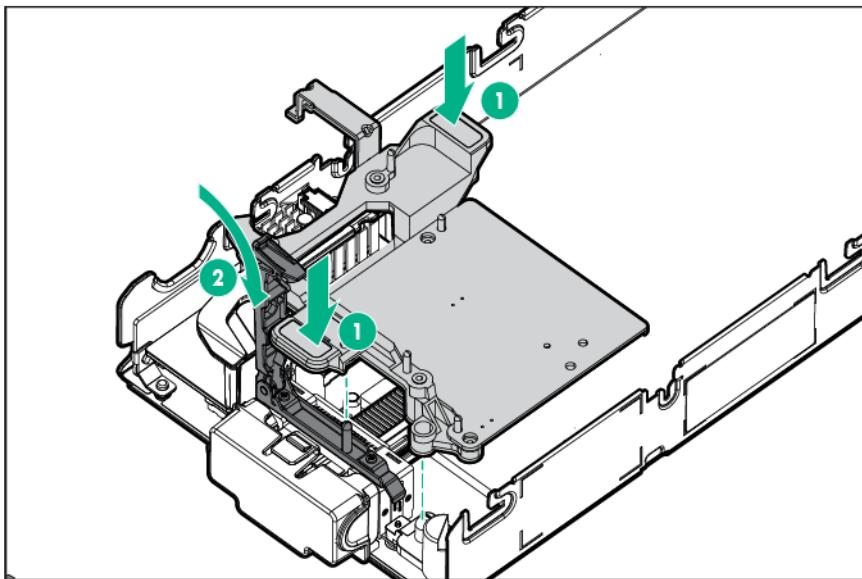

5. Install the access panel.

## PCIe mezzanine pass-through

To remove the component:

1. Power down the graphics server blade (on page [25](#)).
2. Remove the graphics server blade ("Remove the graphics blade" on page [26](#)).
3. Place the graphics server blade on a flat, level work surface.
4. Remove the expansion blade access panel ("Expansion blade access panel" on page [31](#)).
5. Remove the expansion blade front bezel ("Remove the expansion module front bezel" on page [29](#)).
6. Remove the foam gasket (on page [27](#)).
7. Disconnect the power cable from the expander power board and the PCI graphics option.
8. Remove the graphics expansion control cable.
9. Remove the retaining block (on page [29](#)).
10. Remove the expansion blade PCIe card cage (on page [28](#)).
11. Remove the expansion blade from the host side (on page [30](#)).
12. Remove the mezzanine assembly ("Mezzanine assembly" on page [34](#)).
13. Remove the PCIe mezzanine pass-through board ("Mezzanine options" on page [35](#)).

To replace the component, reverse the removal procedure.


## PCIe mezzanine pass-through brackets

The graphics server blade supports up to two PCIe mezzanine pass-through boards. If one PCIe mezzanine pass-through board is installed, install the clear single PCIe mezzanine-pass through bracket on the PCIe mezzanine pass-through board. If two PCIe mezzanine pass-through boards are installed, install the black dual PCIe mezzanine pass-through bracket.


To remove the component:

1. Power down the graphics server blade (on page [25](#)).

2. Remove the graphics server blade ("Remove the graphics blade" on page 26).
3. Place the graphics server blade on a flat, level work surface.
4. Remove the expansion blade access panel ("Expansion blade access panel" on page 31).
5. Remove the expansion blade front bezel ("Remove the expansion module front bezel" on page 29).
6. Remove the foam gasket (on page 27).
7. Disconnect the power cable from the expander power board and the PCI graphics option.
8. Remove the graphics expansion control cable.
9. Remove the retaining block (on page 29).
10. Remove the expansion blade PCIe card cage (on page 28).
11. Remove the expansion blade from the host side (on page 30).
12. Remove the mezzanine assembly ("Mezzanine assembly" on page 34).
13. Remove the PCIe mezzanine pass-through board ("Mezzanine options" on page 35).
14. Remove the PCIe mezzanine pass-through bracket.
  - o Single PCIe mezzanine pass-through bracket

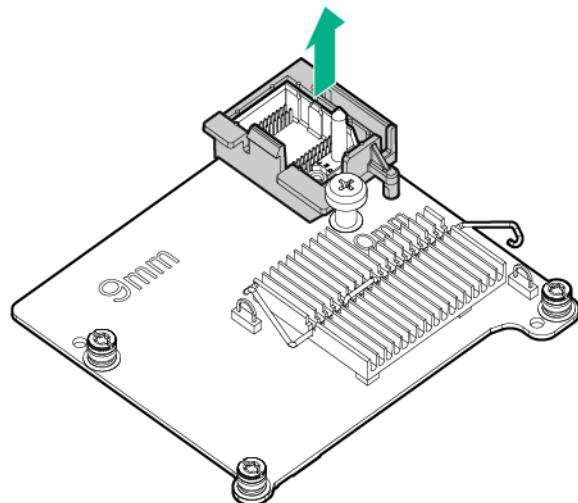

- o Dual PCIe mezzanine pass-through bracket

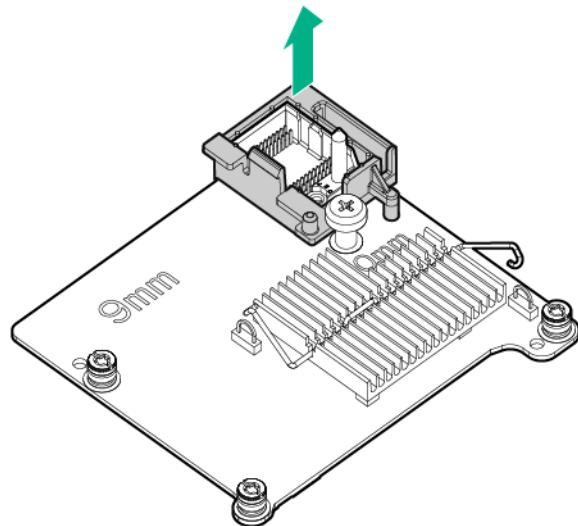

To replace the component, reverse the removal procedure.


## MXM graphics mezzanine module

The MXM board and the mezzanine-GPU module components shown in this procedure might look slightly different than your product. The procedure is not impacted by the difference in appearance of the hardware.


To remove the component:

1. Power down the graphics server blade (on page [25](#)).
2. Remove the graphics server blade ("Remove the graphics blade" on page [26](#)).
3. Place the graphics server blade on a flat, level work surface.
4. Remove the access panel ("Access panel (graphics server blade)" on page [31](#)).
5. Remove the mezzanine assembly ("Mezzanine assembly" on page [34](#)).
6. Remove the mezzanine GPU module from the mezzanine assembly ("Mezzanine options" on page [35](#)).

7. Remove the screws to release the MXM board from the mezzanine GPU module.

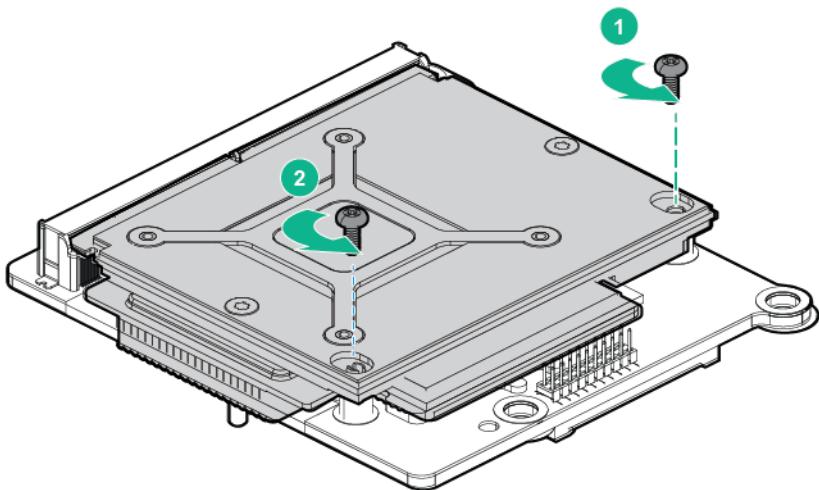

8. Remove the MXM board from the mezzanine GPU module.

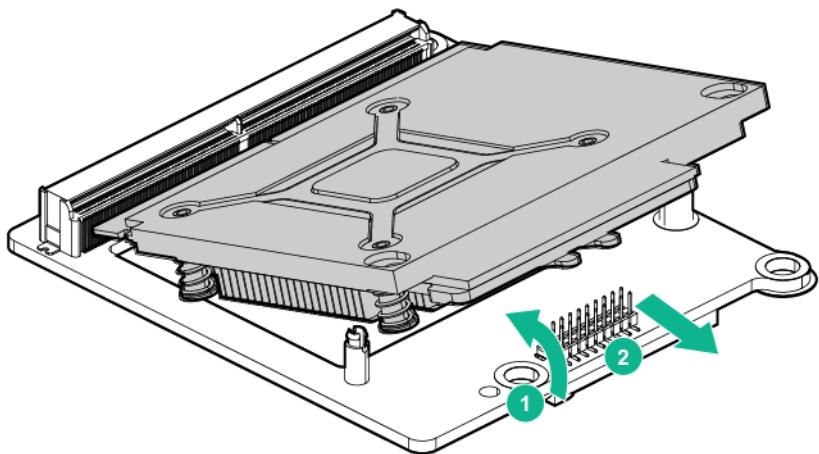

To replace the component, reverse the removal procedure.


## MXM graphics mezzanine heatsink

The MXM board and the mezzanine GPU module components shown in this procedure might look slightly different than your product. The procedure is not impacted by the difference in appearance of the hardware.


To remove the component:

1. Power down the graphics server blade (on page 25).
2. Remove the graphics server blade ("Remove the graphics blade" on page 26).
3. Place the graphics server blade on a flat, level work surface.
4. Remove the access panel ("Access panel (graphics server blade)" on page 31).
5. Remove the mezzanine assembly ("Mezzanine assembly" on page 34).


6. Remove the mezzanine GPU module from the mezzanine assembly ("Mezzanine options" on page 35).
7. Remove the screws to release the MXM board from the mezzanine GPU module.

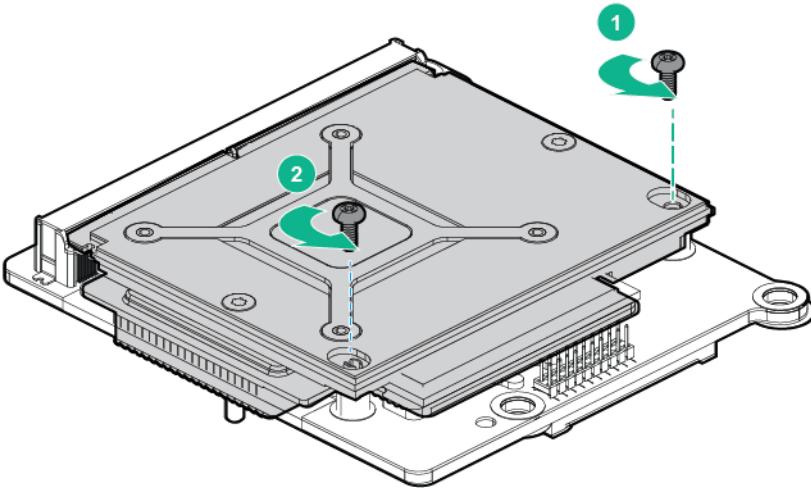

8. Remove the MXM board from the mezzanine GPU module.

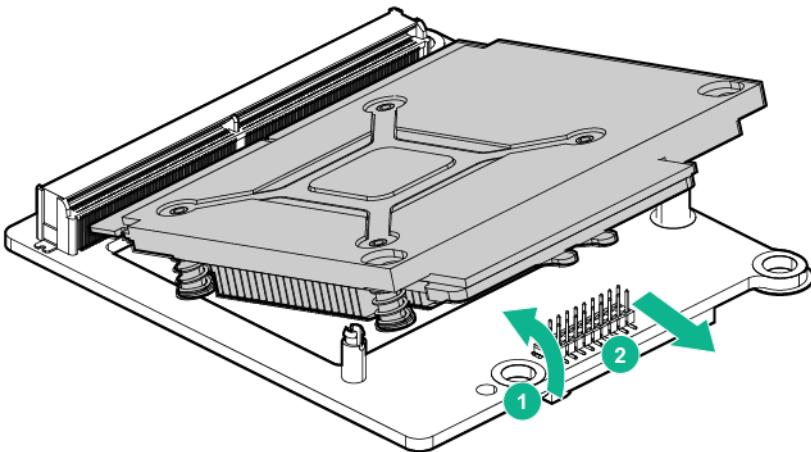

9. Disengage the four heatsink screws and remove the heatsink. Be sure to hold the heatsink bracket in place on the bottom of the MXM board.

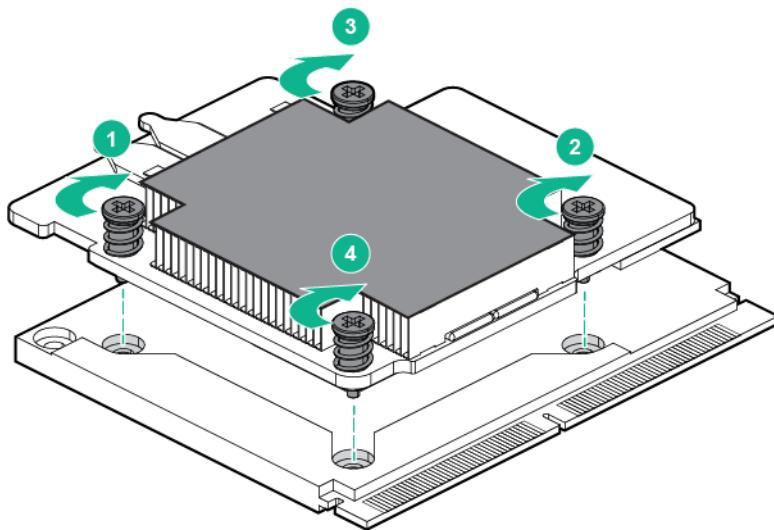

To replace the component, reverse the removal procedure.

## PCIe graphics card options

PCIe graphics cards are supported on the expansion module and installed in expansion blade PCIe card cage. The procedure for replacing graphics cards on the single-width blade is different. For more information, see "Mezzanine options (on page 35)."

Required tools for this procedure:

- T-10/T-15 Torx screwdriver
- Insight Diagnostics software


For a complete list of supported options, see the product QuickSpecs on the Hewlett Packard Enterprise website (<http://www.hpe.com/info/qs>).

## Removing the PCIe graphics card options

To remove the graphics cards from the graphics expansion module:

1. Power down the graphics server blade (on page 25).
2. Remove the graphics server blade ("Remove the graphics blade" on page 26).
3. Remove the expansion blade access panel ("Expansion blade access panel" on page 31).
4. Remove the expansion blade front bezel ("Remove the expansion module front bezel" on page 29).
5. Remove the foam gasket (on page 27).
6. Disconnect the power cable from the expander power board and the PCI graphics option.
7. Remove the graphics expansion control cable.
8. Remove the retaining block (on page 29).
9. Remove the expansion blade PCIe card cage (on page 28).

- Disconnect all cables from the card and remove the graphics card from the expansion blade PCIe card cage.

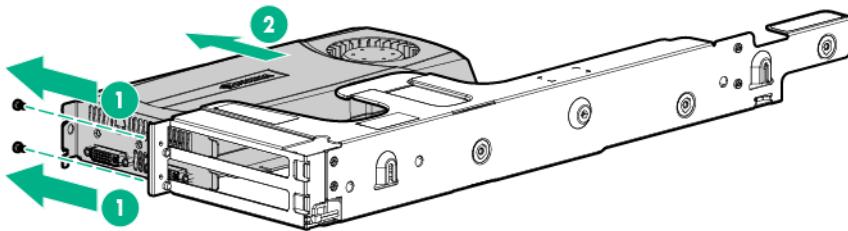


To replace the component, reverse the removal procedure.

## Removing the NVIDIA Grid K1 and K2 I/O Plate

To remove the component:

- Power down the graphics server blade (on page 25).
- Remove the graphics server blade ("Remove the graphics blade" on page 26).
- Place the graphics server blade on a flat, level work surface.
- Remove the expansion blade access panel ("Expansion blade access panel" on page 31).
- Remove the expansion blade front bezel ("Remove the expansion module front bezel" on page 29).
- Remove the foam gasket (on page 27).
- Disconnect the power cable from the expander power board and the PCI graphics option.
- Remove the graphics expansion control cable.
- Remove the retaining block (on page 29).
- Remove the expansion blade PCIe card cage (on page 28).
- Remove the graphics card from the card cage.

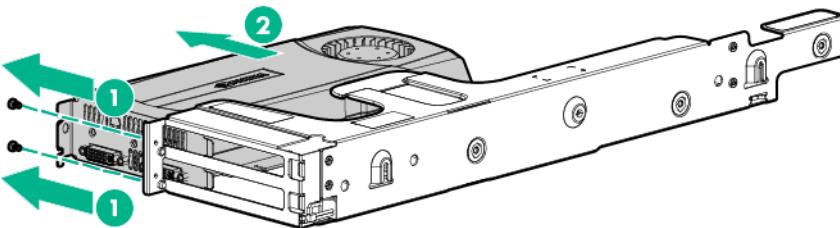


**IMPORTANT:** For NVIDIA GRID K1 installation: Remove the pre-installed I/O plate from the NVIDIA GRID K1 card and replace it with the I/O plate from the original NVIDIA GRID K1 card.




**IMPORTANT:** Remove the I/O plate from the original NVIDIA GRID K2 card. Before installing the NVIDIA GRID K2 I/O plate on the graphics expansion blade, the GRID K2 card I/O plate must be assembled with the new spare part.

1. Remove the I/O plate from the NVIDIA GRID K1 or K2 graphics card removed from the PCI card cage. Make note of the screw types and location for each screw removed. Retain for later use.

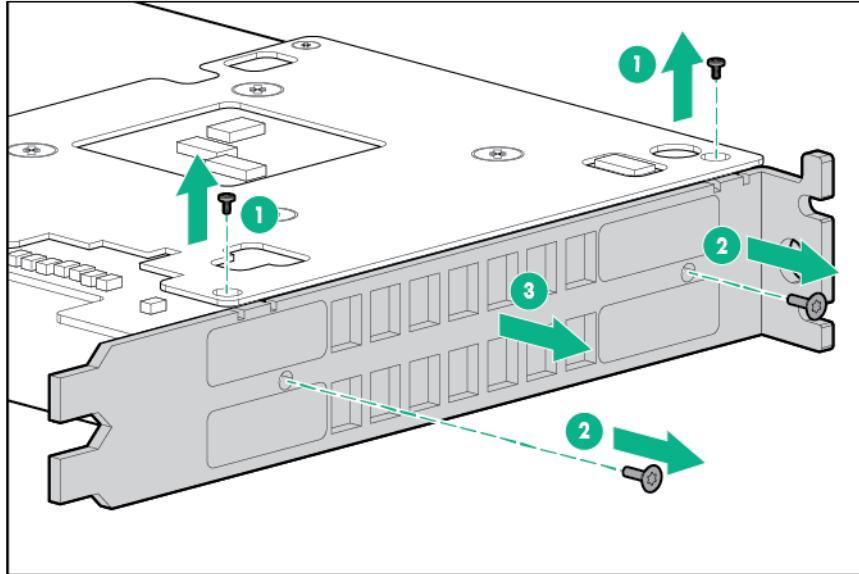


To replace the component:


1. Remove the screws and washers from the graphics card. Make note of the screw type and location, and retain the screws for use later in this procedure. The washers are no longer needed.

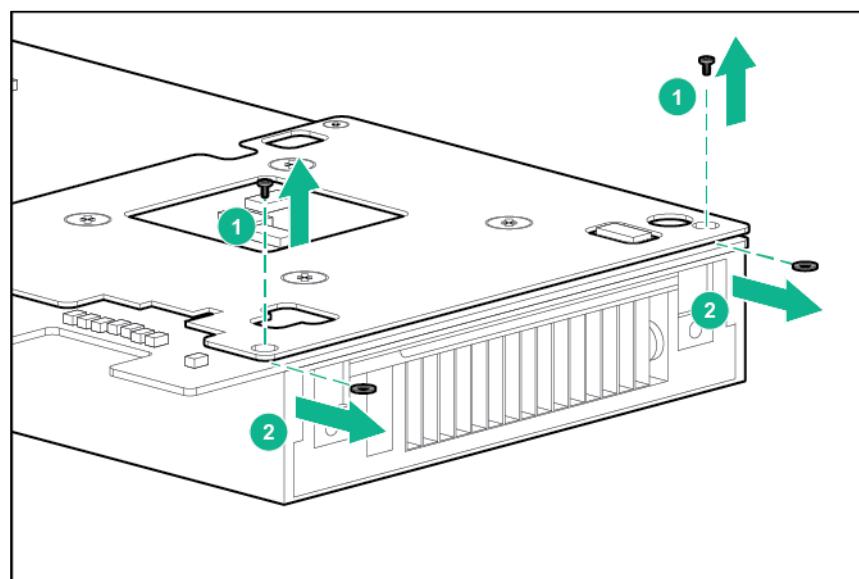

2. Align the plate to the graphics board assembly, and then insert both tabs between the heat spreader and process control board. Do not move the plate.

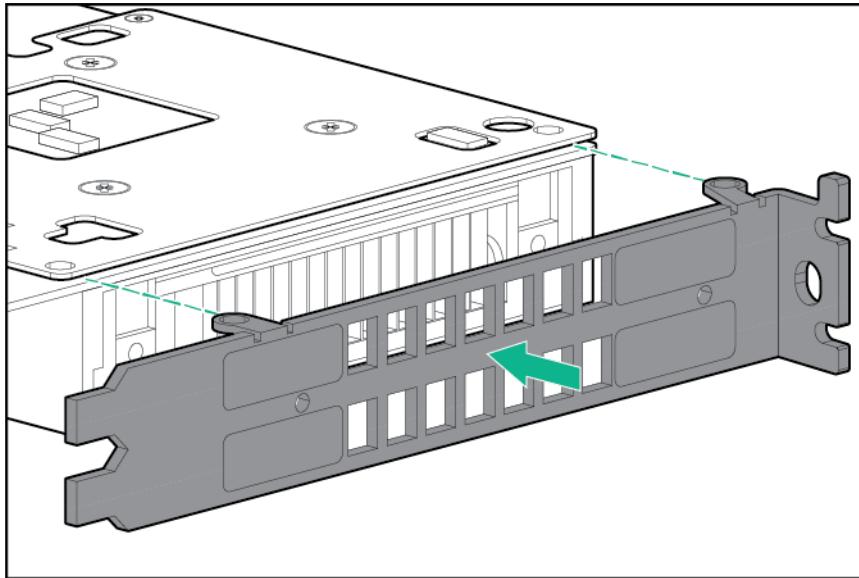


3. Install the M2.5x6 mm flat head screws through the plate hole alignment to the baseplate. Do not apply any torque. Slightly tighten only by hand.  
If the screws lack Nylok coating or are used, add Loctite 242 Threadlocker 3~5 threads from the tip.

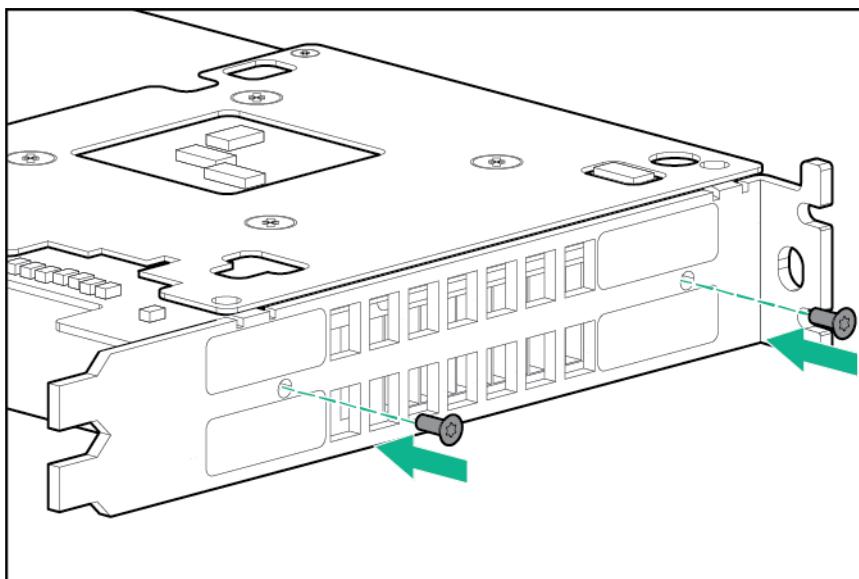


4. Install the M2.5x6 mm wafer head screws (removed earlier) through the heat spreader, plate tab, and process control board hole alignment to the baseplate. Torque both screws to 4.0~4.5 in-lbf.

If the screws do not have Nylok coating, or are used, add Loctite 242 Threadlocker 3~5 threads from the tip.

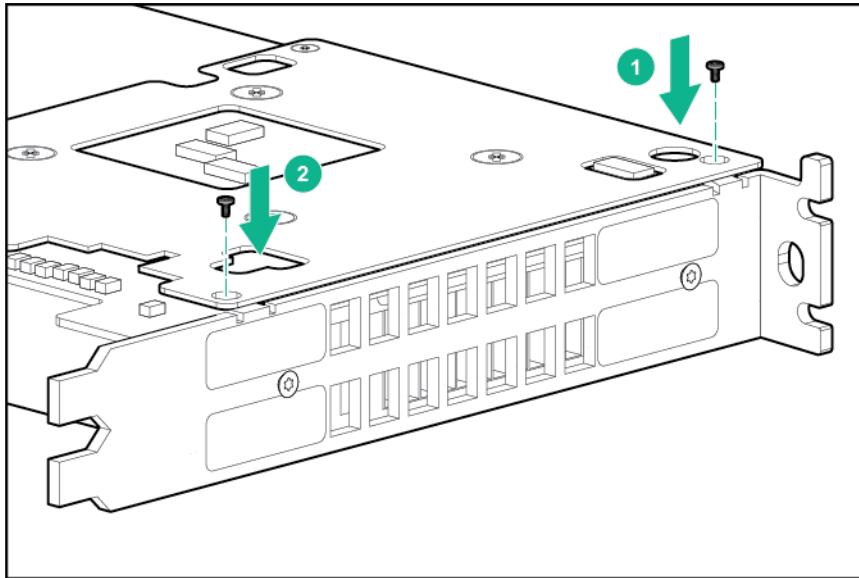


- Secure the screws on the front I/O plate. Torque both front plate screws to 3.0~3.5 in-lbf.

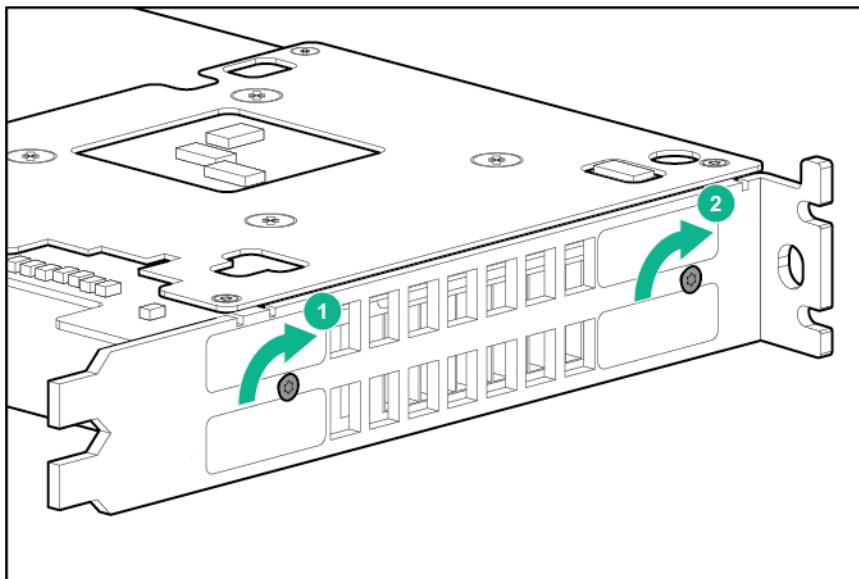


**IMPORTANT:** Ensure that air flow impedance control labels cover the three openings on each end of the I/O plate. These labels control the air flow into the GRID card and balance the air flow to adjacent blades. Using the card in the expansion blade without implementing this measure might potentially result in unexpected host shutdown of the host blade and/or nearby blades in the same enclosure. These labels are replaceable with any commonly available tape or label, as long as the tape or label covers the hole as shown and has construction to withstand the air flow without deforming or falling off when powered off. After installation, always ensure that the labels are not removed or detached.

6. Verify that the air flow impedance control labels cover the three openings on each end of the I/O plate.

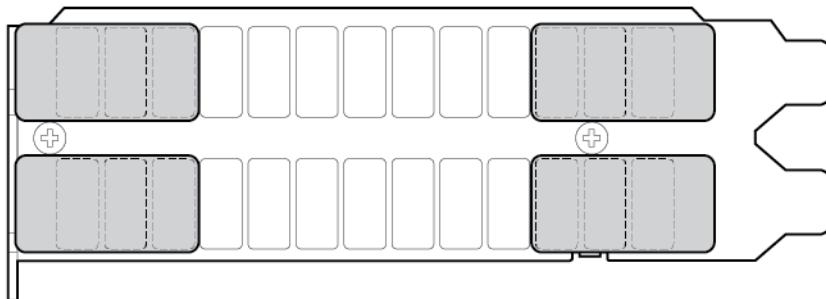

7. Install the new graphics card into the card cage.

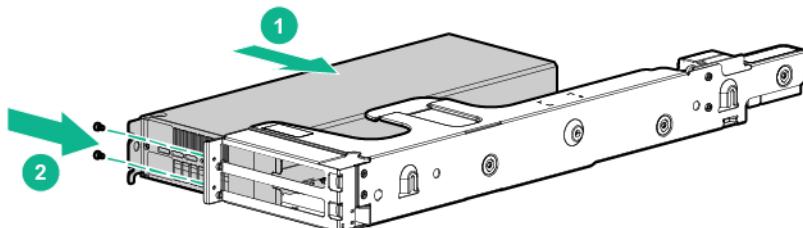


8. Install the expansion blade PCIe card cage.
9. Install the retaining block.
10. Install the graphics expansion control cable.
11. Connect the power cable to the expander power board and the PCI graphics option.
12. Install the foam gasket.
13. Install the expansion module front bezel.
14. Install the access panel ("Access panel (graphics server blade)" on page 31).
15. Install the graphics server blade.
16. Power up the graphics server blade.
17. Download and install the latest drivers from the following websites:
  - o Hewlett Packard Enterprise website (<http://www.hpe.com/info/hpesc>)

- o NVIDIA website (<http://www.nvidia.com/content/drivers/drivers.asp>)

## Graphics expansion control cable


To remove the component:

1. Power down the graphics server blade (on page 25).
2. Remove the graphics server blade ("Remove the graphics blade" on page 26).
3. Place the graphics server blade on a flat, level work surface.
4. Remove the expansion blade access panel ("Expansion blade access panel" on page 31).
5. Remove the foam gasket (on page 27).
6. Disconnect the power cable from the expander power board and the PCI graphics option.
7. Disconnect the graphics expansion control cable from the mezzanine card on the host server. Press down on the host server mezzanine card while disconnecting the cable.  
If two graphics expansion control cables are installed, use this procedure to disconnect both cables.

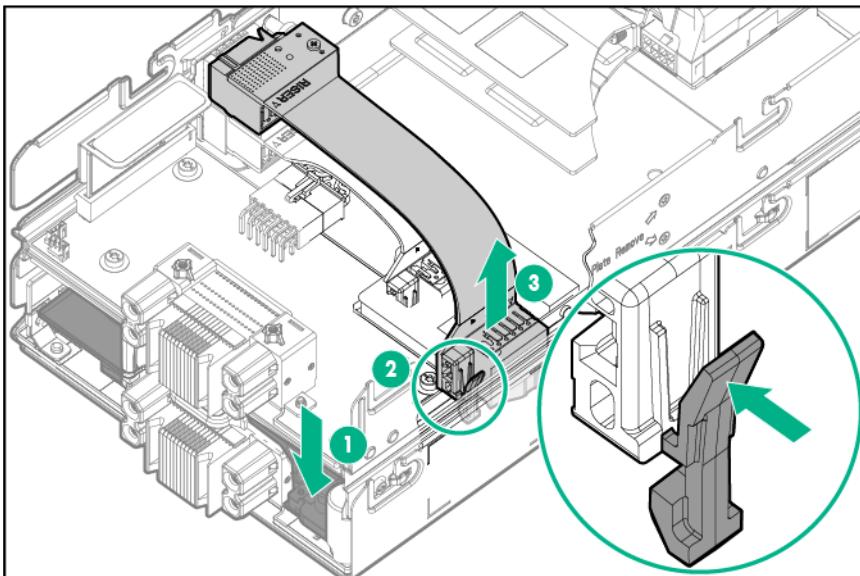

8. Disconnect the graphics expansion control cable from the PCI riser board. If two graphics expansion control cables are installed, use this procedure to disconnect both cables. If only one

graphics expansion control cable is installed, the long cable will be connected in the lower connector on the riser.

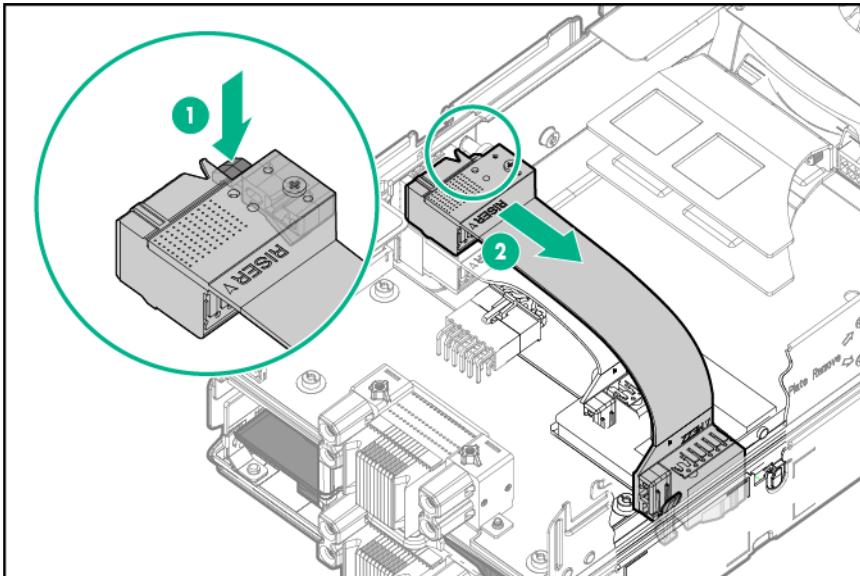


To replace the component, reverse the removal procedure.

## FlexibleLOM

To remove the component:

1. Power down the graphics server blade (on page 25).
2. Remove the graphics server blade ("Remove the graphics blade" on page 26).
3. Place the graphics server blade on a flat, level work surface.
4. Remove the access panel ("Access panel (graphics server blade)" on page 31).
5. Remove the mezzanine assembly ("Mezzanine assembly" on page 34).
6. Use the FlexibleLOM handle to remove the FlexibleLOM from the system board.

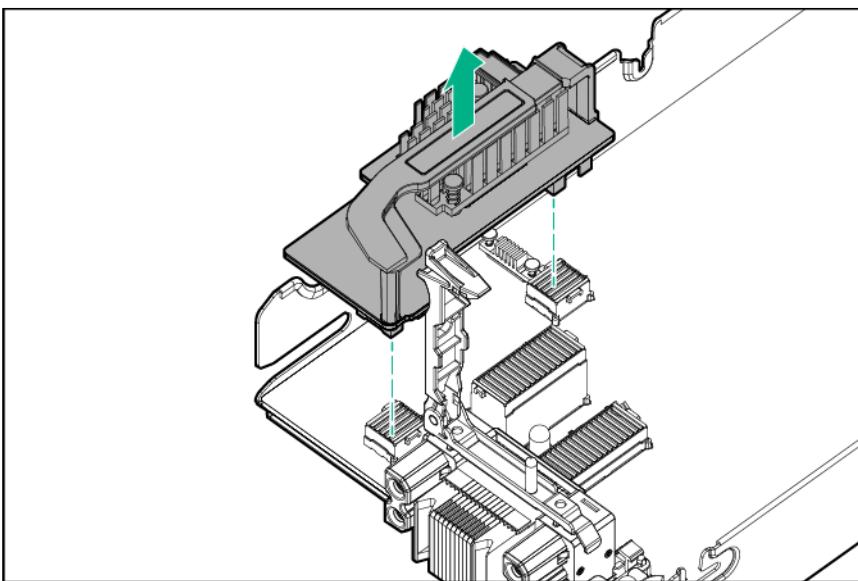


To replace the component, reverse the removal procedure.


# Storage controller

To remove the component:

1. Back up all graphics server blade data.
2. Power down the graphics server blade (on page 25).
3. Remove the graphics server blade ("Remove the graphics blade" on page 26).
4. Place the graphics server blade on a flat, level work surface.
5. Remove the access panel ("Access panel (graphics server blade)" on page 31).
6. Prepare the storage controller for removal.

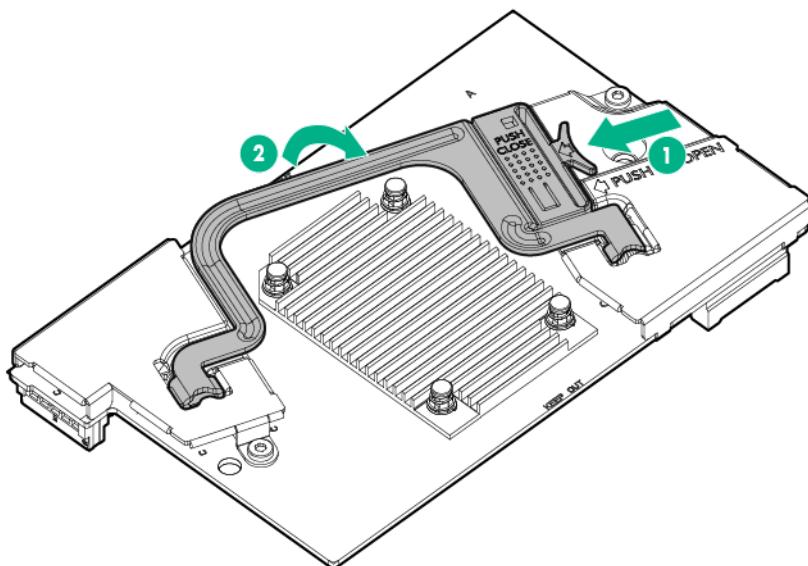

7. Remove the storage controller.

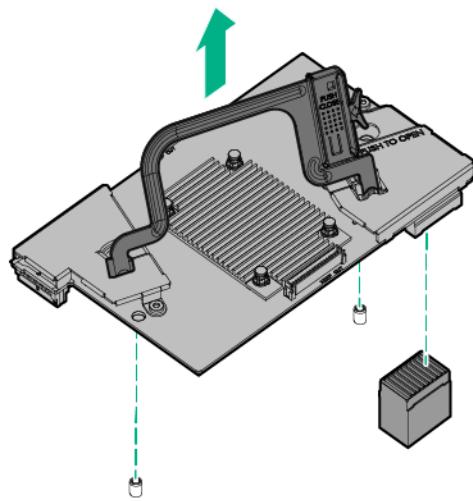

To replace the component, reverse the removal procedure.

# Heatsink blank


To remove the component:

1. Power down the graphics server blade (on page 25).

Remove the graphics server blade ("Remove the graphics blade" on page 26).

2. Place the graphics server blade on a flat, level work surface.
3. Remove the access panel ("Access panel (graphics server blade)" on page 31).
4. Do one of the following:
  - o Remove the storage controller ("Storage controller" on page 50)
  - o Disconnect the direct connect SATA cable ("Direct connect SATA cabling" on page 80).
5. Using a no. 2 Phillips screwdriver, remove the heatsink blank.

Retain the heatsink blank for future use.

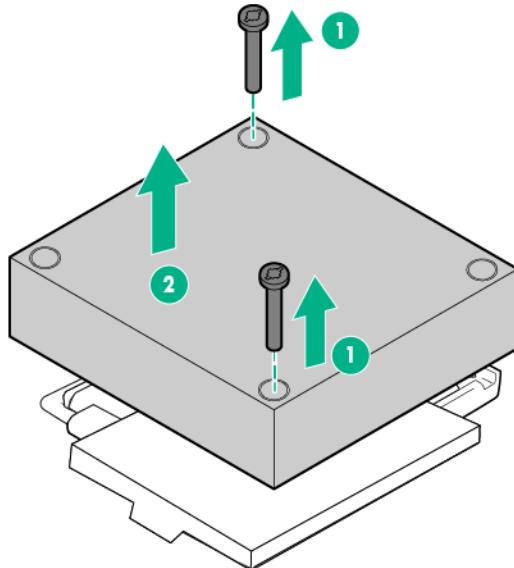

To replace the component, reverse the removal procedure.



**CAUTION:** To avoid damage to the system board, processor socket, and screws, do not overtighten the heatsink screws.

# DIMM baffles

To remove the component:


The server contains two DIMM baffle.

1. Power down the graphics server blade (on page 25).
2. Remove the graphics server blade ("Remove the graphics blade" on page 26).
3. Place the graphics server blade on a flat, level work surface.
4. Remove the access panel ("Access panel (graphics server blade)" on page 31).
5. Disconnect the direct connect SATA cable, if installed ("Direct connect SATA cabling" on page 80).
6. Remove the internal USB drive, if installed. To locate the internal USB connector, see "System board components (on page 91)."




**IMPORTANT:** When removing the right DIMM baffle, leave the Smart Storage Battery installed on the baffle. Use the blue pull tab to disconnect the Smart Storage Battery cable from the system board.

7. Remove one or more DIMM baffles:
  - o DIMM baffle (right side)

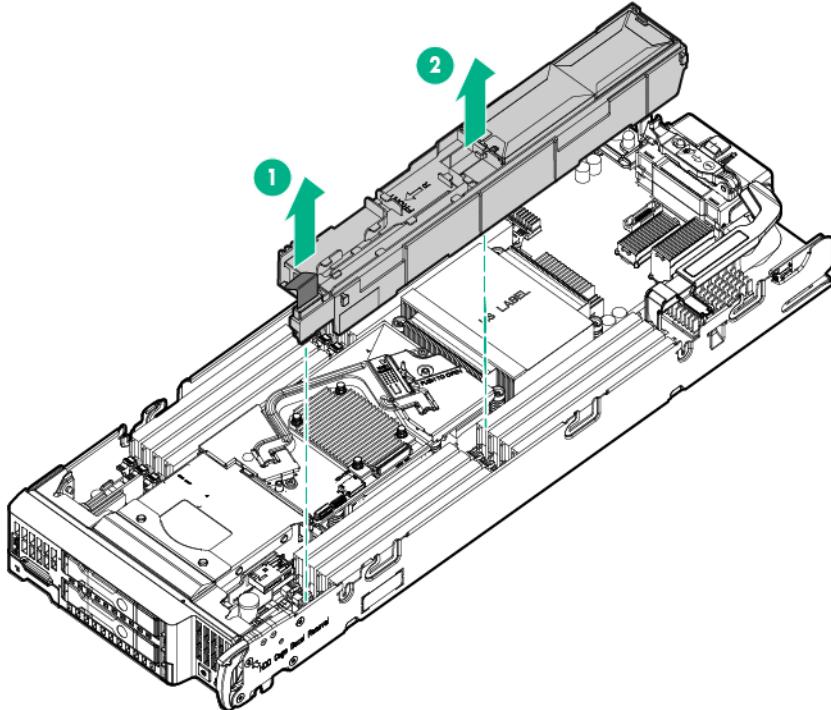

- o DIMM baffle (left side)

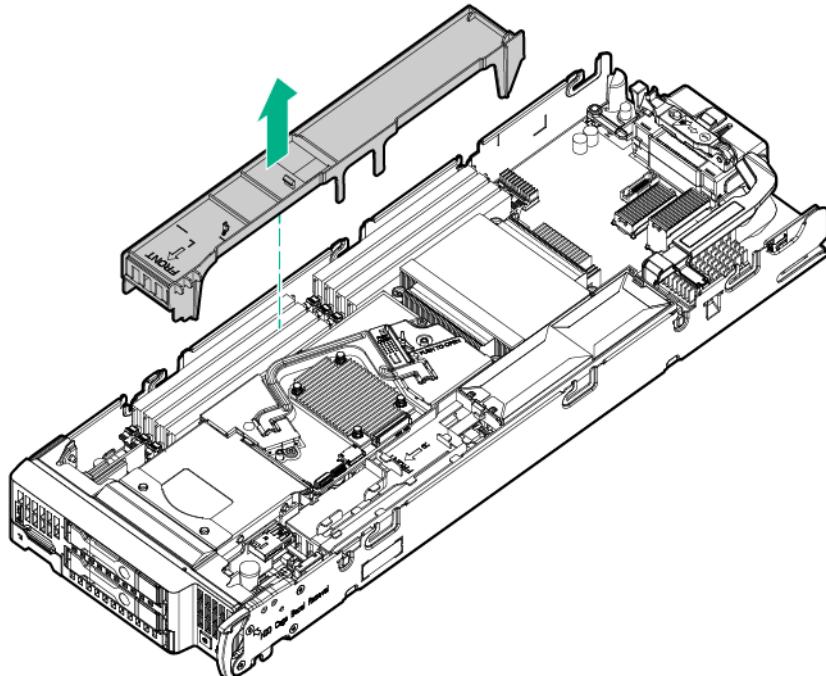

8. Remove the Smart Storage Battery from the DIMM baffle, if installed ("HPE Smart Storage Battery" on page 53).

To replace the component, reverse the removal procedure.

## DIMMs




**CAUTION:** To prevent improper cooling and thermal damage, always install DIMMs of the same height on the graphics server blade. This graphics server blade does not support mixing standard and non-standard height DIMMs.

To identify the DIMMs installed in the graphics server blade, see "DIMM identification (on page 93)."

To remove the component:

1. Power down the graphics server blade (on page 25).
2. Remove the graphics server blade ("Remove the graphics blade" on page 26).
3. Place the graphics server blade on a flat, level work surface.
4. Remove the access panel ("Access panel (graphics server blade)" on page 31).
5. Remove the mezzanine assembly ("Mezzanine assembly" on page 34).
6. Remove the FlexibleLOM ("FlexibleLOM" on page 49).
7. Remove the storage controller ("Storage controller" on page 50).
8. Disconnect the direct connect SATA cable, if installed ("Direct connect SATA cabling" on page 80).
9. Remove the internal USB drive, if installed. To locate the internal USB connector, see "System board components (on page 91)."
10. Remove all DIMM baffles ("DIMM baffles" on page 51).
11. Remove the DIMM.

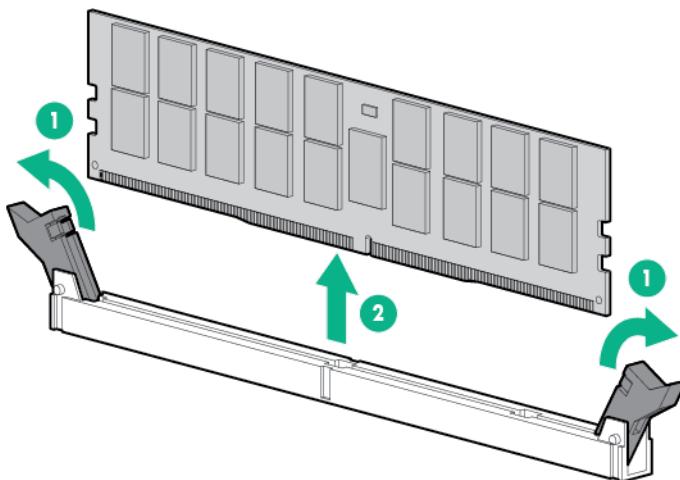


To replace the component, reverse the removal procedure. To configure the memory mode, use UEFI System Utilities ("HPE UEFI System Utilities" on page 75).

## HPE Smart Storage Battery

To remove the component:

1. Power down the graphics server blade (on page 25).
2. Remove the graphics server blade ("Remove the graphics blade" on page 26).
3. Remove the access panel ("Access panel (graphics server blade)" on page 31).
4. Place the graphics server blade on a flat, level work surface.

- Disconnect the direct connect SATA cable, if installed ("Direct connect SATA cabling" on page 80).
- Remove the internal USB drive, if installed. To locate the internal USB connector, see "System board components (on page 91)."
- Remove the right DIMM baffle ("DIMM baffles" on page 51).
- Remove the Smart Storage Battery.

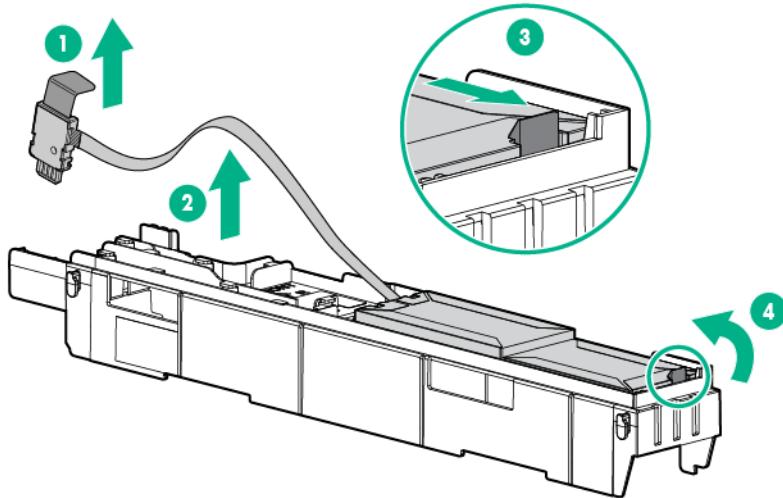

To replace the component, reverse the removal procedure.

## Front panel/drive cage assembly

To remove the component:


- Power down the graphics server blade (on page 25).
- Remove the graphics server blade ("Remove the graphics blade" on page 26).
- Place the graphics server blade on a flat, level work surface.
- Remove the access panel ("Access panel (graphics server blade)" on page 31).
- Remove all drives ("Drive" on page 33).
- Remove all drive blanks ("Drive blank" on page 32).
- Do one of the following:
  - Remove the storage controller ("Storage controller" on page 50)
  - Disconnect the direct connect SATA cable ("Direct connect SATA cabling" on page 80).
- Remove the internal USB drive, if installed. To locate the internal USB connector, see "System board components (on page 91)."
- Remove all DIMM baffles ("DIMM baffles" on page 51).



**CAUTION:** Always remove the storage controller before removing the front panel/drive cage assembly.

- 
- Extend the serial label pull tab from the front of the graphics server blade.
  - Remove the two T-15 screws from the front panel/drive cage assembly.

12. Remove the front panel/drive cage assembly.

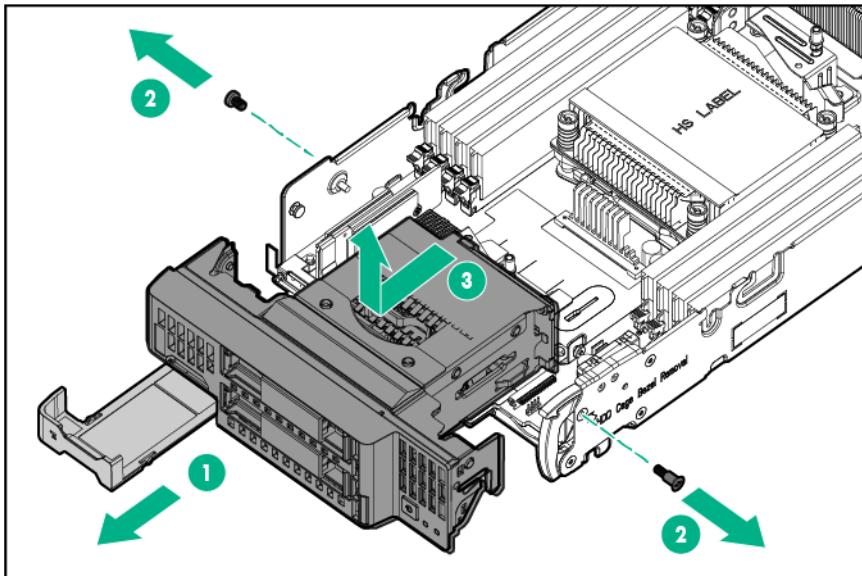

To replace the component, reverse the removal procedure.

## Drive backplane


To remove the component:

1. Power down the graphics server blade (on page 25).
2. Remove the graphics server blade ("Remove the graphics blade" on page 26).
3. Place the graphics server blade on a flat, level work surface.
4. Remove the access panel ("Access panel (graphics server blade)" on page 31).
5. Remove all drives ("Drive" on page 33).
6. Remove all drive blanks ("Drive blank" on page 32).

 **CAUTION:** Remove all drives and drive blanks before removing the drive backplane.

- 
7. Do one of the following:
    - o Remove the storage controller ("Storage controller" on page 50)
    - o Disconnect the direct connect SATA cable ("Direct connect SATA cabling" on page 80).
  8. Remove the internal USB drive, if installed. To locate the internal USB connector, see "System board components (on page 91)."
  9. Remove all DIMM baffles ("DIMM baffles" on page 51).
  10. Remove the front panel/drive cage assembly ("Front panel/drive cage assembly" on page 54).

11. Remove the drive backplane from the front panel/drive cage assembly.

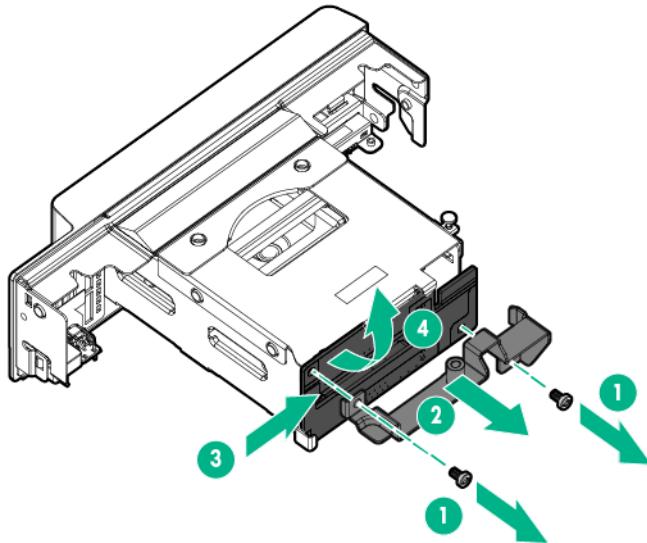

To replace the component, reverse the removal procedure.

## System battery

If the graphics server blade no longer automatically displays the correct date and time, then replace the battery that provides power to the real-time clock. Under normal use, battery life is 5 to 10 years.




**WARNING:** The computer contains an internal lithium manganese dioxide, a vanadium pentoxide, or an alkaline battery pack. A risk of fire and burns exists if the battery pack is not properly handled. To reduce the risk of personal injury:

- Do not attempt to recharge the battery.
- Do not expose the battery to temperatures higher than 60°C (140°F).
- Do not disassemble, crush, puncture, short external contacts, or dispose of in fire or water.
- Replace only with the spare designated for this product.

To remove the component:

1. Power down the graphics server blade (on page 25).
2. Remove the graphics server blade ("Remove the graphics blade" on page 26).
3. Place the graphics server blade on a flat, level work surface.
4. Locate the battery on the system board ("System board components" on page 91).

5. Remove the battery.

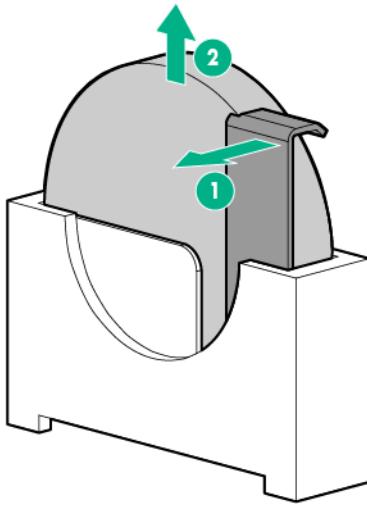

**IMPORTANT:** Replacing the system board battery resets the system ROM to its default configuration. After replacing the battery, reconfigure the system through UEFI System Utilities.

To replace the component, reverse the removal procedure.

For more information about battery replacement or proper disposal, contact an authorized reseller or an authorized service provider.

## Heatsink



**WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.


To remove the component:

1. Power down the graphics server blade (on page 25).
2. Remove the graphics server blade ("Remove the graphics blade" on page 26).
3. Place the graphics server blade on a flat, level work surface.
4. Remove the access panel ("Access panel (graphics server blade)" on page 31).
5. Do one of the following:
  - o Remove the storage controller ("Storage controller" on page 50)
  - o Disconnect the direct connect SATA cable ("Direct connect SATA cabling" on page 80).

**NOTE:** Only remove the storage controller if the processor 2 heatsink is being removed.


6. Remove the internal USB drive, if installed. To locate the internal USB connector, see "System board components (on page 91)."
7. Remove all DIMM baffles ("DIMM baffles" on page 51).

8. Remove the heatsink.

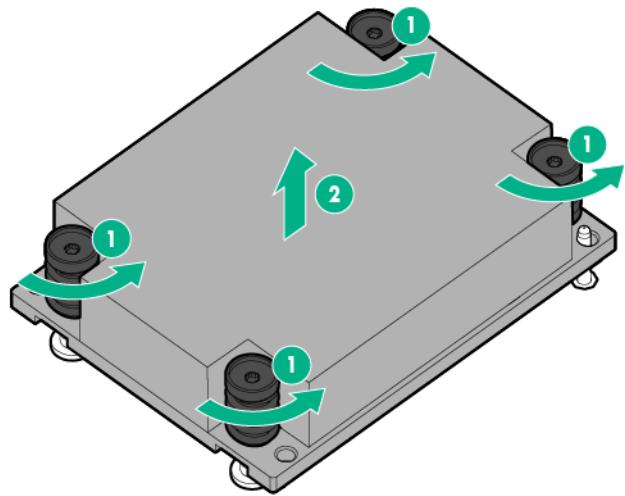


To replace the component:

1. Clean the old thermal grease from the heatsink with the alcohol swab. Allow the alcohol to evaporate before continuing.
2. Apply all the grease to the top of the processor in the following pattern to ensure even distribution.

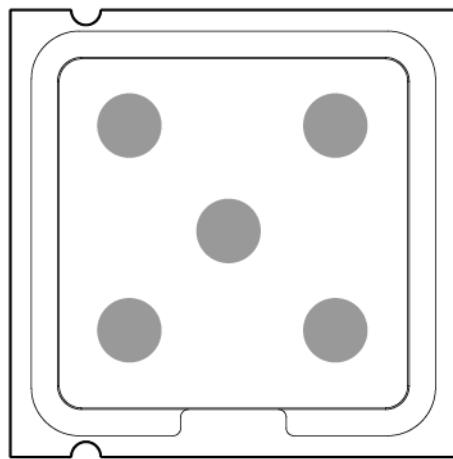


3. Remove the thermal interface protective cover from the heatsink.

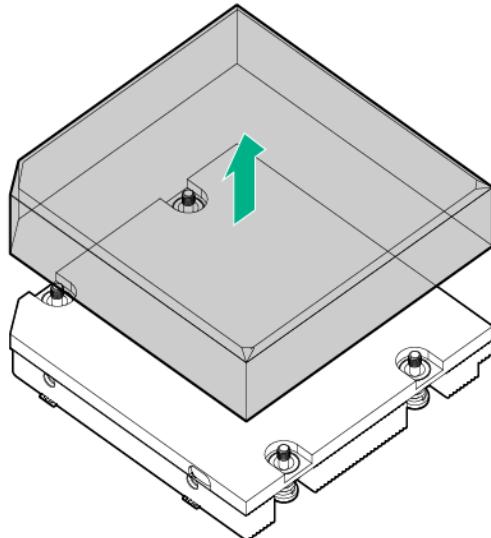

**CAUTION:** To avoid damage to the system board, processor socket, and screws, do not overtighten the heatsink screws.

4. Align and install the heatsink. Alternate tightening the screws until the heatsink is seated properly.

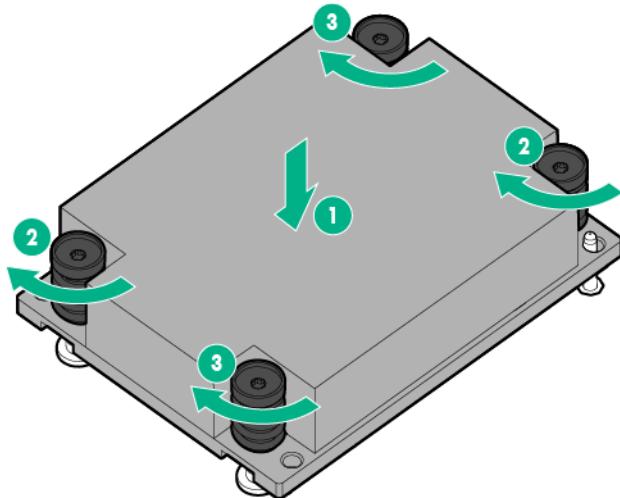

5. Install the storage controller or connect the direct connect SATA cable ("Direct connect SATA cabling" on page 80).
6. Install all DIMM baffles ("DIMM baffles" on page 51).
7. Install the internal USB drive.
8. Install the access panel.
9. Install the graphics server blade.

## Processor


- 
-  **WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.
- 
-  **CAUTION:** To prevent possible server malfunction, do not mix processors of different speeds or cache sizes. Refer to the label on the processor heatsink for a description of the processor.
- 
-  **CAUTION:** To prevent possible graphics server blade overheating, always populate each processor socket with a processor socket cover and a heatsink blank or a processor and a heatsink.
- 
-  **CAUTION:** To prevent damage to electrical components, properly ground the graphics server blade before beginning any installation procedure. Improper grounding can cause ESD.
- 
-  **IMPORTANT:** Processor socket 1 must always be populated. If processor socket 1 is empty, the graphics server blade does not power up.
- 

For any memory configuration and processor model, the memory speed will run at 2133MHz. For more information, see the *HPE ProLiant WS460c Gen9 Graphics Server Blade User Guide* on the Hewlett Packard Enterprise website (<http://www.hpe.com/support/WS460cGen9/docs>). For more information about graphics server blade memory, see the Hewlett Packard Enterprise website (<http://www.hpe.com/info/memory>).

To remove the component:


1. Update the system ROM.  
Locate and download the latest ROM version from the Hewlett Packard Enterprise Support Center website (<http://www.hpe.com/support/hpesc>). Follow the instructions on the website to update the system ROM.
2. Power down the graphics server blade (on page 25).
3. Remove the graphics server blade ("Remove the graphics blade" on page 26).
4. Place the graphics server blade on a flat, level work surface.
5. Remove the access panel ("Access panel (graphics server blade)" on page 31).
6. Do one of the following:
  - o Remove the storage controller ("Storage controller" on page 50)
  - o Disconnect the direct connect SATA cable ("Direct connect SATA cabling" on page 80).
7. Remove the internal USB drive, if installed. To locate the internal USB connector, see "System board components (on page 91)."
8. Remove all DIMM baffles ("DIMM baffles" on page 51).
9. Remove the heatsink ("Heatsink" on page 57).

10. Open each of the processor locking levers in the order indicated, and then open the processor retaining bracket.

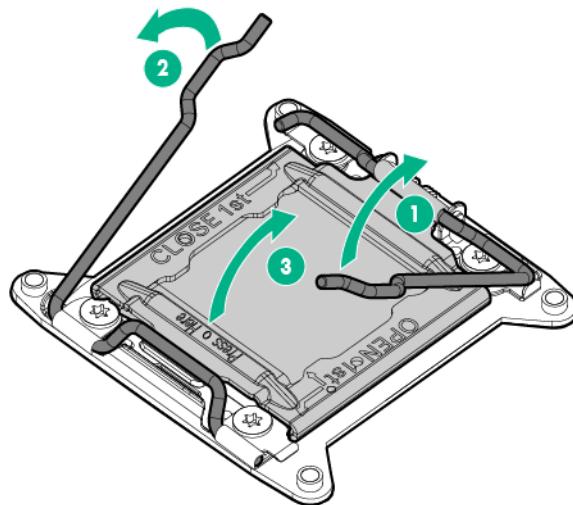

**CAUTION: THE PINS ON THE SYSTEM BOARD ARE VERY FRAGILE AND EASILY DAMAGED.** To avoid damage to the system board, do not touch the processor or the processor socket contacts.

11. Remove the processor from the processor retaining bracket.

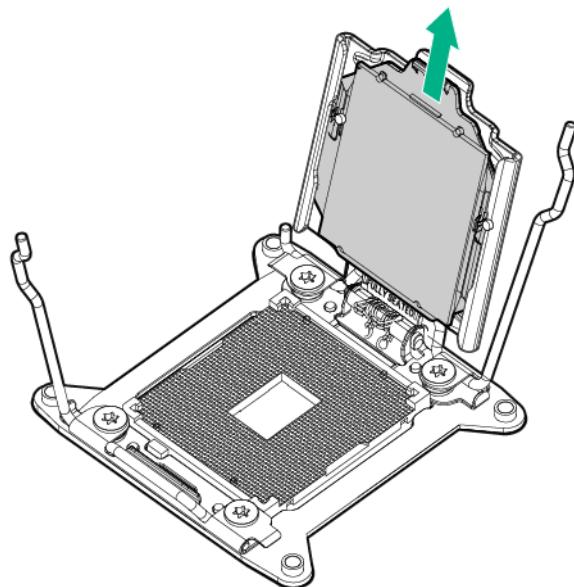


To replace the component:



**CAUTION:** To avoid damage to the system board, processor socket, and screws, do not overtighten the heatsink screws.

1. Install the processor. Verify that the processor is fully seated in the processor retaining bracket by visually inspecting the processor installation guides on either side of the processor. **THE PINS ON THE SYSTEM BOARD ARE VERY FRAGILE AND EASILY DAMAGED.**

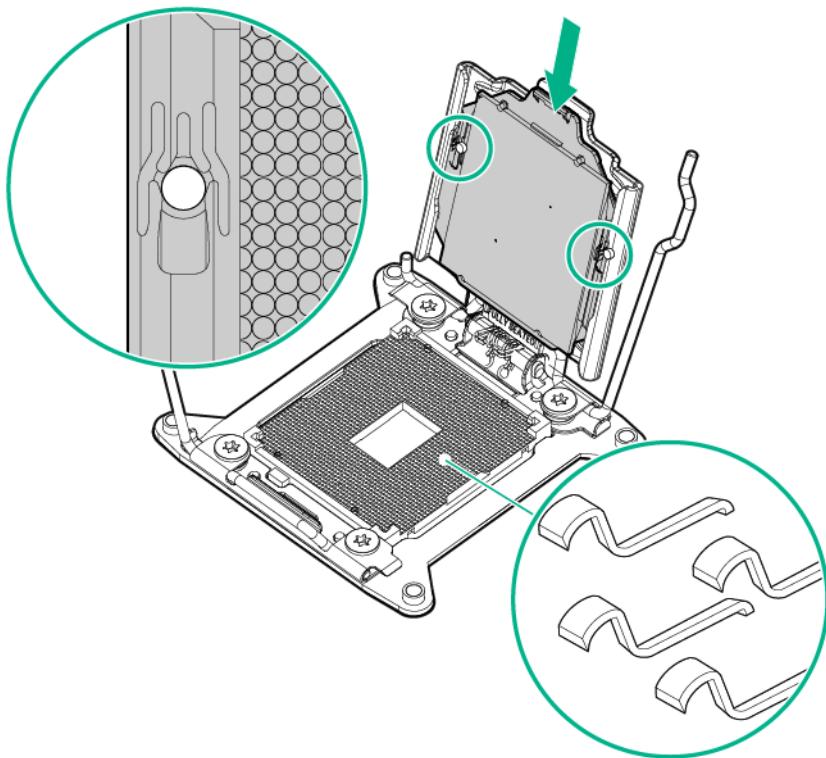


- 
- △ **CAUTION: THE PINS ON THE SYSTEM BOARD ARE VERY FRAGILE AND EASILY DAMAGED.** To avoid damage to the system board, do not touch the processor or the processor socket contacts.

---


  - △ **CAUTION:** Do not press down on the processor. Pressing down on the processor may cause damage to the processor socket and the system board. Press only in the area indicated on the processor retaining bracket.

---
2. Close the processor retaining bracket. When the processor is installed properly inside the processor retaining bracket, the processor retaining bracket clears the flange on the front of the socket.

3. Press and hold the processor retaining bracket in place, and then close each processor locking lever. Press only in the area indicated on the processor retaining bracket.

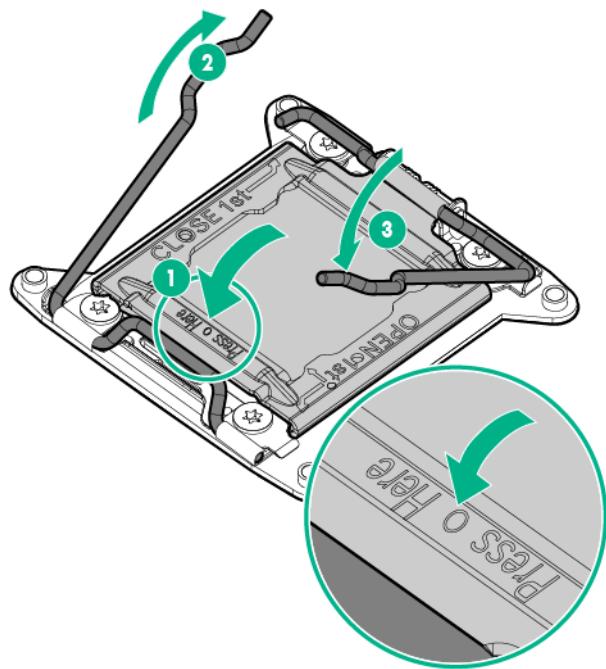

4. Align and install the heatsink. Alternate tightening the screws until the heatsink is seated properly.

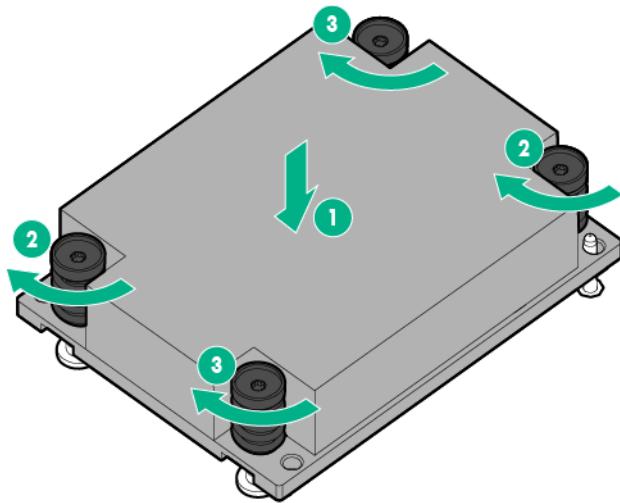

5. Install all DIMM baffles ("DIMM baffles" on page 51).
6. Install the internal USB drive.
7. Install the storage controller or connect the direct connect SATA cable ("Direct connect SATA cabling" on page 80).
8. Install the access panel.
9. Install the graphics server blade.


## System board



**CAUTION:** When returning a damaged system board to Hewlett Packard Enterprise, always install all processor socket covers to prevent damage to the processor sockets and system board


To remove the component:

1. Power down the graphics server blade (on page 25).
2. Remove the graphics server blade ("Remove the graphics blade" on page 26).
3. Place the graphics server blade on a flat, level work surface.
4. Remove the access panel ("Access panel (graphics server blade)" on page 31).
5. Remove all drives ("Drive" on page 33).
6. Remove all drive blanks ("Drive blank" on page 32).
7. Remove the mezzanine assembly ("Mezzanine assembly" on page 34).
8. Remove the FlexibleLOM ("FlexibleLOM" on page 49).
9. Do one of the following:
  - o Remove the storage controller ("Storage controller" on page 50)
  - o Disconnect the direct connect SATA cable ("Direct connect SATA cabling" on page 80).
10. Remove the internal USB drive, if installed. To locate the internal USB connector, see "System board components (on page 91)."
11. Remove the microSD card, if installed. To locate the microSD card, see "System board components (on page 91)."
12. Remove all DIMM baffles ("DIMM baffles" on page 51).
13. Remove all DIMMs ("DIMMs" on page 53).
14. Remove the front panel/drive cage assembly ("Front panel/drive cage assembly" on page 54).
15. Remove the heatsink ("Heatsink" on page 57).
16. Open each of the processor locking levers in the order indicated, and then open the processor retaining bracket.

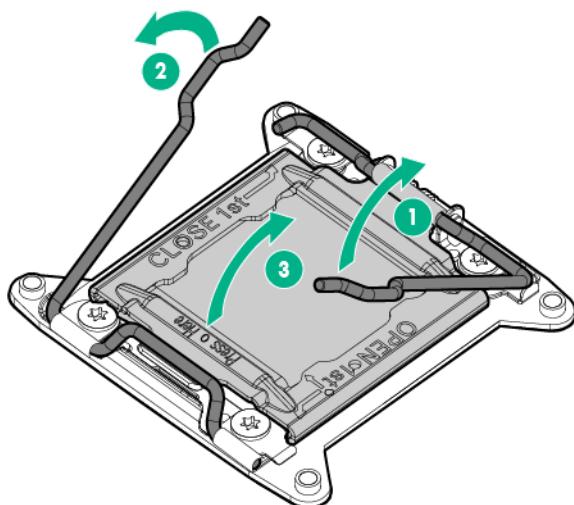

**CAUTION: THE PINS ON THE SYSTEM BOARD ARE VERY FRAGILE AND EASILY DAMAGED.** To avoid damage to the system board, do not touch the processor or the processor socket contacts.

17. Remove the processor from the processor retaining bracket.

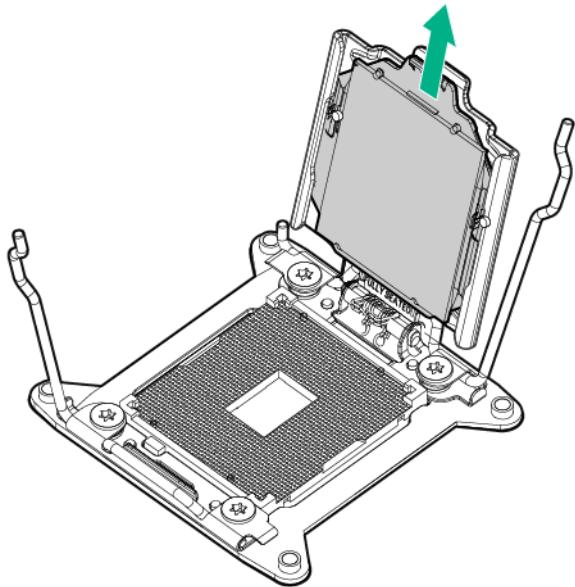

18. Install the processor socket protective cover in each processor socket.
19. Retain all of the information on the serial label pull tab for use in installing the new system board.
20. Remove the enclosure connector covers from the new system board and install the enclosure connector covers on the damaged system board.


To replace the system board:

1. Place the new graphics server blade system board with base pan on a flat level surface.




**IMPORTANT:** Install all components in the same configuration prior to removing the system board.


2. If the graphics server blade had only one processor installed, install the heatsink blank in processor socket 2 ("Heatsink blank" on page 51).
3. Open each of the processor locking levers in the order indicated, and then open the processor retaining bracket.

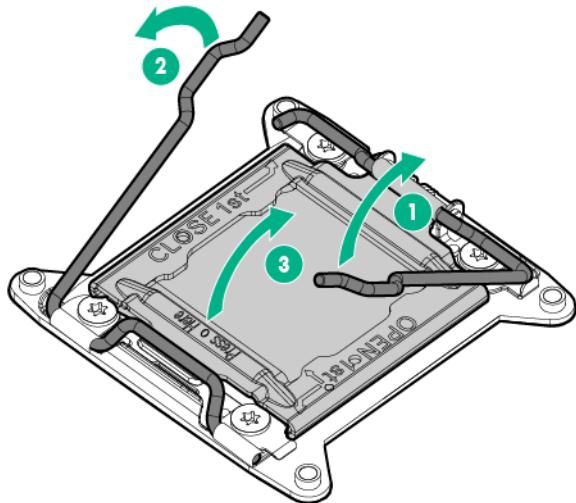

4. Remove the clear processor socket cover. Retain the processor socket cover for future use.

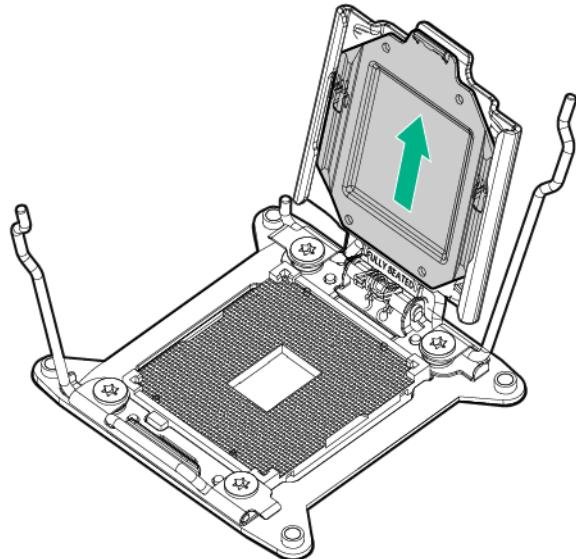

5. Install the processor. Verify that the processor is fully seated in the processor retaining bracket by visually inspecting the processor installation guides on either side of the processor. **THE PINS ON THE SYSTEM BOARD ARE VERY FRAGILE AND EASILY DAMAGED.**

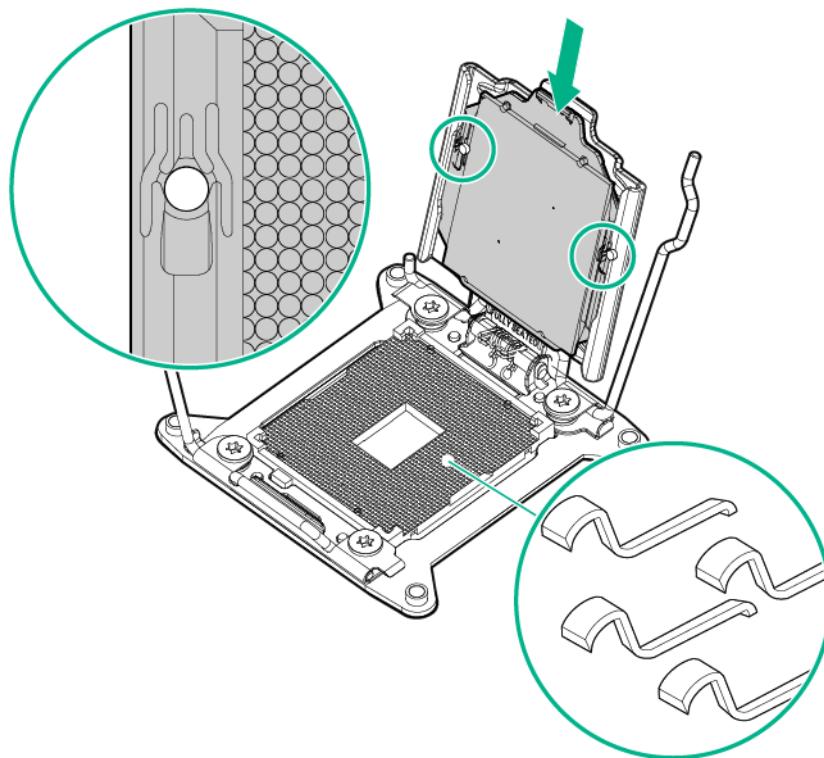


**CAUTION:** Do not press down on the processor. Pressing down on the processor may cause damage to the processor socket and the system board. Press only in the area indicated on the processor retaining bracket.




**CAUTION:** Close and hold down the processor cover socket while closing the processor locking levers. The levers should close without resistance. Forcing the levers closed can damage the processor and socket, requiring system board replacement.

6. Close the processor retaining bracket. When the processor is installed properly inside the processor retaining bracket, the processor retaining bracket clears the flange on the front of the socket.
7. Press and hold the processor retaining bracket in place, and then close each processor locking lever. Press only in the area indicated on the processor retaining bracket.

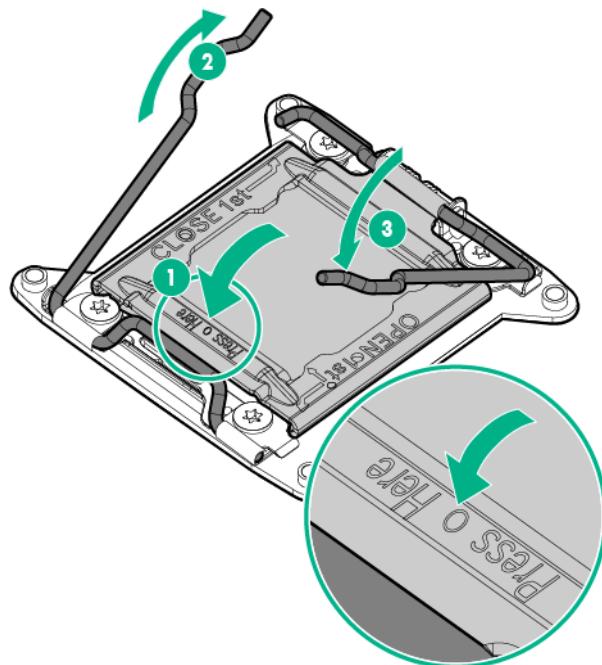

8. Install the processor socket cover onto the processor socket of the failed system board.
9. Clean the old thermal grease from the heatsink with the alcohol swab. Allow the alcohol to evaporate before continuing.
10. Apply all the grease to the top of the processor in the following pattern to ensure even distribution.

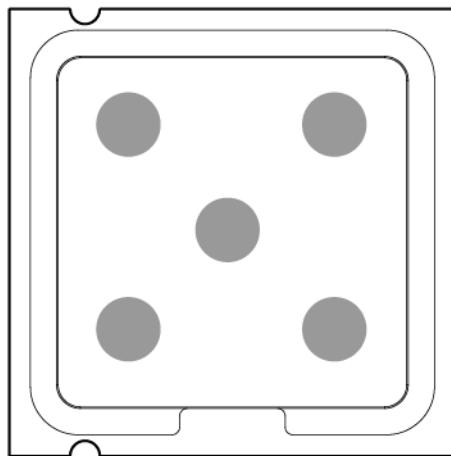

11. Install the heatsink ("Heatsink" on page 57).
12. Install the front panel/drive cage assembly ("Front panel/drive cage assembly" on page 54).

13. Install all DIMMs ("DIMMs" on page 53).
14. Install all DIMM baffles ("DIMM baffles" on page 51).
15. Install the internal USB drive.
16. Install the storage controller or connect the direct connect SATA cable ("Direct connect SATA cabling" on page 80).
17. Install the FlexibleLOM ("FlexibleLOM" on page 49).
18. Install the mezzanine assembly ("Mezzanine assembly" on page 34).
19. Install the drives ("Drive" on page 33).
20. Install the drive blanks ("Drive blank" on page 32).
21. Install the access panel.
22. Install the graphics server blade.

After you replace the system board, you must re-enter the graphics server blade serial number and the product ID.


1. During the graphics server blade startup sequence, press the **F9** key to access UEFI System Utilities.
2. Select the **System Configuration > BIOS/Platform Configuration (RBSU) > Advanced Options > Advanced System ROM Options > Serial Number**, and then press the **Enter** key.
3. Enter the serial number and press the **Enter** key. The following message appears:  
The serial number should only be modified by qualified service personnel. This value should always match the serial number located on the chassis.
4. Press the **Enter** key to clear the warning.
5. Enter the serial number and press the **Enter** key.
6. Select **Product ID**. The following warning appears:  
Warning: The Product ID should ONLY be modified by qualified service personnel. This value should always match the Product ID located on the chassis.
7. Enter the product ID and press the **Enter** key.
8. Press the **F10** key to confirm exiting System Utilities. The graphics server blade automatically reboots.

## Server blade release lever assembly


To remove the component:

1. Power down the graphics server blade (on page 25).
2. Remove the graphics server blade ("Remove the graphics blade" on page 26).
3. Remove the access panel ("Access panel (graphics server blade)" on page 31).
4. Remove all drives ("Drive" on page 33).
5. Remove all drive blanks ("Drive blank" on page 32).
6. Remove the mezzanine assembly ("Mezzanine assembly" on page 34).
7. Do one of the following:
  - o Remove the storage controller ("Storage controller" on page 50)
  - o Disconnect the direct connect SATA cable ("Direct connect SATA cabling" on page 80).
8. Remove the internal USB drive, if installed. To locate the internal USB connector, see "System board components (on page 91)."
9. Remove all DIMM baffles ("DIMM baffles" on page 51).

10. Remove the heatsink blank, if installed ("Heatsink blank" on page 51).
11. Remove the front panel/hard drive cage assembly ("Front panel/drive cage assembly" on page 54).
12. While holding the system board in place, turn the base pan on its side and remove the two system board screws from the bottom of the base pan.

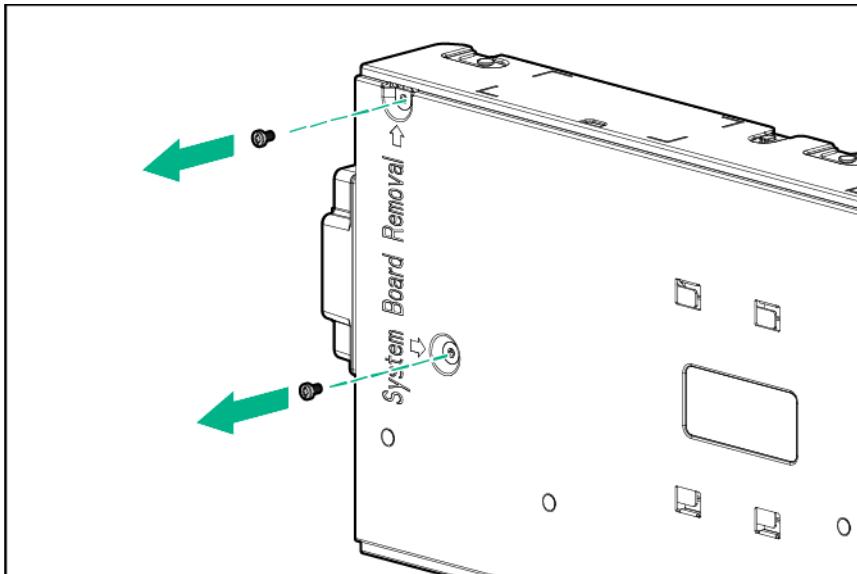


13. Place the graphics server blade on a flat, level surface.
14. Slide the system board approximately 1.27 cm (0.50 inches) towards the rear of the server and lift the system board from the base pan.

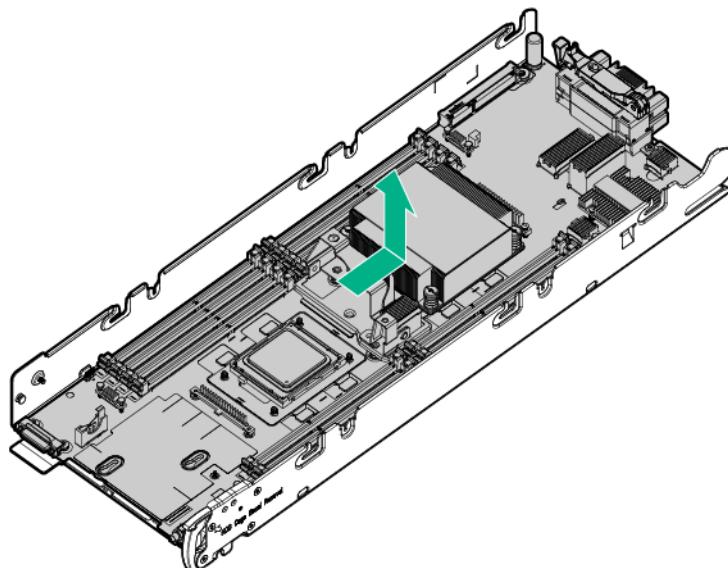


15. Remove the three T-10 screws from the outside of the base pan, and then remove the server blade release lever bracket.

16. Remove the T-10 screw from the inside of the base pan and then remove the server blade release lever assembly.

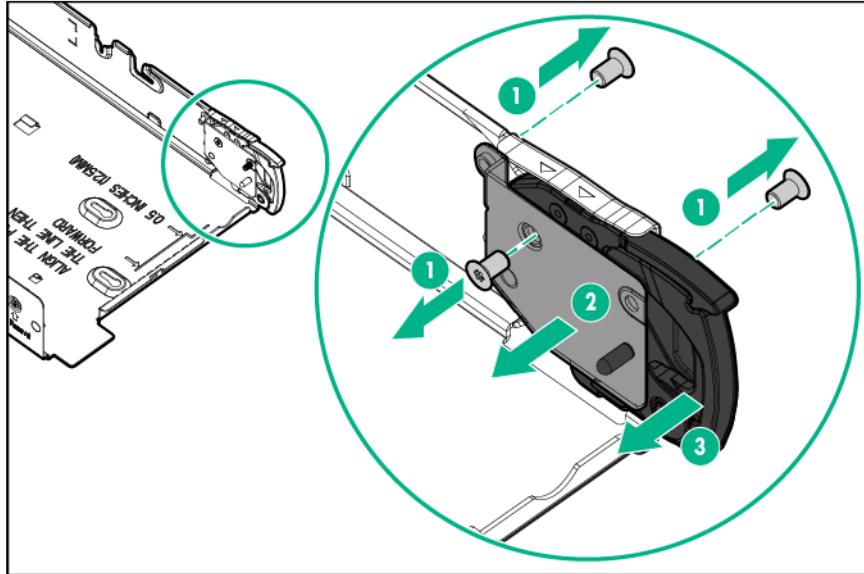


To replace the server blade release lever:


1. Install the server blade release lever assembly, and then install the T-10 screws from the outside of the base pan.
2. Install the server blade release lever bracket, and then install the T-10 screw from the inside of the base pan.

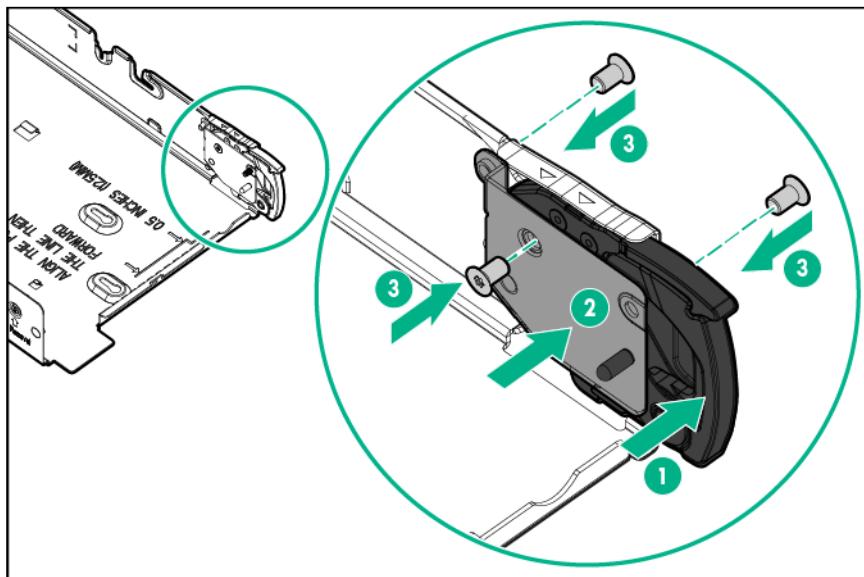

3. Align the system board, and then slide it into place inside the base pan.

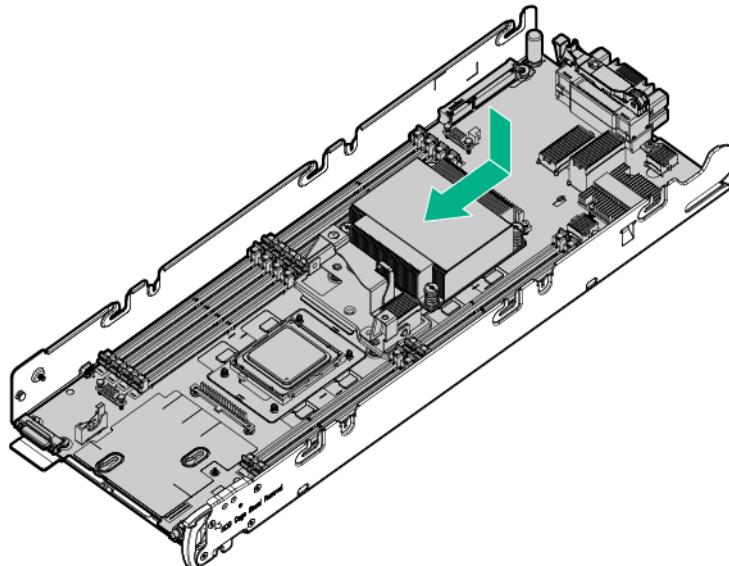

4. While holding the system board in place, turn the base pan on the side and install the two screws on the bottom of the base pan.

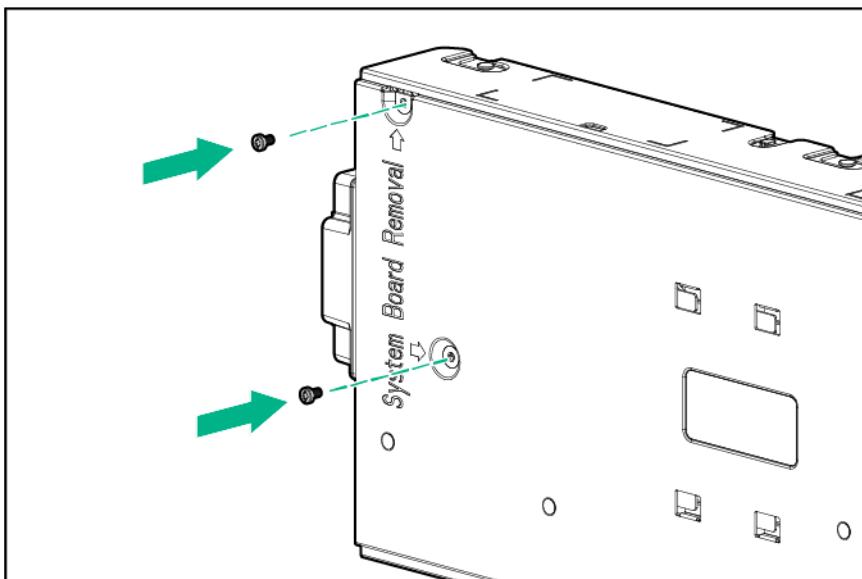

5. Place the graphics server blade on a flat level surface.



**IMPORTANT:** Install all components in the same configuration prior to removing the system board.

6. Install the front panel/drive cage assembly ("Front panel/drive cage assembly" on page 54).
7. Install the heatsink blank ("Heatsink blank" on page 51).
8. Install the storage controller or connect the direct connect SATA cable ("Direct connect SATA cabling" on page 80).
9. Install all DIMM baffles ("DIMM baffles" on page 51).
10. Install the internal USB drive.
11. Install the drives ("Drive" on page 33).
12. Install the drive blanks ("Drive blank" on page 32).

13. Install the access panel.

## HP Trusted Platform Module

The TPM is not a customer-removable part.



**CAUTION:** Any attempt to remove an installed TPM from the system board breaks or disfigures the TPM security rivet. Upon locating a broken or disfigured rivet on an installed TPM, administrators should consider the system compromised and take appropriate measures to ensure the integrity of the system data.

If you suspect a TPM board failure, leave the TPM installed and remove the system board ("System board" on page 63). Contact a Hewlett Packard Enterprise authorized service provider for a replacement system board and TPM board.

# Diagnostic tools

## Product QuickSpecs

For more information about product features, specifications, options, configurations, and compatibility, see the product QuickSpecs on the Hewlett Packard Enterprise website (<http://www.hpe.com/info/qs>).

## HPE iLO

The iLO subsystem is a standard component of ProLiant servers that simplifies initial graphics server blade setup, server health monitoring, power and thermal optimization, and remote server administration. The iLO subsystem includes an intelligent microprocessor, secure memory, and a dedicated network interface. This design makes iLO independent of the host server and its operating system.

iLO enables and manages the Active Health System (on page 74) and also features Agentless Management. All key internal subsystems are monitored by iLO. If enabled, SNMP alerts are sent directly by iLO regardless of the host operating system or even if no host operating system is installed.

Embedded remote support software is available on HPE ProLiant Gen8 and later servers with iLO 4, regardless of the operating system software and without installing OS agents on the server.

Using iLO, you can do the following:

- Access a high-performance and secure Integrated Remote Console to the server from anywhere in the world if you have a network connection to the server.
- Use the shared .NET Integrated Remote Console to collaborate with up to four server administrators.
- Remotely mount high-performance Virtual Media devices to the graphics server blade.
- Securely and remotely control the power state of the managed graphics server blade.
- Implement true Agentless Management with SNMP alerts from iLO, regardless of the state of the host server.
- Download the Active Health System log.
- Register for Insight Remote Support.
- Use iLO Federation to manage multiple servers from one system running the iLO web interface.
- Use Virtual Power and Virtual Media from the GUI, the CLI, or the iLO scripting toolkit for many tasks, including the automation of deployment and provisioning.
- Control iLO by using a remote management tool.

For more information about iLO features, see the iLO documentation on the Hewlett Packard Enterprise website (<http://www.hpe.com/info/ilo/docs>).

The iLO 4 hardware and firmware features and functionality, such as NAND size and embedded user partition, vary depending on the graphics server blade model. For a complete list of supported features and functionality, see the iLO 4 QuickSpecs on the Hewlett Packard Enterprise website (<http://www.hpe.com/info/Quickspecs-iLO>).

# Active Health System

The HPE Active Health System provides the following features:

- Combined diagnostics tools/scanners
- Always on, continuous monitoring for increased stability and shorter downtimes
- Rich configuration history
- Health and service alerts
- Easy export and upload to Service and Support

The Active Health System monitors and records changes in the server hardware and system configuration. The Active Health System assists in diagnosing problems and delivering rapid resolution if server failures occur.

The Active Health System collects the following types of data:

- Server model
- Serial number
- Processor model and speed
- Storage capacity and speed
- Memory capacity and speed
- Firmware/BIOS

Active Health System does not collect information about Active Health System users' operations, finances, customers, employees, partners, or data center, such as IP addresses, host names, user names, and passwords. Active Health System does not parse or change operating system data from third-party error event log activities, such as content created or passed through by the operating system.

The data that is collected is managed according to the Hewlett Packard Enterprise Data Privacy policy. For more information see the Hewlett Packard Enterprise website (<http://www.hpe.com/info/privacy>).

The Active Health System, in conjunction with the system monitoring provided by Agentless Management or SNMP Pass-thru, provides continuous monitoring of hardware and configuration changes, system status, and service alerts for various server components.

The Agentless Management Service is available in the SPP, which can be downloaded from the Hewlett Packard Enterprise website (<http://www.hpe.com/servers/spp/download>). The Active Health System log can be downloaded manually from iLO 4 or HPE Intelligent Provisioning and sent to Hewlett Packard Enterprise.

For more information, see the following documents:

- *iLO User Guide* on the Hewlett Packard Enterprise website (<http://www.hpe.com/info/enterprise/docs>)
- *Intelligent Provisioning User Guide* on the Hewlett Packard Enterprise website (<http://www.hpe.com/info/enterprise/docs>)

# HPE ProLiant Pre-boot Health Summary

If the graphics server blade will not start up, you can use iLO to display diagnostic information on an external monitor. This feature is supported on graphics server blades that support external video and have a UID button or an SUV connector. When power is available to the graphics server blade but the graphics server blade is not powered on, iLO runs on auxiliary power and can take control of the graphics server blade video adapter to display the HPE ProLiant Pre-boot Health Summary.

For additional information, see the following documents:

- *iLO 4 User Guide* — See the Hewlett Packard Enterprise website (<http://www.hpe.com/info/ilo/docs>).
- *ProLiant Gen9 Troubleshooting Guide, Volume I: Troubleshooting* — See "Troubleshooting Resources (on page 84)."

## Integrated Management Log

The IML records hundreds of events and stores them in an easy-to-view form. The IML timestamps each event with 1-minute granularity.

You can view recorded events in the IML in several ways, including the following:

- From within HPE SIM
- From within UEFI System Utilities ("HPE UEFI System Utilities" on page 75)
- From within the Embedded UEFI shell
- From within operating system-specific IML viewers:
  - For Windows: IML Viewer
  - For Linux: IML Viewer Application
- From within the iLO web interface
- From within Insight Diagnostics ("HPE Insight Diagnostics" on page 76)

## HPE UEFI System Utilities

The HPE UEFI System Utilities is embedded in the system ROM. The UEFI System Utilities enable you to perform a wide range of configuration activities, including:

- Configuring system devices and installed options
- Enabling and disabling system features
- Displaying system information
- Selecting the primary boot controller
- Configuring memory options
- Selecting a language
- Launching other pre-boot environments such as the Embedded UEFI Shell and Intelligent Provisioning

For more information on the UEFI System Utilities, see the *UEFI System Utilities User Guide for HPE ProLiant Gen9 Servers* on the Hewlett Packard Enterprise website (<http://www.hpe.com/info/ProLiantUEFI/docs>).

Scan the QR code located at the bottom of the screen to access mobile-ready online help for the UEFI System Utilities and UEFI Shell. For on-screen help, press **F1**.

## Using HPE UEFI System Utilities

To use the UEFI System Utilities, use the following keys.

Action	Key
Access System Utilities	F9 during server POST
Navigate menus	Up and Down arrows

Action	Key
Select items	Enter
Save selections	F10
Access Help for a highlighted configuration option*	F1

\*Scan the QR code on the screen to access online help for the UEFI System Utilities and UEFI Shell.

Default configuration settings are applied to the server at one of the following times:

- Upon the first system power-up
- After defaults have been restored

Default configuration settings are sufficient for typical server operations; however, you can modify configuration settings as needed. The system prompts you for access to the System Utilities each time the system is powered up.

## Embedded Diagnostics option

The system BIOS in all ProLiant Gen9 servers includes an Embedded Diagnostics option in the ROM. The Embedded Diagnostics option can run comprehensive diagnostics of the server hardware, including processors, memory, drives, and other server components.

For more information on the Embedded Diagnostics option, see the *UEFI System Utilities User Guide for ProLiant Gen9 Servers* on the Hewlett Packard Enterprise website (<http://www.hpe.com/info/ProLiantUEFI/docs>).

## Re-entering the server serial number and product ID

After you replace the system board, you must re-enter the graphics server blade serial number and the product ID.

1. During the graphics server blade startup sequence, press the **F9** key to access UEFI System Utilities.
2. Select the **System Configuration > BIOS/Platform Configuration (RBSU) > Advanced Options > Advanced System ROM Options > Serial Number**, and then press the **Enter** key.
3. Enter the serial number and press the **Enter** key. The following message appears:  
The serial number should only be modified by qualified service personnel. This value should always match the serial number located on the chassis.
4. Press the **Enter** key to clear the warning.
5. Enter the serial number and press the **Enter** key.
6. Select **Product ID**. The following warning appears:  
Warning: The Product ID should ONLY be modified by qualified service personnel. This value should always match the Product ID located on the chassis.
7. Enter the product ID and press the **Enter** key.
8. Press the **F10** key to confirm exiting System Utilities. The graphics server blade automatically reboots.

## HPE Insight Diagnostics

The Insight Diagnostics is a proactive graphics server blade management tool, available in both offline and online versions, that provides diagnostics and troubleshooting capabilities to assist IT

administrators who verify graphics server blade installations, troubleshoot problems, and perform repair validation.

The Insight Diagnostics Offline Edition performs various in-depth system and component testing while the OS is not running. To run this utility, boot the graphics server blade using Intelligent Provisioning.

The Insight Diagnostics Online Edition is a web-based application that captures system configuration and other related data needed for effective graphics server blade management. Available in Microsoft Windows and Linux versions, the utility helps to ensure proper system operation.

For more information or to download the utility, see the Hewlett Packard Enterprise website (<http://www.hpe.com/servers/diags>). The Insight Diagnostics Online Edition is also available in the SPP.

## HPE Insight Diagnostics survey functionality

HPE Insight Diagnostics (on page 76) provides survey functionality that gathers critical hardware and software information on ProLiant graphics server blades.

This functionality supports operating systems that are supported by the graphics server blade. For operating systems supported by the graphics server blade, see the Hewlett Packard Enterprise website (<http://www.hpe.com/info/supports>).

If a significant change occurs between data-gathering intervals, the survey function marks the previous information and overwrites the survey data files to reflect the latest changes in the configuration.

Survey functionality is installed with every Intelligent Provisioning-assisted Insight Diagnostics installation, or it can be installed through the SPP.

## HPE Insight Remote Support

Hewlett Packard Enterprise strongly recommends that you register your device for remote support to enable enhanced delivery of your Hewlett Packard Enterprise warranty, HP Care Pack Service, or Hewlett Packard Enterprise contractual support agreement. Insight Remote Support supplements your monitoring continuously to ensure maximum system availability by providing intelligent event diagnosis, and automatic, secure submission of hardware event notifications to Hewlett Packard Enterprise, which will initiate a fast and accurate resolution, based on your product's service level. Notifications can be sent to your authorized Hewlett Packard Enterprise Channel Partner for onsite service, if configured and available in your country.

For more information, see *Insight Remote Support and Insight Online Setup Guide for ProLiant Servers and BladeSystem c-Class Enclosures* on the Hewlett Packard Enterprise website (<http://www.hpe.com/info/insightremotesupport/docs>). Insight Remote Support is available as part of Hewlett Packard Enterprise Warranty, HP Care Pack Service, or Hewlett Packard Enterprise contractual support agreement.

## USB support

Hewlett Packard Enterprise graphics server blades support both USB 2.0 ports and USB 3.0 ports. Both types of ports support installing all types of USB devices (USB 1.0, USB 2.0, and USB 3.0), but may run at lower speeds in specific situations:

- USB 3.0 capable devices operate at USB 2.0 speeds when installed in a USB 2.0 port.
- When the graphics server blade is configured for UEFI Boot Mode, Hewlett Packard Enterprise provides legacy USB support in the pre-boot environment prior to the operating system loading for USB 1.0, USB 2.0 , and USB 3.0 speeds.
- When the graphics server blade is configured for Legacy BIOS Boot Mode, Hewlett Packard Enterprise provides legacy USB support in the pre-boot environment prior to the operating system loading for USB 1.0 and USB 2.0 speeds. While USB 3.0 ports can be used with all devices in

Legacy BIOS Boot Mode, they are not available at USB 3.0 speeds in the pre-boot environment. Standard USB support (USB support from within the operating system) is provided by the OS through the appropriate USB device drivers. Support for USB 3.0 varies by operating system.

For maximum compatibility of USB 3.0 devices with all operating systems, Hewlett Packard Enterprise provides a configuration setting for USB 3.0 Mode. Auto is the default setting. This setting impacts USB 3.0 devices when connected to USB 3.0 ports in the following manner:

- **Auto (default)**—If configured in Auto Mode, USB 3.0 capable devices operate at USB 2.0 speeds in the pre-boot environment and during boot. When a USB 3.0 capable OS USB driver loads, USB 3.0 devices transition to USB 3.0 speeds. This mode provides compatibility with operating systems that do not support USB 3.0 while still allowing USB 3.0 devices to operate at USB 3.0 speeds with state-of-the art operating systems.
- **Enabled**—If Enabled, USB 3.0 capable devices operate at USB 3.0 speeds at all times (including the pre-boot environment) when in UEFI Boot Mode. This mode should not be used with operating systems that do not support USB 3.0. If operating in Legacy Boot BIOS Mode, the USB 3.0 ports cannot function in the pre-boot environment and are not bootable.
- **Disabled**—If configured for Disabled, USB 3.0 capable devices function at USB 2.0 speeds at all times.

The pre-OS behavior of the USB ports is configurable in System Utilities, so that the user can change the default operation of the USB ports. For more information, see the *UEFI System Utilities User Guide for ProLiant Gen9 Servers* on the Hewlett Packard Enterprise website (<http://www.hpe.com/info/ProLiantUEFI/docs>).

## External USB functionality

Hewlett Packard Enterprise provides external USB support to enable local connection of USB devices for graphics server blade administration, configuration, and diagnostic procedures.

For additional security, external USB functionality can be disabled through USB options in UEFI System Utilities.

## Internal USB functionality

An internal USB connector is available for use with security key devices and USB drive keys. This solution provides for use of a permanent USB key installed in the internal connector, avoiding physical access to secure data.

## HPE Smart Storage Administrator

The HPE SSA is a configuration and management tool for HPE Smart Array controllers. Starting with ProLiant Gen8 servers, HPE SSA replaces ACU with an enhanced GUI and additional configuration features.

The HPE SSA exists in three interface formats: the HPE SSA GUI, the HPE SSA CLI, and HPE SSA Scripting. Although all formats provide support for configuration tasks, some of the advanced tasks are available in only one format.

Some HPE SSA features include the following:

- Supports online array capacity expansion, logical drive extension, assignment of online spares, and RAID or stripe size migration
- Provides diagnostic and SmartSSD Wear Gauge functionality on the Diagnostics tab
- For supported controllers, provides access to additional features.

For more information about HPE SSA, see the Hewlett Packard Enterprise website (<http://www.hpe.com/support/ssa>).

# Automatic Server Recovery

ASR is a feature that causes the system to restart when a catastrophic operating system error occurs, such as a blue screen, ABEND (does not apply to HPE ProLiant DL980 Servers), or panic. A system fail-safe timer, the ASR timer, starts when the System Management driver, also known as the Health Driver, is loaded. When the operating system is functioning properly, the system periodically resets the timer. However, when the operating system fails, the timer expires and restarts the server.


ASR increases server availability by restarting the server within a specified time after a system hang. At the same time, the SIM console notifies you by sending a message to a designated pager number that ASR has restarted the system. You can disable ASR from the System Management Homepage or through RBSU.

# Cabling


## Cabling resources

Cabling configurations and requirements vary depending on the product and installed options. For more information about product features, specifications, options, configurations, and compatibility, see the product QuickSpecs on the Hewlett Packard Enterprise website (<http://www.hpe.com/info/qs>).

## HPE Smart Storage Battery cabling

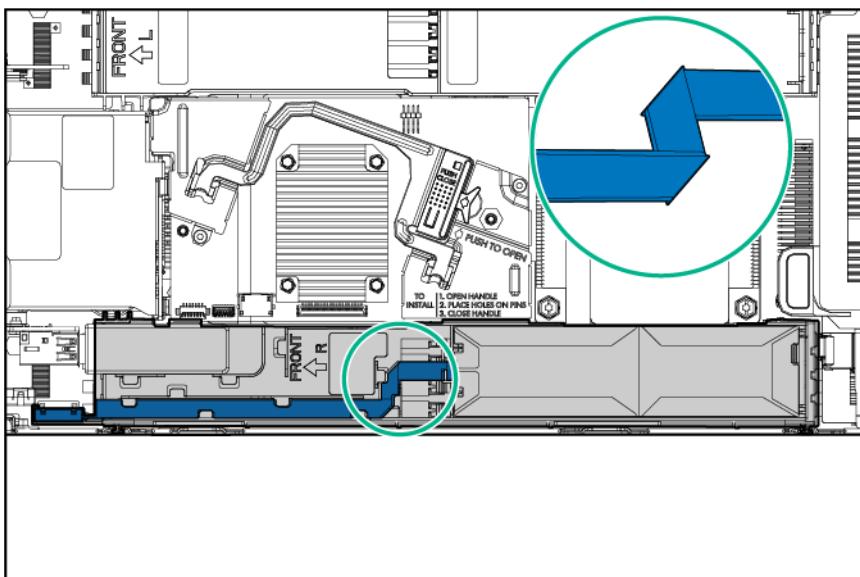

## Direct connect SATA cabling

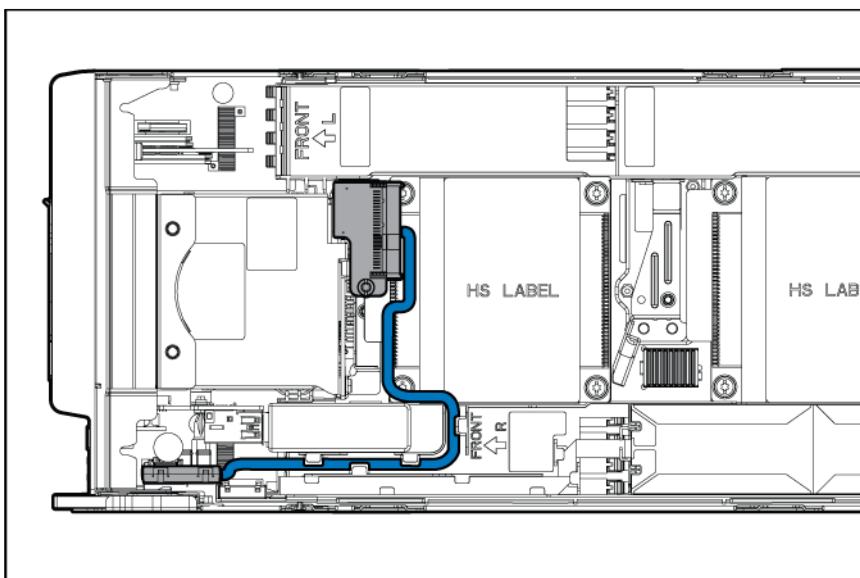

# Using the HPE c-Class Blade SUV Cable

The c-Class Blade SUV Cable enables the user to perform graphics server blade administration, configuration, and diagnostic procedures by connecting video and USB devices directly to the graphics server blade. For SUV cable connectors, see "SUV cable connectors (on page 94)."

## Connecting locally to a server blade with video and USB devices

Use the SUV cable to connect a monitor and any of the following USB devices:

- USB hub
- USB keyboard
- USB mouse
- USB CD/DVD-ROM drive

Numerous configurations are possible. This section offers two possible configurations. For more information, see "USB support (on page 77)."

The USB connectors on the SUV cable do not support devices that require greater than a 500mA power source.

## Accessing a server blade with local KVM


For this configuration, a USB hub is not necessary. To connect additional devices, use a USB hub.



**CAUTION:** Before disconnecting the SUV cable from the connector, always squeeze the release buttons on the sides of the connector. Failure to do so can result in damage to the equipment.

1. Open the serial label pull tab and connect the c-Class Blade SUV Cable to the graphics server blade.
2. Connect the video connector to a monitor.
3. Connect a USB mouse to one USB connector.

4. Connect a USB keyboard to the second USB connector.

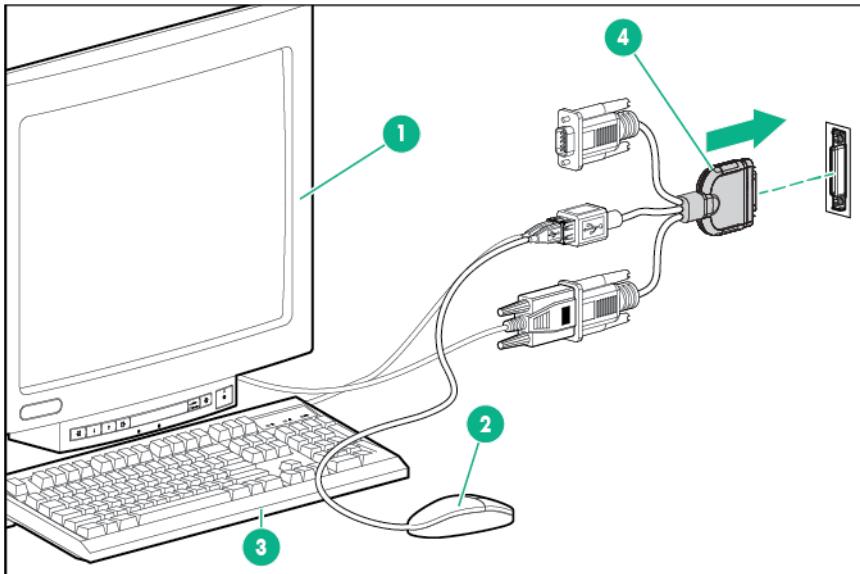

Item	Description
1	Monitor
2	USB mouse
3	USB keyboard
4	c-Class Blade SUV Cable


## Accessing local media devices

Use the following configuration when configuring a graphics server blade or loading software updates and patches from a USB CD/DVD-ROM.

Use a USB hub when connecting a USB CD-ROM drive to the graphics server blade. The USB connectors on the SUV cable do not support devices that require greater than a 500mA power source. The USB hub provides additional connections and the power required to support USB keys or external drives that require more than 500mA at 5V.

1. Open the serial label pull tab and connect the c-Class Blade SUV cable to the graphics server blade.
2. Connect the video connector to a monitor.
3. Connect a USB hub to one USB connector.
4. Connect the following to the USB hub:
  - o USB CD/DVD-ROM drive
  - o USB keyboard

- o USB mouse

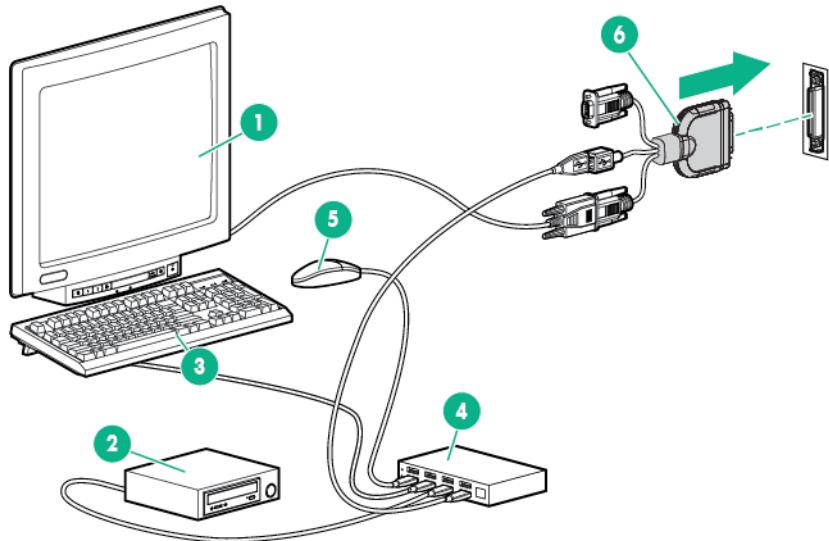

Item	Description
1	Monitor
2	USB CD/DVD-ROM drive
3	USB keyboard
4	USB hub
5	USB mouse
6	c-Class Blade SUV Cable

# Troubleshooting

## Troubleshooting resources

The *HPE ProLiant Gen9 Troubleshooting Guide, Volume I: Troubleshooting* provides procedures for resolving common problems and comprehensive courses of action for fault isolation and identification, issue resolution, and software maintenance on ProLiant servers and server blades. To view the guide, select a language:


- English ([http://www.hpe.com/support/Gen9\\_TSG\\_en](http://www.hpe.com/support/Gen9_TSG_en))
- French ([http://www.hpe.com/support/Gen9\\_TSG\\_fr](http://www.hpe.com/support/Gen9_TSG_fr))
- Spanish ([http://www.hpe.com/support/Gen9\\_TSG\\_es](http://www.hpe.com/support/Gen9_TSG_es))
- German ([http://www.hpe.com/support/Gen9\\_TSG\\_de](http://www.hpe.com/support/Gen9_TSG_de))
- Japanese ([http://www.hpe.com/support/Gen9\\_TSG\\_ja](http://www.hpe.com/support/Gen9_TSG_ja))
- Simplified Chinese ([http://www.hpe.com/support/Gen9\\_TSG\\_zh\\_cn](http://www.hpe.com/support/Gen9_TSG_zh_cn))

The *HPE ProLiant Gen9 Troubleshooting Guide, Volume II: Error Messages* provides a list of error messages and information to assist with interpreting and resolving error messages on ProLiant servers and server blades. To view the guide, select a language:

- English ([http://www.hpe.com/support/Gen9\\_EMG\\_en](http://www.hpe.com/support/Gen9_EMG_en))
- French ([http://www.hpe.com/support/Gen9\\_EMG\\_fr](http://www.hpe.com/support/Gen9_EMG_fr))
- Spanish ([http://www.hpe.com/support/Gen9\\_EMG\\_es](http://www.hpe.com/support/Gen9_EMG_es))
- German ([http://www.hpe.com/support/Gen9\\_EMG\\_de](http://www.hpe.com/support/Gen9_EMG_de))
- Japanese ([http://www.hpe.com/support/Gen9\\_EMG\\_ja](http://www.hpe.com/support/Gen9_EMG_ja))
- Simplified Chinese ([http://www.hpe.com/support/Gen9\\_EMG\\_zh\\_cn](http://www.hpe.com/support/Gen9_EMG_zh_cn))

# Component identification


## Front panel components (graphics server blade)

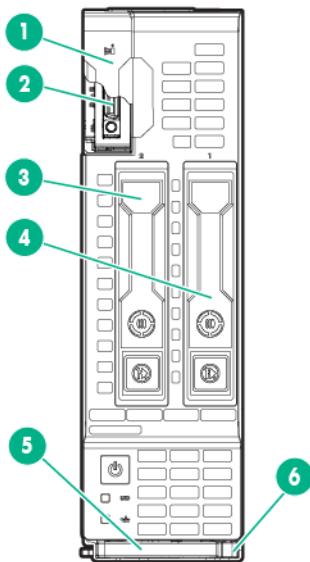

Item	Description
1	Serial label pull tab
2	HPE c-Class Blade SUV connector* (behind the serial label pull tab)
3	Drive bay 2
4	Drive bay 1
5	Server blade release lever
6	Server blade release button

\*The SUV connector and the c-Class Blade SUV Cable are used for some graphics server blade configuration and diagnostic procedures.


# Front panel components (graphics server blade with expansion blade)

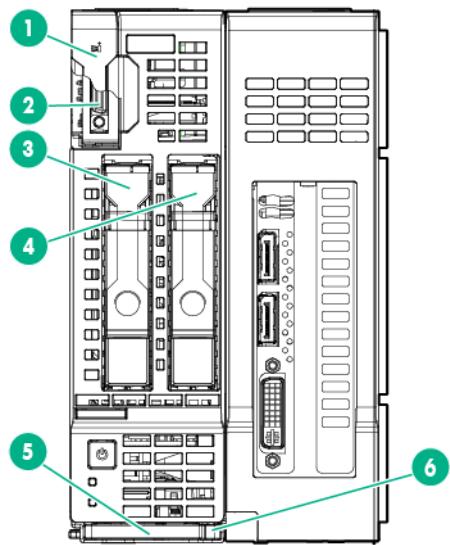

Item	Description
1	Serial label pull tab
2	c-Class Blade SUV connector* (behind the serial label pull tab)
3	Drive bay 2
4	Drive bay 1
5	Server blade release lever
6	Server blade release button

\* The SUV connector and the c-Class SUV Cable are used for some server blade configuration and diagnostic procedures.


# Front panel LEDs and buttons (graphics server blade)

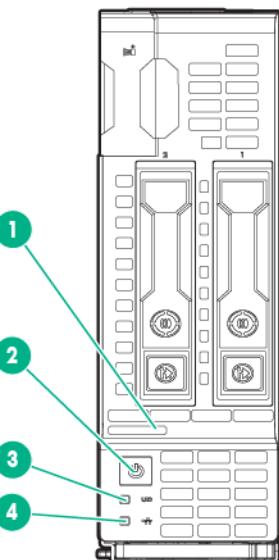

Item	Description	Status
1	Health status LED bar*	Solid Green = Normal (System is powered on) Flashing Green = Power On/Standby button service is being initialized Flashing Amber = Degraded condition Flashing Red = Critical condition Off = Normal (System is in standby)
2	Power On/Standby button and system power LED*	Solid green = System on Flashing green (1 Hz/cycle per sec) = Performing power on sequence Solid amber = System in standby Off = No power present**
3	UID button/LED*	Solid blue = Activated Flashing blue: <ul style="list-style-type: none"> <li>• 1 Hz/cycle per sec = Remote management or firmware upgrade in progress</li> <li>• 4 Hz/cycle per sec = iLO manual reboot sequence initiated</li> <li>• 8 Hz/cycle per sec = iLO manual reboot sequence in progress</li> </ul> Off = Deactivated
4	NIC activity LED*	Solid green = Link to network Flashing green (1 Hz/cycle per sec) = Network active Off = No network activity

\*When all four LEDs described in this table flash simultaneously, a power fault has occurred. For more information, see "Front panel LED power fault codes (on page 88)."\*\*Facility power is not present, power cord is not attached, no power supplies are installed, power supply failure has occurred, or the power button cable is disconnected.

# Front panel LEDs and buttons (graphics server blade with expansion blade)

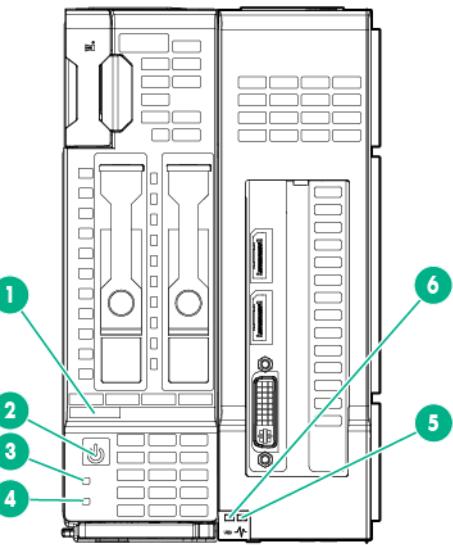

Item	Description	Status
1	Health status LED bar	Solid Green = Normal (System is powered on.) Flashing Green = Power On/Standby button service is being initialized. Flashing Amber = Degraded condition Flashing Red = Critical condition Off = Normal (System is in standby.)
2	Power On/Standby button and system power LED	Solid Green = System is powered on. Flashing Green = System is waiting to power on; Power On/Standby button is pressed. Solid Amber = System is in standby; Power On/Standby button service is initialized. Off and the Health Status LED bar is off = The system has no power. Off and the Health Status LED bar is flashing green = The Power On/Standby button service is being initialized.
3	UID LED	Solid Blue = Identified Flashing Blue = Active remote management Off = No active remote management
4	FlexibleLOM LED	Green = Network linked Flashing Green = Network activity Off = No link or activity
5	Expansion Health status LED bar	Solid Green = Normal (System is powered on.) Flashing Green = Power On/Standby button service is being initialized. Flashing Amber = Degraded condition Flashing Red = Critical condition Off = Normal (System is in standby.)
6	Expansion UID LED	Solid Blue = Identified Flashing Blue = Active remote management Off = No active remote management

## Front panel LED power fault codes

The following table provides a list of power fault codes, and the subsystems that are affected. Not all power faults are used by all graphics server blades.

Subsystem	Front panel LED behavior
System board	1 flash
Processor	2 flashes
Memory	3 flashes
Riser board PCIe slots	4 flashes
FlexibleLOM	5 flashes
Removable HPE Flexible Smart Array controller/Smart SAS HBA controller	6 flashes
System board PCIe slots	7 flashes
Power backplane or storage backplane	8 flashes
Power supply	9 flashes


For more information, see "Front panel LEDs and buttons ("Front panel LEDs and buttons (graphics server blade)" on page 87)."

## Serial label pull tab information

The serial label pull tab is located on the front panel of the graphics server blade. To locate the serial label pull tab, see "Front panel components." The serial label pull tab provides the following information:


- Product serial number
- iLO information
- QR code that points to mobile-friendly documentation

## Drive numbering

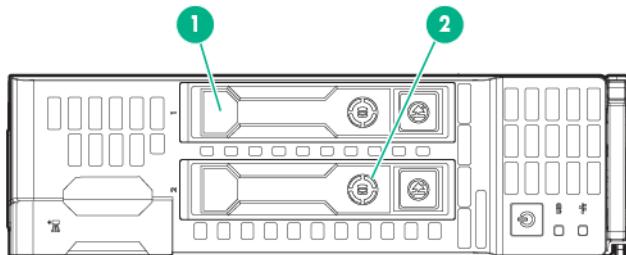


Item	Description
1	Drive bay 1
2	Drive bay 2

# Hot-plug drive LED definitions

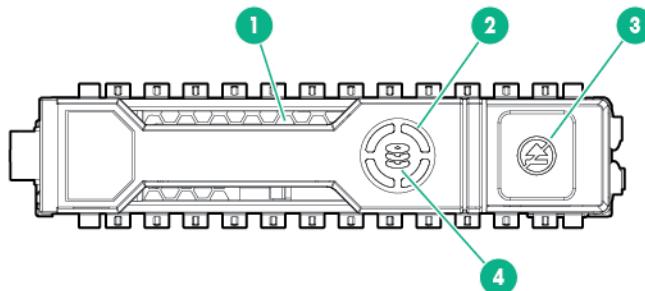

Item	LED	Status	Definition
1	Locate	Solid blue	The drive is being identified by a host application.
		Flashing blue	The drive carrier firmware is being updated or requires an update.
2	Activity ring	Rotating green	Drive activity
		Off	No drive activity
3	Do not remove	Solid white	Do not remove the drive. Removing the drive causes one or more of the logical drives to fail.
		Off	Removing the drive does not cause a logical drive to fail.
4	Drive status	Solid green	The drive is a member of one or more logical drives.
		Flashing green	The drive is rebuilding or performing a RAID migration, strip size migration, capacity expansion, or logical drive extension, or is erasing.
		Flashing amber/green	The drive is a member of one or more logical drives and predicts the drive will fail.
		Flashing amber	The drive is not configured and predicts the drive will fail.
		Solid amber	The drive has failed.
		Off	The drive is not configured by a RAID controller.

# System board components

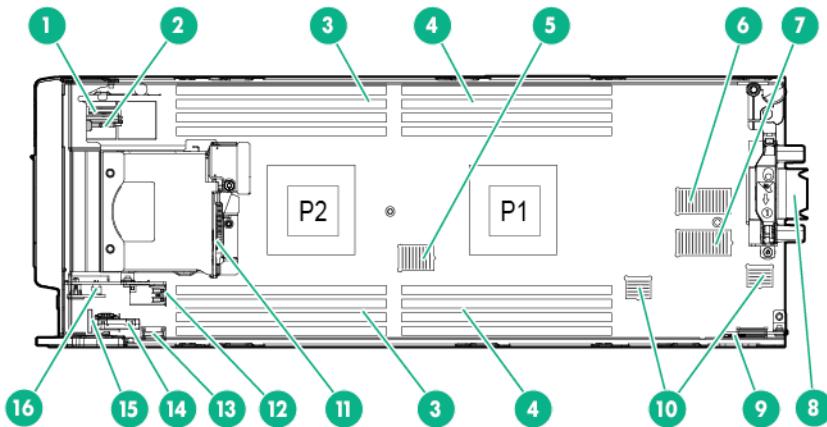

Item	Description
1	System battery
2	Solid state device connector
3	Processor 2 DIMM slots (8)
4	Processor 1 DIMM slots (8)
5	SAS controller connector
6	Mezzanine connector 1 (Type A mezzanine only)
7	Mezzanine connector 2 (Type A or Type B mezzanine)
8	Enclosure connector
9	MicroSD card slot
10	FlexibleLOM connectors (2)
11	Drive backplane
12	Internal USB connector
13	HPE Smart Storage Battery connector
14	Direct-connect SATA connector
15	System maintenance switch
16	TPM connector

The symbols correspond to the symbols located on the interconnect bays.

## System maintenance switch

Position	Default	Function
S1	Off	Off = iLO security is enabled. On = iLO security is disabled.
S2	Off	Off = System configuration can be changed. On = System configuration is locked.
S3	Off	Reserved
S4	Off	Reserved

<b>Position</b>	<b>Default</b>	<b>Function</b>
S5	Off	Off = Power-on password is enabled. On = Power-on password is disabled.
S6	Off	Off = No function. On = ROM reads system configuration as invalid.
S7	Off	Off = Set default boot mode to UEFI. On = Set default boot mode to legacy.
S8	—	Reserved
S9	Off	Off = BL460 On = WS460
S10	—	Reserved
S11	—	Reserved
S12	—	Reserved

To access the redundant ROM, set S1, S5, and S6 to on.

When the system maintenance switch position 6 is set to the On position, the system is prepared to erase all system configuration settings from both CMOS and NVRAM.



**CAUTION:** Clearing CMOS and/or NVRAM deletes configuration information. Be sure to properly configure the server or data loss could occur.

## Mezzanine connector definitions


<b>Item</b>	<b>PCIe</b>
Mezzanine connector 1	x16, Type A mezzanine card only
Mezzanine connector 2*	x16, Type A or B mezzanine card

\*When installing a mezzanine option on mezzanine connector 2, processor 2 must be installed.

## DIMM slot locations


DIMM slots are numbered sequentially (1 through 8) for each processor. The supported AMP modes use the alpha assignments for population order, and the slot numbers designate the DIMM slot ID for spare replacement.

The arrow points to the front of the graphics server blade.

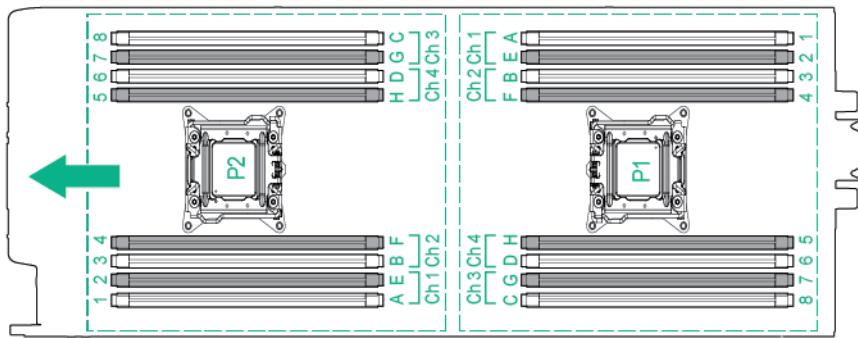

## DIMM identification

To determine DIMM characteristics, use the label attached to the DIMM and the following illustration and table.

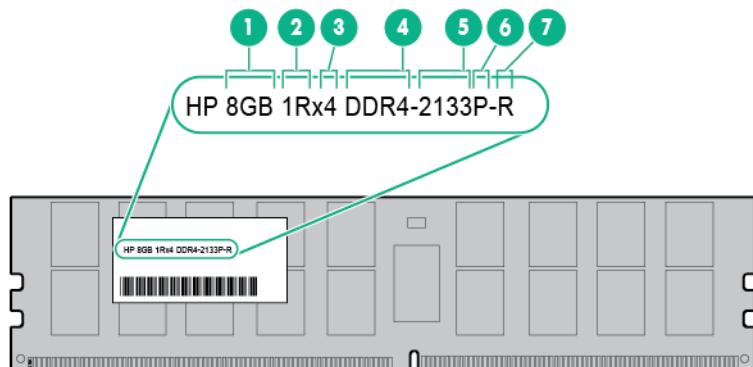

Item	Description	Definition
1	Capacity	8 GB 16 GB 32 GB
2	Rank	1R = Single-rank 2R = Dual-rank 4R = Quad-rank
3	Data width	x4 = 4-bit x8 = 8-bit
4	Memory generation	DDR4
5	Maximum memory speed	2133 MT/s
6	CAS latency	P=15


Item	Description	Definition
7	DIMM type	R = RDIMM (registered) L = LRDIMM (load reduced)

For more information about product features, specifications, options, configurations, and compatibility, see the product QuickSpecs on the Hewlett Packard Enterprise website (<http://www.hpe.com/info/qs>).

## SUV cable connectors



**CAUTION:** Before disconnecting the SUV cable from the connector, always squeeze the release buttons on the sides of the connector. Failure to do so can result in damage to the equipment.

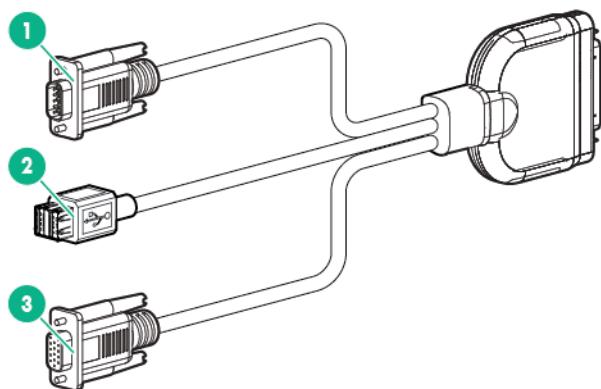

Item	Connector	Description
1	Serial	For trained personnel to connect a null modem serial cable and perform advanced diagnostic procedures
2	USB*	For connecting up to two USB devices
3	Video	For connecting a video monitor

\*The USB connectors on the SUV cable do not support devices that require greater than a 500mA power source.

# Specifications

## Environmental specifications

Specification	Value
<b>Temperature range*</b>	
Operating	10°C to 35°C (50°F to 95°F)
Non-operating	-30°C to 60°C (-22°F to 140°F)
<b>Relative humidity (noncondensing)**</b>	
Operating	10% to 90% @ 28°C (82.4°F)
Non-operating	5% to 95% @ 38.7°C (101.7°F)
<b>Altitude†</b>	
Operating	3050 m (10,000 ft)
Non-operating	9144 m (30,000 ft)

For information on ambient operating temperature support above 35°C, see the Hewlett Packard Enterprise website (<http://www.hpe.com/servers/ASHRAE>).

\* The following temperature conditions and limitations apply:

- All temperature ratings shown are for sea level.
- An altitude derating of 1°C per 304.8 m (1.8°F per 1,000 ft) up to 3048 m (10,000 ft) applies.
- No direct sunlight is allowed.
- The maximum permissible rate of change is 10°C/hr (18°F/hr).
- The type and number of options installed may reduce the upper temperature and humidity limits.
- Operating with a fan fault or above 30°C (86°F) may reduce system performance.

\*\* Storage maximum humidity of 95% is based on a maximum temperature of 45°C (113°F).

†Maximum storage altitude corresponds to a minimum pressure of 70 kPa (10.1 psia).

## Server blade specifications

### Standard model

Specification	Value
Height	180.70 mm (7.11 in)
Depth	517.51mm (20.37 in)
Width	55.37 mm (2.18 in)
Weight (maximum)	6.33 kg (13.96 lb)
Weight (minimum)	4.50 kg (9.90 lb)

### Graphics expansion model

Specification	Value
Height	180.70 mm (7.11 in)
Depth	517.51mm (20.37 in)
Width	107.34 mm (4.23 in)
Weight (maximum)	11.70 kg (25.74 lb)
Weight (minimum)	7.02 kg (15.44 lb)

# Acronyms and abbreviations

**ABEND**

abnormal end

**ACU**

Array Configuration Utility

**AMD**

Advanced Micro Devices

**ASR**

Automatic Server Recovery

**CSR**

Customer Self Repair

**FLB**

FlexibleLOM for blade servers

**FLR**

FlexibleLOM for rack servers

**GPU**

graphics processing unit

**HBA**

host bus adapter

**HPE SIM**

HPE Systems Insight Manager

**HPE SSA**

HPE Smart Storage Administrator

**iLO**

Integrated Lights-Out

**iLO 4**

Integrated Lights-Out 4

**IML**

Integrated Management Log

**KVM**

keyboard, video, and mouse

**LRDIMM**

load reduced dual in-line memory module

**NAND**

Not AND

**NVRAM**

nonvolatile memory

**PCIe**

Peripheral Component Interconnect Express

**POST**

Power-On Self Test

**RBSU**

ROM-Based Setup Utility

**RDIMM**

registered dual in-line memory module

**SAS**

serial attached SCSI

**SATA**

serial ATA

**SD**

Secure Digital

**SFF**

small form factor

**SPP**

Service Pack for ProLiant

**SSD**

solid-state drive

**SUV**

serial, USB, video

**TPM**

Trusted Platform Module

**UEFI**

Unified Extensible Firmware Interface

**UID**

unit identification

**USB**

universal serial bus

# Documentation feedback

Hewlett Packard Enterprise is committed to providing documentation that meets your needs. To help us improve the documentation, send any errors, suggestions, or comments to Documentation Feedback (<mailto:docsfeedback@hpe.com>). When submitting your feedback, include the document title, part number, edition, and publication date located on the front cover of the document. For online help content, include the product name, product version, help edition, and publication date located on the legal notices page.

# Index

## A

access panel 31  
Active Health System 73  
ACU (Array Configuration Utility) 78  
Array Configuration Utility (ACU) 78  
ASR (Automatic Server Recovery) 78  
Automatic Server Recovery (ASR) 78

## B

backplane, drive 55  
backplane, hard drive 55  
battery 53, 80, 90  
boot options 75, 76  
brackets, PCIe mezzanine pass-through 37  
buttons 84  
buttons, front panel 84

## C

Cable guard 80  
cable, SUV 93  
cables 80, 81, 82  
cabling 80, 81, 93  
cabling resources 80  
cabling, server 80  
Care Pack 77  
cautions 24  
Change Control 75, 78  
components 15, 24, 84  
components, front panel 84  
components, identification 15, 84  
components, mechanical 15  
connectors 84  
controller 50  
controller components 84  
CSR (customer self repair) 5  
customer self repair (CSR) 5

## D

definitions 89  
diagnosing problems 83  
diagnostic tools 73, 75, 76, 78  
diagnostics utility 76  
dimensions and weight 94  
DIMM baffles 51  
DIMM identification 92  
DIMM installation guidelines 92  
DIMM slot locations 90, 91

DIMMs 53, 90, 91  
documentation 98  
documentation feedback 98  
drive 33  
drive air baffle 32  
drive backplane 55  
drive bay numbering 88  
drive blank 32  
drive cabling 80  
drive cage backplane 55  
drive LEDs 89  
drive numbering 88  
drive, removing 33  
drives 89  
drives, determining status of 89  
drives, hot-plug 33

## E

electrical 24  
electrostatic discharge 24  
embedded diagnostics, UEFI 76  
embedded UEFI diagnostics 76  
enclosure connector 90  
enclosure connector cover 33, 90  
environmental specifications 94  
error messages 83  
expansion blade 30  
expansion blade PCIe card cage 28  
expansion blade, removing 26, 30  
external USB functionality 78

## F

features 84  
firmware upgrade utility, troubleshooting 83  
FlexibleLOM 49  
FlexibleLOM connectors 90  
FlexibleLOM LED 86  
foam gasket 27  
front bezel, expansion blade 29  
front panel buttons 86  
front panel components 84  
front panel LED power fault codes 87  
front panel LEDs 86, 87  
front panel/drive cage assembly 54  
front panel/hard drive cage assembly 54

## G

graphic card option 31, 42  
graphics expansion blade components 20

graphics expansion blade removal 31  
graphics expansion control cable 48  
grounding methods 24  
grounding requirements 24  
guidelines, troubleshooting 83

## H

hard drive backplane 55  
hard drive backplane connector 90  
hard drive blanks 32  
hard drive LEDs 89  
hard drives, determining status of 89  
hardware kit 33, 34  
health driver 78  
health LEDs 86  
health status LED bar 86  
heatsink 57  
heatsink blank 51  
Hewlett Packard Enterprise technical support 5  
hot-plug drive 33  
hot-plug drive, removing 33  
HP Trusted Platform Module option 72  
HPE Advanced Power Manager (HPE APM) 73  
HPE iLO 73  
HPE Insight Diagnostics 76, 77  
HPE Insight Diagnostics survey functionality 76, 77  
HPE Insight Online 77  
HPE Insight Remote Support software 77  
HPE ProLiant Gen9 power fault codes 87  
HPE ProLiant Pre-boot Health Summary 74  
HPE SIM (HPE Systems Insight Manager) 75, 76  
HPE Smart Storage Administrator (HPE SSA) 78  
HPE Smart Storage Battery 53, 80  
HPE SSA (HPE Smart Storage Administrator) 78  
HPE Systems Insight Manager (SIM) 75, 76

## I

identifying components 84  
identifying LEDs 84  
illustrated parts catalog 15  
iLO (Integrated Lights-Out) 73, 75  
iLO 4 (Integrated Lights-Out 4) 73  
IML (Integrated Management Log) 75  
Insight Diagnostics 76, 77  
installing NVIDIA GRID K2 I/O Plate 43  
installing NVIDIA Quadro 5000 42  
installing NVIDIA Quadro 6000 42  
Integrated Lights-Out (iLO) 73, 75  
Integrated Management Log (IML) 75  
Intelligent Provisioning 75, 76  
internal cables 80  
internal USB connector 77, 90  
internal USB functionality 78

## L

LED, health 86

LED, power button 86  
LED, system power 86  
LEDs 89  
LEDs, drive 89  
LEDs, front panel 89  
LEDs, hard drive 89  
LEDs, NIC 86  
LEDs, power fault 87  
LEDs, SAS drive 89  
LEDs, SAS hard drive 89  
LEDs, troubleshooting 83  
LEDs, unit identification (UID) 86  
legacy USB support 77  
local KVM, accessing a server blade with 81  
local media devices, accessing 82

## M

maintenance 24  
management tools 73  
mechanical components 15  
memory 91, 92  
mezzanine assembly 34  
mezzanine board connectors 90  
mezzanine boards 35  
mezzanine card 35  
mezzanine connector definitions 91  
mezzanine connectors 90, 91  
mezzanine pass-through board 37  
mezzanine-pass-through brackets 37  
MXM graphics mezzanine heatsink 40  
MXM graphics mezzanine module 39

## N

NIC (network interface card) 90  
NVIDIA Grid K2 I/O Plate 43

## O

operating system crash 78  
operating systems supported 77

## P

part numbers 15  
pass-through board 37  
PCIe cage 31  
PCIe mezzanine pass-through board 37  
PCIe mezzanine-pass-through brackets 37  
POST error messages 83  
power button LED 86  
power fault 87  
Power On/Standy button 86  
power protection specifications 94  
power supplies, removing 72  
powering down 25  
preparation procedures 25  
problem diagnosis 73, 83

processor socket 90

processors 90

Product ID 76

## Q

QuickSpecs 73, 80, 92

## R

RAID configuration 78

re-entering the server serial number 76

removal and replacement procedures 24

removing a drive 33

removing the access panel 31

removing the system board 63

replacement procedures 24

replacing the system board 63

required tools 24

retaining block 29

ROM legacy USB support 77

ROM-Based Setup Utility (RBSU) 75

## S

safety considerations 24

safety information 24, 25

SAS controller 50

SAS drives 15, 89

serial connector 93

serial label pull tab 88

serial number 76

server blade components 84

server blade release lever 68

server blade specifications 94

server specifications 94

Service Pack for ProLiant 76, 77

software 74

solid-state drive, removing 33

specifications 94

specifications, environmental 94

specifications, server blade 94

SPP 76

static electricity 24

supported servers 83

supported targets 83

SUV cable 93

SUV connector 81, 82, 93

symbols on equipment 25

system board battery 56, 90

system board components 90

system board replacement 63

system components 84

system maintenance switch 90

system power LED 86

## T

technical support 5

tools 24

Torx screwdriver 24

TPM (Trusted Platform Module) 72

troubleshooting 83

troubleshooting resources 73, 80, 83, 84, 94

troubleshooting, firmware upgrade utility 83

Trusted Platform Module (TPM) 72

## U

UEFI System Utilities 75

USB (universal serial bus) 77, 81

USB connector 93

USB support 77

utilities 73, 75

## V

video connector 93

video connector cabling 81

## W

warnings 24

warranty 5

weight 94